



Southeast Toyota Distributors, LLC

## Southeast Toyota Distributors, LLC Accessory Installation Instructions

### 2020 4RUNNER TOUCH KEYPAD (TKP)

Year & Model:	2020 4RUNNER
Part Number:	00016-00506
Accessory Code:	KP1010
PIO / DIO:	PIO & DIO
Business Partner:	J56

### Conflicts

Note: None

### General Applicability

Fits Models:	
1.	All Models
2.	
3.	

### Additional Items Required For Installation

Item#	Description:
1	N/A
2	

### Sequence of Application

Item#	Accessory:
1	N/A
2	

#### **SPECIAL NOTE: Installation Sequences**

After TMS & Safety mandated preparatory steps have been taken, the installation sequence is the suggested method for completing the accessory installation. In some instances the suggested sequence is written for one associate to install & in others the sequence is given as part of a team accessory installation. Unless otherwise stated in the document, the associates may perform the installation steps in any order to make the installation as efficient as possible while maintaining consistent quality.

### Recommended Tools

<b>Safety Items</b>	
Safety Glasses	Safety Gloves
<b>Special Tools</b>	
Backhousing Alignment Tool	Windshield QC Scale
Temperature probe /Heat Gun	
<b>Installation Tools</b>	
Heat Source	For Temperatures under 50°F
Moulding Remover	Pliers
Ratchet/Driver	Side Cutters
Socket (10mm)	Torque Wrench (48 in*lbs)
Masking Tape	Small Flat Head (Taped)
Roller	Felt Block
Wire Fish Tool	
Padded Work Surface	Protective Blanket
<b>Special Chemicals</b>	
VPC Approved Cleaner	

### Legend

	<b>STOP:</b> Damage to the vehicle may occur. Do not proceed until process has been complied with.
	<b>OPERATOR SAFETY:</b> Use caution to avoid risk of injury.
	<b>CAUTION:</b> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	<b>TOOLS &amp; EQUIPMENT:</b> Used in figures calls out the specific tools and equipment recommended for this process.
	<b>REVISION MARK:</b> This mark highlights a change in installation with respect to previous issue.
	<b>SAFETY TORQUE:</b> This mark indicates that torque is related to safety.
	<b>REGULATORY MARK:</b> This mark indicates that the component is related to regulatory compliance.
	<b>VIDEO:</b> This image indicates a video to show a installation procedure, PIO Only.

Table of Contents

---

I.

Preparation.....

1-5

a.

Table of Contents.....

2

b.

Kit/Hardware & Wire Harness Bag Contents.....

3

c.

Parts for Installation.....

4

d.

Service & Warranty Information .....

5

II.

Procedures

a.

Battery Removal.....

6

b.

Vehicle Disassembly – Installation Process.....

7-35

III.

Re-install Battery.....

35

IV.

Function and Quality Checks.....

36-37

V.

Diagnostic / Block Diagrams & Connector Procedures.....

38-40

VI.

Warranty Statement.....

41-42




### Parts for Installation:

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation. These guidelines can be found in the “Accessory Installation Practices” document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, re-checking torque procedure, etc.).
- Vehicle Disassembly/ Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Item #	Quantity	Description
1.	1	TKP Overmold with Molex 5-pin Harness
2.	1	Keypad Button Graphic Sticker
3.	1	TKP Vehicle Harness
4.	3	RED Female T-Taps
5.	3	BLACK Female T-Taps
6.	6	Zip Ties 8"
7.	1	DLC Power & Ground Jumper
8.	1	User Manual
9.	1	Seat Headrest Hangtag

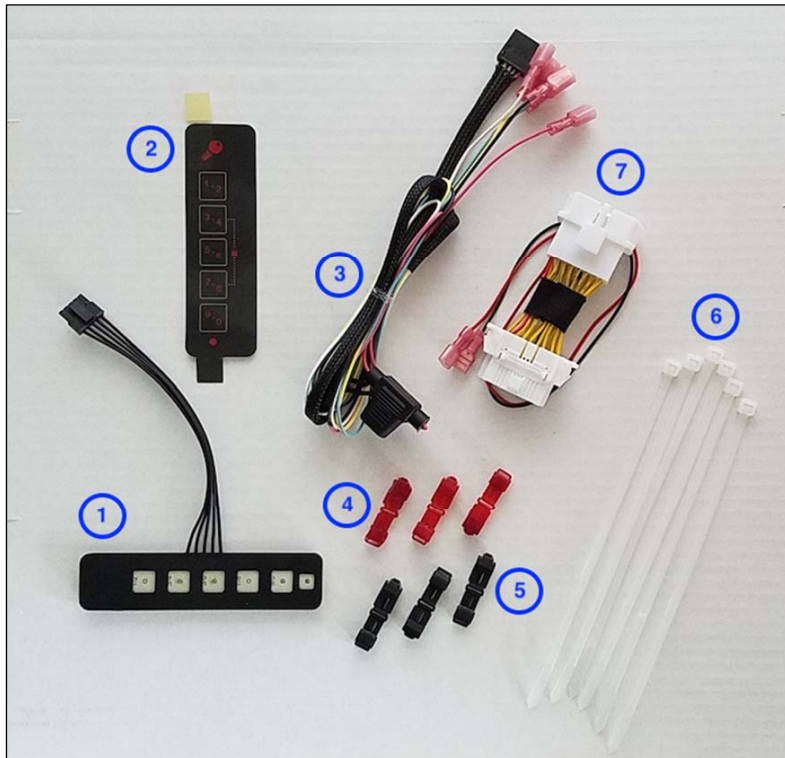



**Service & Warranty Information**

Image Key	Parts information		Warranty Information	
	Part Number	Description	Warranty Time	Labor Op. Code
N/A	00016-00506	Touch Keypad	N/A	N/A
A	00016-00505-01	TKP REPLMNT KEYPAD	0.5	ATK001
B	00016-00505-02	TKP WIRE HARNESS	0.5	AHAR05
C	00016-00555	DLC P&G JUMPER 16PIN	0.5	ATK001

Note: Replacement keypad (Item A) includes two stickers. Wire harness (Item B) includes zip ties and t-taps.

**Service & Warranty Information:**

If you are a dealer located outside of the Southeast Region, please contact the SET Accessory Warranty Department at (888) 851-2722 or email [Accessory.Warranty@SEToyota.com](mailto:Accessory.Warranty@SEToyota.com) for claim payment instructions.

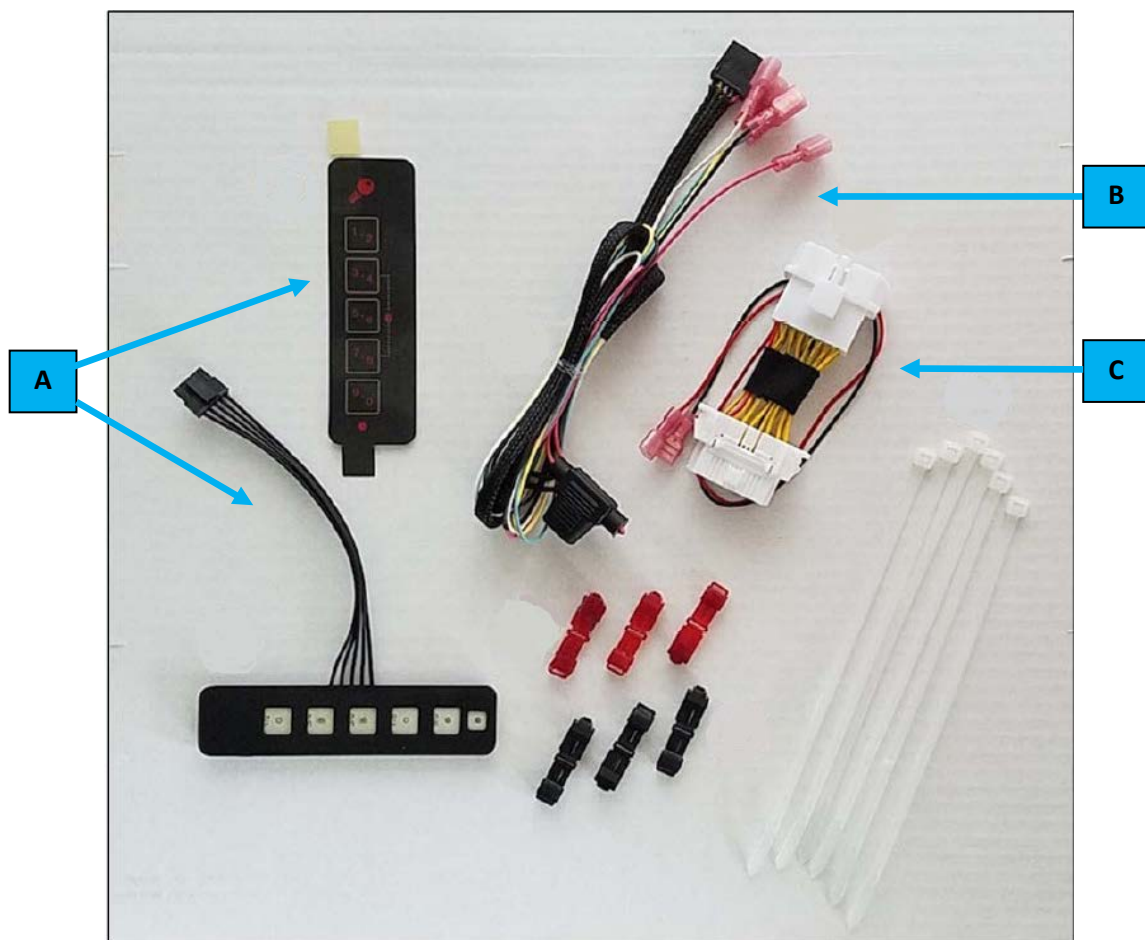
**Image:**



Figure 1-1

## BATTERY REMOVAL

Prepare for the Installation:

- The engine components and coolant may be hot.
- Check the kit for contents and any damage.
- Protect the fender.

Note: The battery is in the engine compartment. See Figure 1-1.



Figure 1-2



**Do not disconnect the terminal at the 12mm nut.**



Use 10mm socket.



- Remove the NEGATIVE (-) battery terminal by loosening the 10mm terminal nut before starting any disassembly. Figure 1.
- Place insulator over negative battery terminal.



**DO NOT touch the positive terminal.**



**Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.**

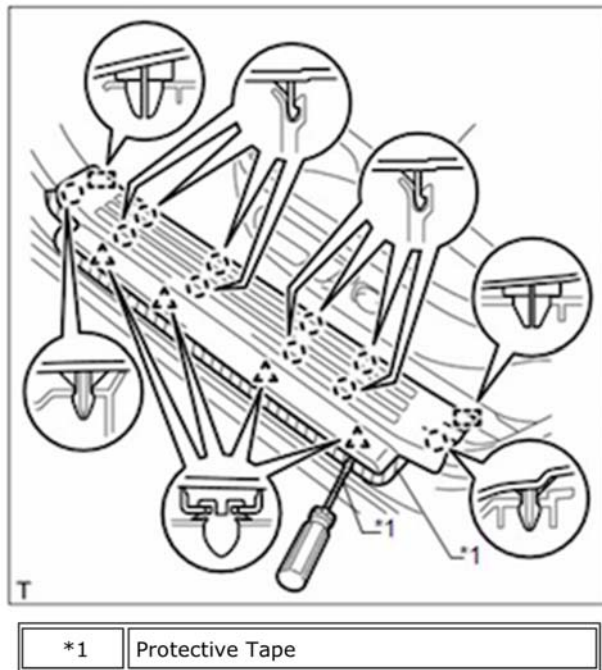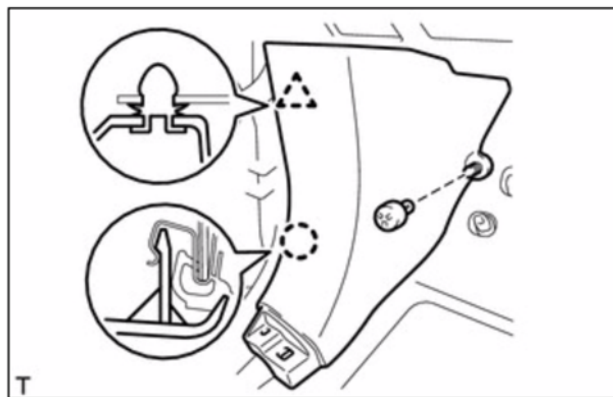**Figure 2****Figure 3****VEHICLE DISASSEMBLY-  
INSTALLATION PROCESS**

**Place a protective blanket in the front foot-well area.**

**3. REMOVE DOOR SCUFF PLATE  
ASSEMBLY LH**

(a) Put protective tape around the door scuff plate assembly LH.

(b) Using a screwdriver, detach the 4 clips, 10 claws and 2 guides to remove the door scuff plate assembly LH. Figure 2.

**HINT:**

**Tape the screwdriver tip before use.**

**4. REMOVE COWL SIDE TRIM BOARD  
LH**

(a) Remove the cap nut.


(b) Detach the clip and claw to remove the cowl side trim board LH. Figure 3.



**Figure 4**

**5. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

(a) Remove the front door opening trim weatherstrip LH along the A-pillar. Figure 4.

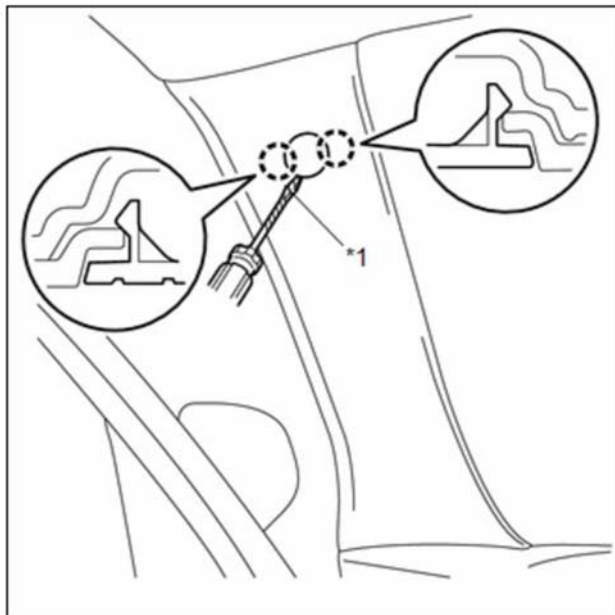


**Figure 5**

**6. REMOVE FRONT PILLAR GARNISH LH**

(a) Using a screwdriver, detach the 2 claws to remove the No. 1 front pillar garnish cover LH. Figure 5.

**HINT:**


Tape the screwdriver tip before use.

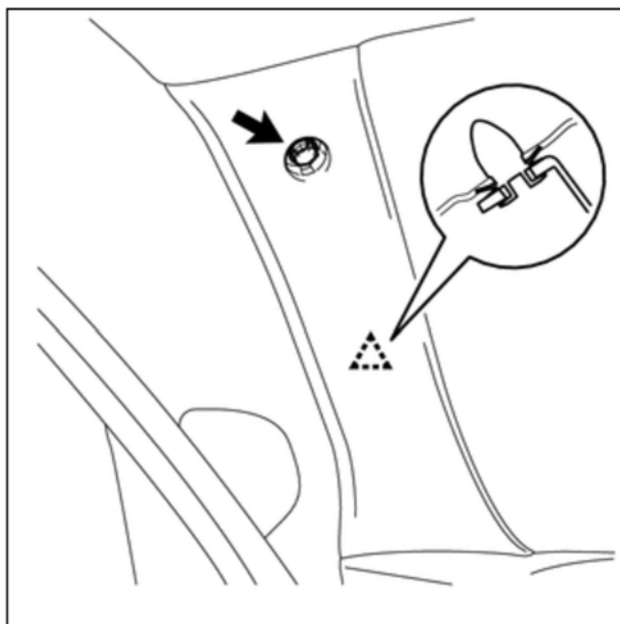

**Figure 6**

(b) Remove the bolt.

(c) Detach the clip. Figure 6.

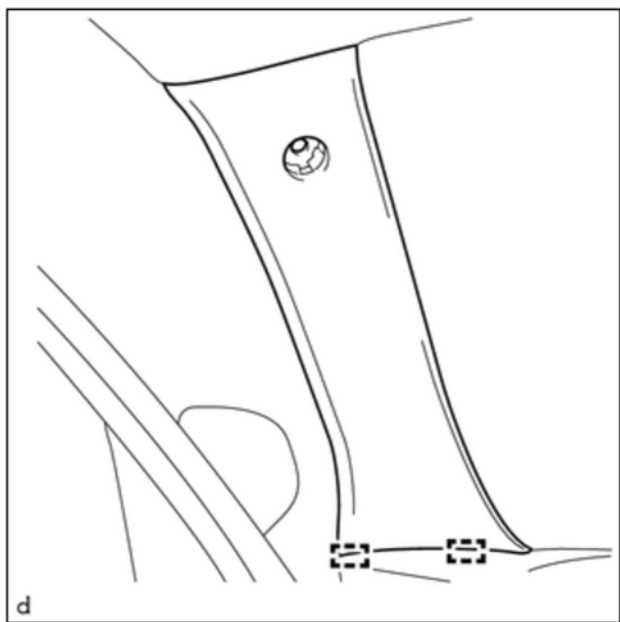

**Figure 7**

(d) Detach the 2 guides to remove the front pillar garnish LH. Figure 7.

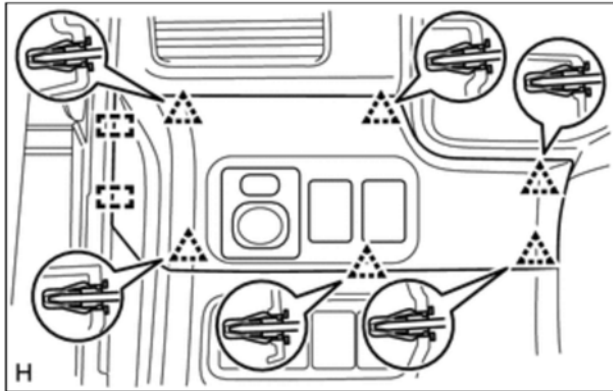


Figure 8

## 7. OPTIONAL STEP - REMOVE NO. 2 SWITCH HOLE BASE

- (a) Detach the 6 clips and 2 guides. Figure 8.
- (b) Disconnect each connector and remove the No. 2 switch hole base.

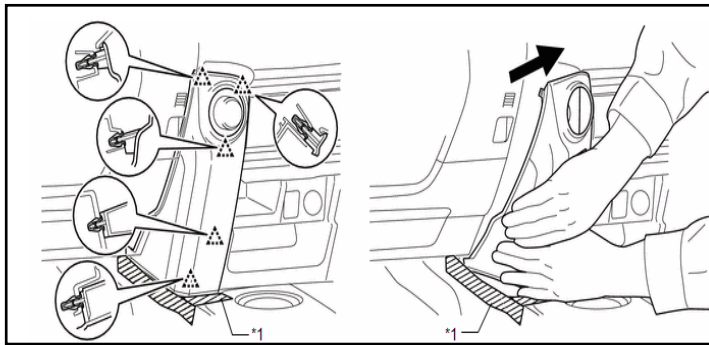


Figure 9a

## 8. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

- (a) Put protective tape around the No. 1 instrument cluster finish panel garnish. See Figure 9a.

- (b) Grip the No. 1 instrument cluster finish panel garnish and pull it diagonally upward toward the rear to detach the 5 clips and remove the No. 1 instrument cluster finish panel garnish. See Figure 9a.

- (c) Using a screwdriver, detach the 2 claws to open the cover. Figure 9b.

**HINT:**  
Tape the screwdriver tip before use.

- (d) Remove the 2 bolts.


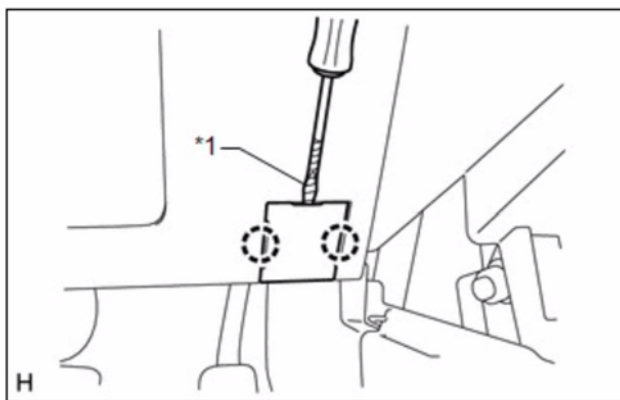


Figure 9b



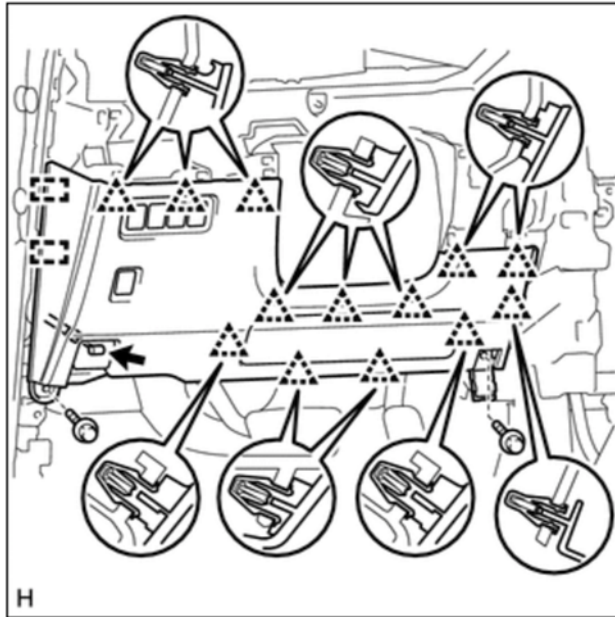


**Figure 10**

**9. REMOVE LOWER INSTRUMENT  
PANEL FINISH PANEL SUB-  
ASSEMBLY**

- (a) Detach the 13 clips and 2 guides.
- (b) Disconnect each connector and hood lock control cable assembly and remove the lower instrument panel finish panel sub-assembly. Figure 10.

### BUTTON STICKER & BACKHOUSING APPEARANCE STANDARDS

#	Inspection Item	OK Criteria	Photo Reference
1	Window Label Vertical Alignment	<ul style="list-style-type: none"> <li>+/- 5mm from target</li> </ul>	A
2	Window Label Horizontal Alignment	<ul style="list-style-type: none"> <li>+/- 2mm from target</li> <li>No light leakage between Label &amp; Solid Black Out.</li> <li>Dot Matrix +/- 0.5mm</li> </ul>	A
3	LPO Vertical & Horizontal Alignment	<ul style="list-style-type: none"> <li>+/- 0.5mm from target</li> </ul>	B
4	Window Label Visual Defects	<ul style="list-style-type: none"> <li>Viewed from a customer viewing angle of 18 inches.</li> </ul>	C, D, E, F, G
5	Visual Defect White Blotch Glue Wet Out	<ul style="list-style-type: none"> <li>3 PCS +/- 0.5mm</li> </ul>	
6	Dust/Dirt/Seed	<ul style="list-style-type: none"> <li>1 PCS +/- 1mm</li> </ul>	
7	Ghosting	<ul style="list-style-type: none"> <li>Contrasting Color 1PCS +/- 1mm</li> <li>Non-Contrasting Up to the width of the label.</li> </ul>	
<b>Note: Inspection Items 5, 6, and 7 Can Not be combined on one label.</b>			

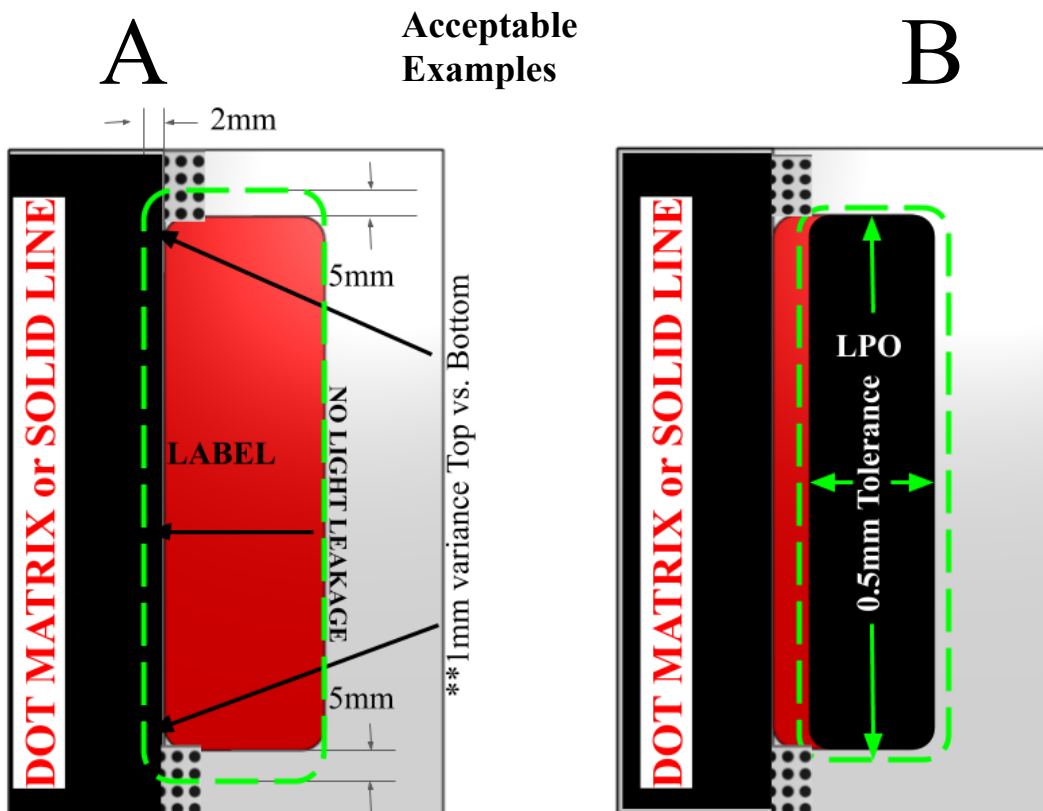

### Unacceptable Examples


---

**C**

*C: Adhesive Marring*

**D**

*D: Adhesive Tack Point*

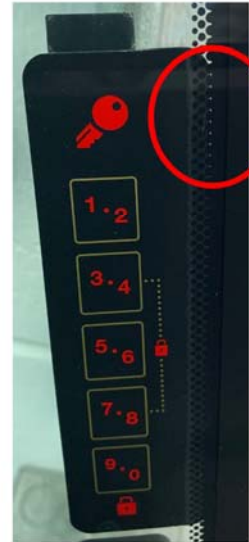**E**

*E: Light Leakage*

**F**

*F: Vertical Backhousing Alignment*

**G**

*G: Label Edge Imperfection*



**Figure 11\***



**Note:** Accessory and vehicle windshield surface must be at least 50°F at time of installation.



**Use magnetic Windshield QC Scale.**



**Clean the roof panel directly above the windshield to prevent scratches from the magnetic Windshield QC Scale.**

#### 10. LOCATE THE TKP BACKHOUSING TOP EDGE ON WINDSHIELD

- (a) Place the magnetic Windshield QC Scale on the windshield next to the A-pillar as shown. Figure 11.
- (b) Locate the magnetic Windshield QC Scale on the windshield by aligning the Windshield 3" line at the top edge of the windshield.




**Figure 12\***

(c) Locate the top edge of the TKP Backhousing on the windshield at the indicated 4RUNNER 13" line. Fig. 12.

**Hint:**

The magnetic Windshield QC Scale is printed on both sides and can be seen from inside the vehicle.

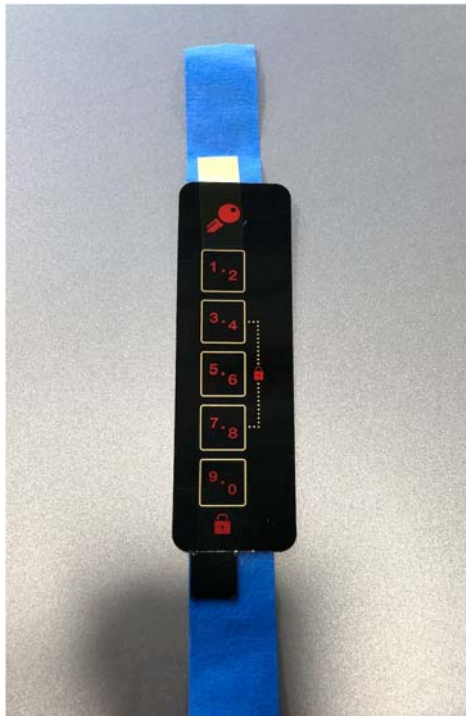

**Figure 13**

**11. AFFIX THE KEYPAD BUTTON GRAPHIC STICKER TO THE INSIDE OF THE WINDSHIELD**



Use Blue Masking Tape.



**Make sure the inside windshield mounting location for the TKP Backhousing is clean.**



**Refer to page 12 and 13 for QA Standards before affixing the Graphic Sticker to the inside of the windshield.**

(a) Apply a strip of blue masking tape on to the backside of the Keypad Button Graphic Sticker. Figure 13.

(b) Using the YELLOW pull tab, uncover the top portion of adhesive on the graphic side of the Button Sticker.



### Key Pad Placement



**Figure 14**

(c) Holding onto the blue masking tape, carefully align the top edge of the Keypad Button Graphic Sticker to the 4RUNNER 13" mark on the magnetic Windshield QC Scale. Figure 14.

(d) At the same time carefully align the left edge of the Button Sticker with the windshield blackout next to the A-pillar.

(e) Once properly positioned, tack the top edge of the Button Sticker to the windshield using light pressure.

(f) Using the YELLOW pull tab, remove the protective film completely from the graphic side of the Button Sticker.



**Use a Felt Block or wide Moulding Remover. Figure 15.**

(g) Smoothly & forcefully press the Moulding Remover down the length of Button Sticker.

**Hint:**

This can be done from the top or center of the Button Sticker.

**Figure 15**





**Figure 16**

(h) Make multiple passes over the Button Sticker to achieve maximum wet-out. Figure 16.

(i) Carefully press out any air bubbles or ghost marks using the Moulding Remover.

(j) Remove the strip of blue masking tape.



**Inspect any imperfections in the wet-out against the QC Acceptance Criteria. If Button Sticker does not meet criteria, remove Button Sticker and re-apply new one that meets specification.**

(k) Using the bottom BLACK pull tab, remove the protective film from the backside of the Button Sticker.

12. AFFIX THE TKP BACKHOUSING TO  
THE KEYPAD BUTTON GRAPHIC  
STICKER



Use the Backhousing Alignment tool.



**Keep the LED light surface of the TKP Back housing clean by only handling the sides.**

(a) Place the TKP Back housing into the Alignment Tool as shown. Figure 17.



**Insure the TKP Back housing is pressed securely into the Alignment Tool along the highlighted surfaces and held in place by the two lock tabs #1 & #2.**


**Hint:**

The TKP Backhousing can be held more securely by pinching the sides of the Alignment Tool together.

(b) Bend the Pigtail Harness back 90-degrees and hold it with your thumb as shown. Figure 17.

**Hint:**

It may be easier to route the pigtail harness under the factory harness along the A-pillar at this point.

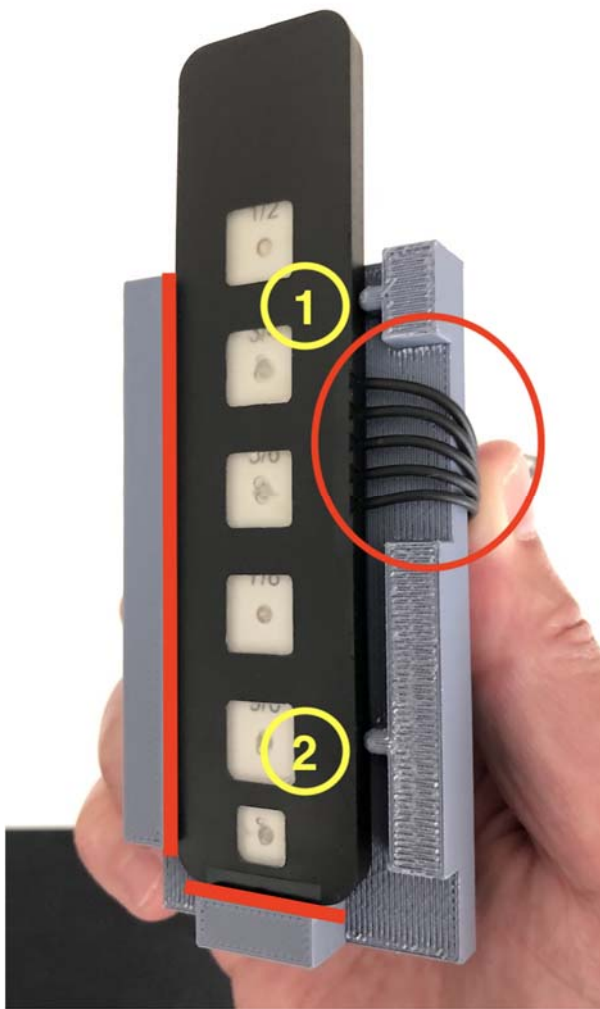

**Figure 17**



**Figure 18**

(c) Place the Alignment Tool & TKP Backhousing assembly against the windshield next to the Button Sticker to the lower RH side as shown. Figure 18.



**Keep the assembly pressed firmly against the windshield during the following steps.**

(d) From inside the vehicle, carefully slide the assembly LEFT towards the A-pillar until it stops against the long-side edge of the Button Sticker.

(e) Carefully slide the assembly UP until it stops against the bottom edge the Button Sticker.



**Visually check that the Back housing is aligned with the Button Sticker.**


(f) Press the top of the Back housing against the Button Sticker to release it from the Alignment Tool.

**Hint:**

At this point if necessary, you can still lift the Back housing from the Button Sticker and adjust the alignment manually.



**Inspect any misalignment of the Back housing against the QC Acceptance Criteria. If the back housing does not meet criteria it must be replaced. You CAN NOT make adjustments to Housing once its adhered to the Button Sticker.**

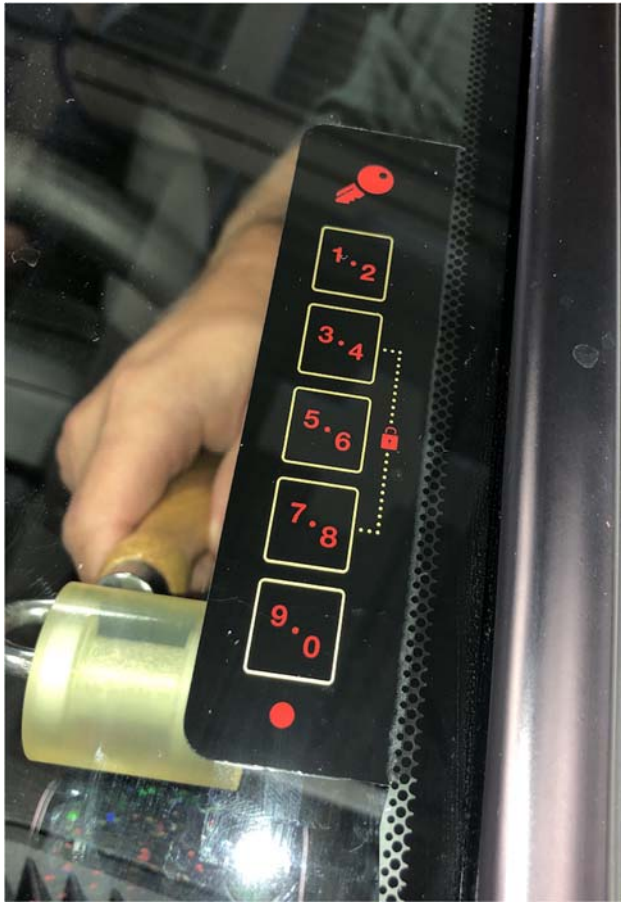

**Figure 19**

(g) Using your thumb, press at three or four points along the Backhousing against the Button Sticker to firmly set it.



**Do not press the Program Button.**




**Use the Roller.**

(h) Firmly press the Roller along the complete length of the Backhousing at least four (4) times to achieve maximum adhesion between the Backhousing and the Button Sticker. Figure 19.

T-TAP INSTALLATION

When installing the female T-Tap connectors, be sure the wire is located inside the wire channel of the female T-Tap connector before closing the connector over the wire with pliers.

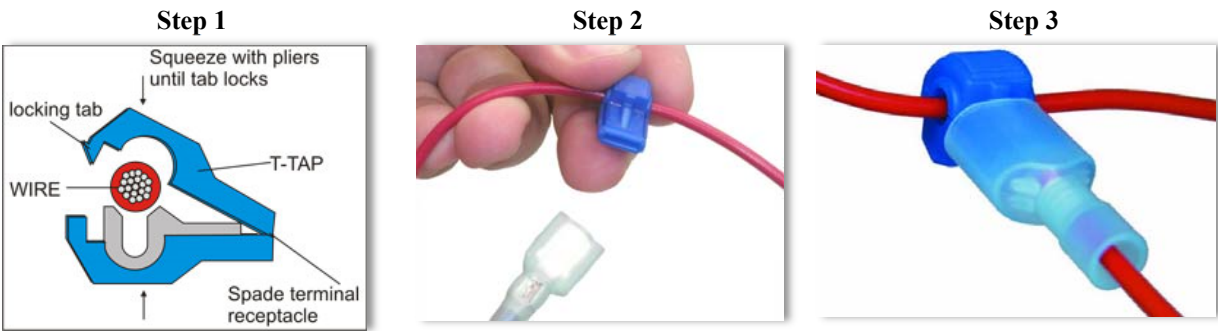


CONNECTOR IF2: Front Door LH Wire and Instrument Panel Wire (Cowl Side Panel LH)

Location: Lower driver’s side kick panel area

TKP HARNESS	VEHICLE	PIN	T-TAP
Light Blue - Lock	Gray	8	Red
White - Unlock	Light Green	9	Red

Front Door LH Wire and Instrument Panel Wire IF2 Black (12-pin)

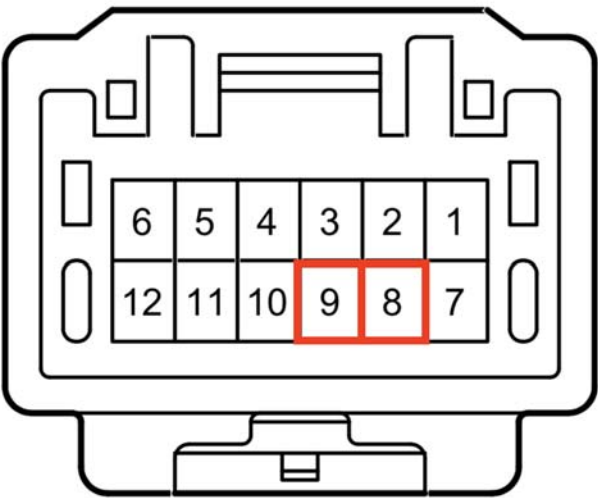

**CONNECTOR F4: Outer Mirror Switch Assembly (LH Dash Panel)**

Location: No. 2 switch hole base


**TKP HARNESS**  
Yellow - Ignition

**VEHICLE**  
White



**PIN**  
8

**T-TAP**  
Red

Outer Mirror Switch Assembly F4 White (10-pin)

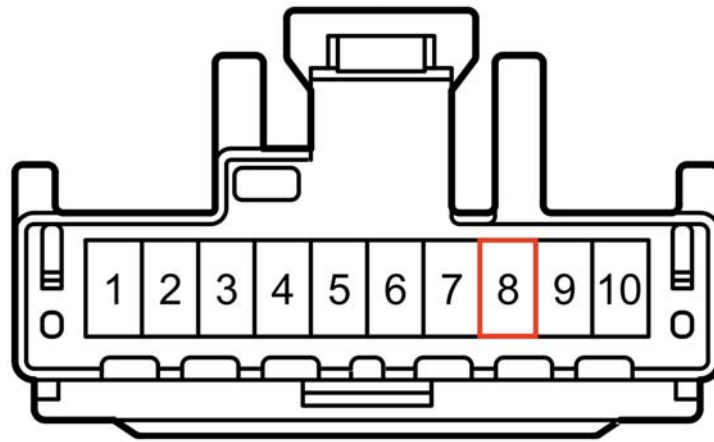


**Note:** Install the T-Taps in a staggered position on the wires. T-Taps should not be side-by-side nor same distance from the connector. There should be approximately at least one inch of wire remaining between the connector and the closest t-tap to the connector. See Examples 1 & 2.

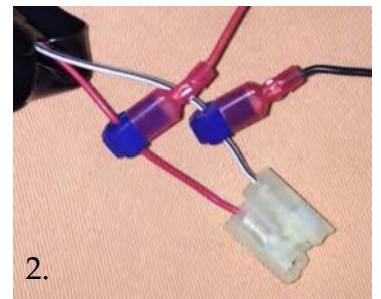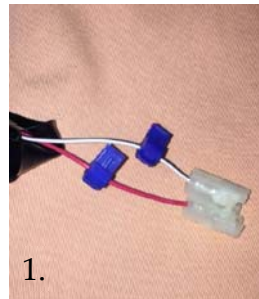




TKP VEHICLE HARNESS

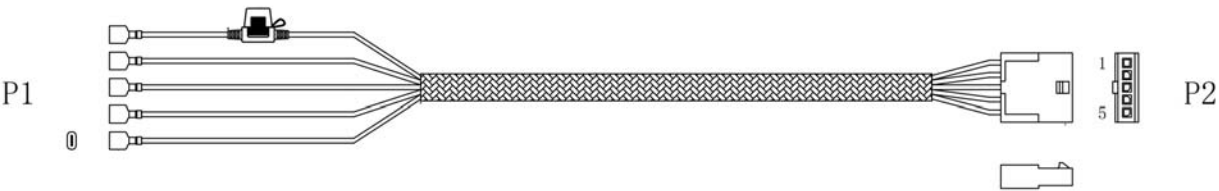


CONNECTOR P1 & P2: TKP Vehicle Harness

Male Blade Connector P1 RED (5x)

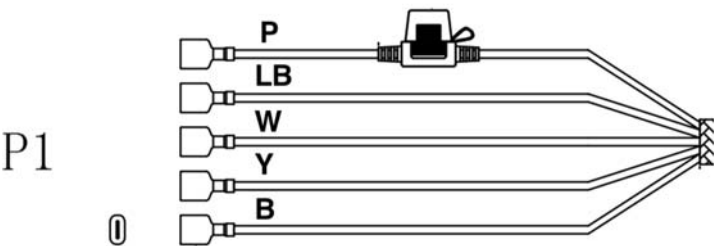

TKP VEHICLE HARNESS		WIRE COLOR
1	POWER	PINK
2	LOCK	LIGHT BLUE
3	UNLOCK	WHITE
4	ACC	YELLOW
5	GROUND	BLACK

Female Molex 5-pin Connector P2 BLACK

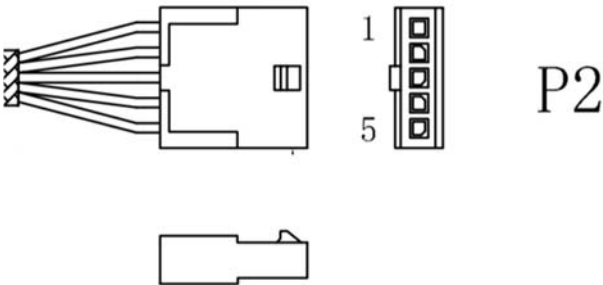

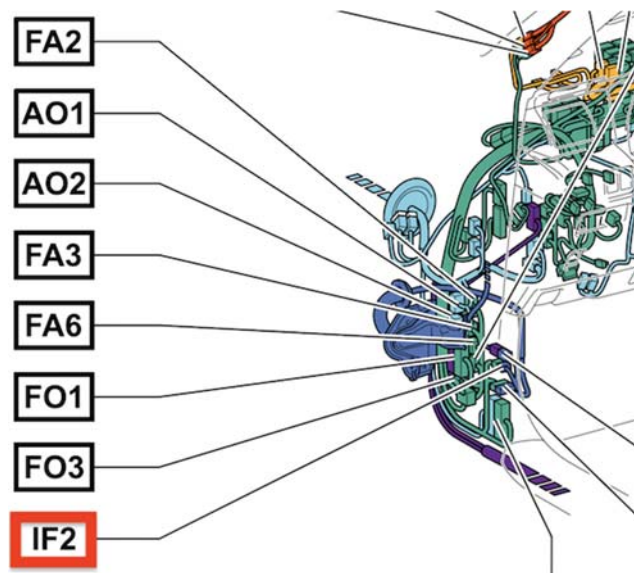


Figure 20

13. LOCATE CONNECTOR IF2 IN THE LOWER DRIVER'S SIDE KICK PANEL AREA (Cowl Side Panel LH)

(a) Disconnect connector IF2 (Black 12-pin). Figure 20.

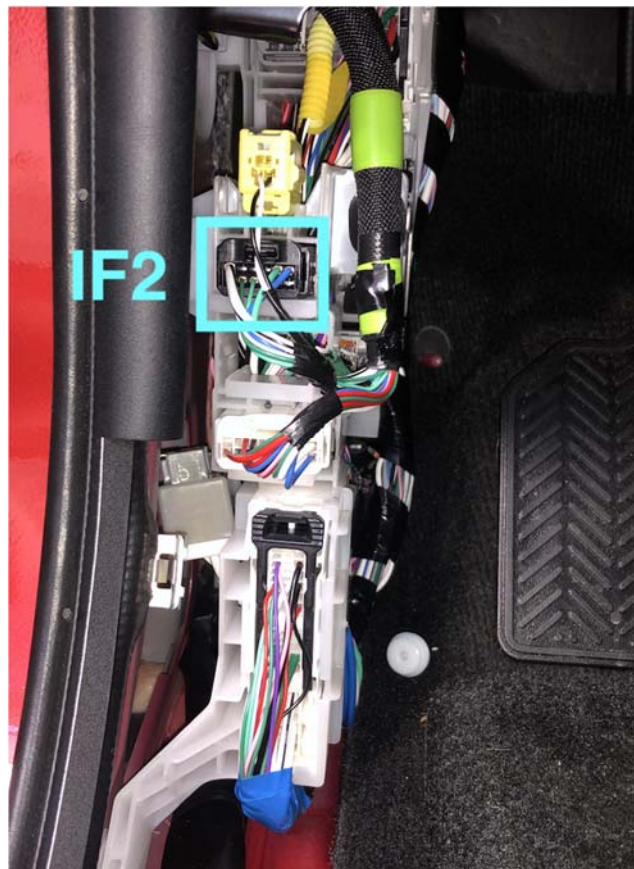



Figure 21

14. LOCATE LOCK & UNLOCK WIRES IN CONNECTOR IF2

(a) Pull back the protective tape to expose at least 2" of the wires behind the connector. Figure 21.


(b) Separate the LOCK wire (Pin #8 / Color GRAY) from the bundle.

(c) Separate the UNLOCK wire (Pin #9 / Color LIGHT GREEN) from the bundle.

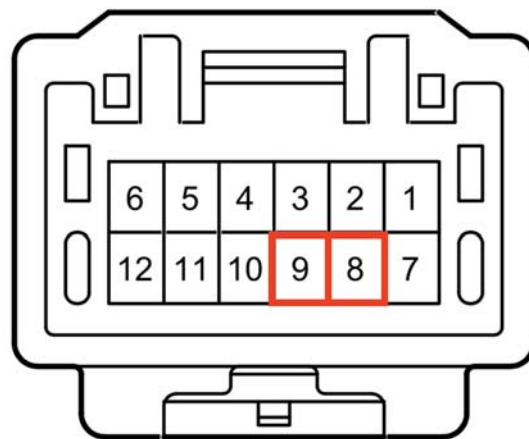



*Figure 22*

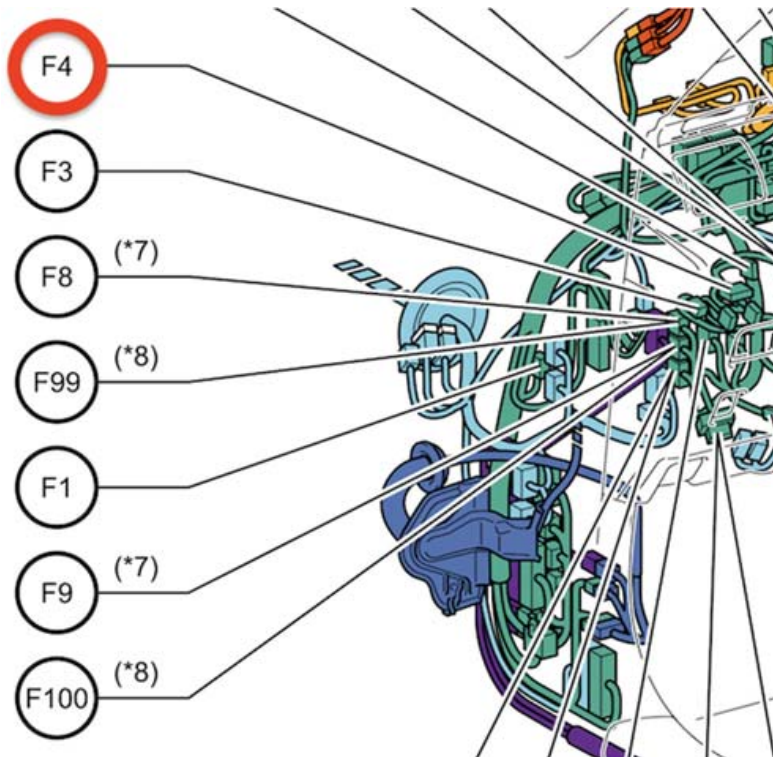

*Figure 23*

#### 15. T-TAP LOCK & UNLOCK WIRES IN CONNECTOR IF2

- (a) T-Tap the GRAY lock wire (Pin #8) with the supplied RED T-tap.
- (b) T-Tap the LIGHT GREEN unlock wire (Pin #9) with the supplied RED T-tap. Figure 22.




**Stagger the T-tap connectors as shown.**

#### 16. LOCATE CONNECTOR F4 IN THE NO. 2 SWITCH HOLE BASE (LH Dash Panel)


- (a) Disconnect connector F4 (White 10-pin). Figure 23.

### 17. LOCATE REMOTE MIRROR WIRE IN CONNECTOR F4

- (a) Pull back the protective tape to expose at least 2" of the wires behind the connector.
  - (b) Separate the REMOTE MIRROR wire (Pin #8 / Color WHITE) from the bundle.
- Figure 24.

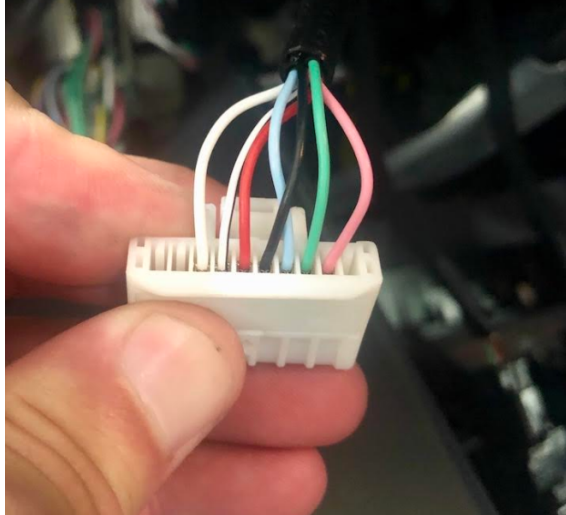

*Figure 24*

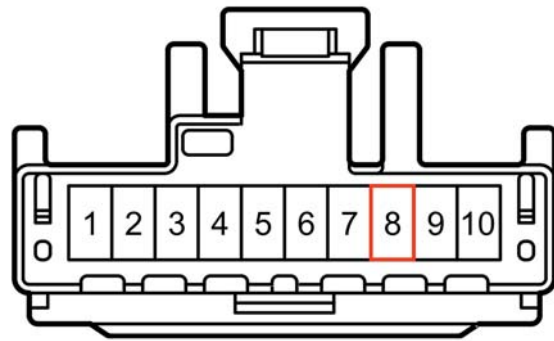

### 18. T-TAP REMOTE MIRROR WIRE IN CONNECTOR F4

- (a) T-Tap the WHITE remote mirror wire (Pin #8) with the supplied RED T-tap.
- Figure 25.



*Figure 25*



### 19. ROUTE TKP VEHICLE HARNESS TO A-PILLAR

(a) From the lower driver's side kick panel area, route the TKP Vehicle Harness behind the factory wire harnesses as shown. Figure 26.



*Figure 26*



**Use a Wire Fish Tool in this procedure.**

(b) Secure the TKP Vehicle Harness Molex 5-pin connector end to the wire fish tool. Figure 27.

(c) Using the wire fish tool, push the TKP Vehicle Harness up through the opening above and on the left end of the main metal dash cross-support tube up to the A-pillar.



*Figure 27*



**Figure 28**

- (d) The wire fish tool and the TKP Vehicle Harness Molex 5-pin connector end should route up to the A-pillar as shown. Figure 28.
- (e) Remove the wire fish tool from the TKP Vehicle Harness Molex 5-pin connector end.



**Figure 29**



Use one (1) 8" zip tie.


#### 20. SECURE THE TKP VEHICLE HARNESS MOLEX 5-PIN CONNECTOR

- (a) Loosely secure the TKP vehicle harness wires to the factory harness at the A-pillar with a supplied 8" zip tie to prevent it from falling down. Figure 29.



Do not secure the zip tie tightly at this point.



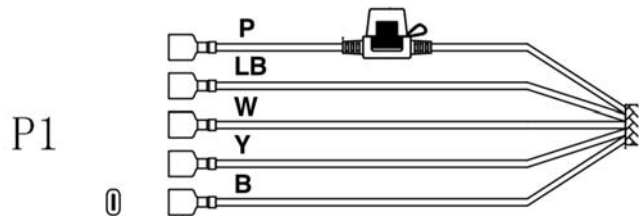

Before connecting, make sure the TKP Vehicle Harness' male blade connectors P1 are not bent to one side to ensure they insert securely into their corresponding female T-Tap connectors.

TKP VEHICLE HARNESS		WIRE COLOR
1	POWER	PINK
2	LOCK	LIGHT BLUE
3	UNLOCK	WHITE
4	ACC	YELLOW
5	GROUND	BLACK



Figure 30

## 21. CONNECT THE LOCK & UNLOCK WIRES IN CONNECTOR IF2 TO THE TKP VEHICLE HARNESS

- Connect the male spade connector of the TKP Vehicle Harness' LIGHT BLUE wire to the IF2 connector's GRAY lock wire T-tap (Pin #8).
- Connect the male spade connector of the TKP Vehicle Harness' WHITE wire to the IF2 connector's LIGHT GREEN unlock wire T-tap (Pin #9).
- Reconnect the IF2 connector. Figure 30.



*Figure 31*


**22. CONNECT THE REMOTE MIRROR WIRE IN CONNECTOR F4 TO THE TKP VEHICLE HARNESS**

(a) Connect the male spade connector of the TKP Vehicle Harness' YELLOW wire to the F4 connector's WHITE remote mirror wire T-tap (Pin #8). Figure 31.



*Figure 32*


(c) Reconnect the F4 connector. Figure 32.

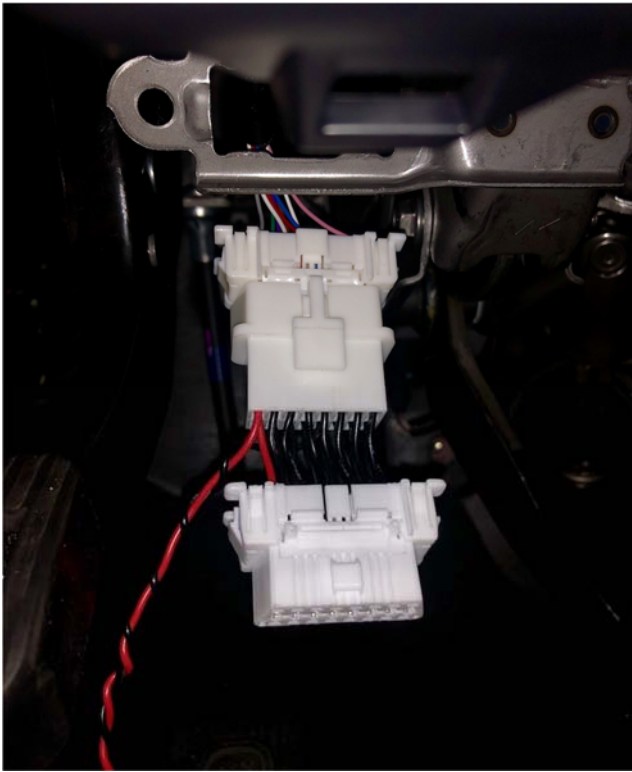

*Figure 33\**


### 23. INSTALL DLC POWER & GROUND JUMPER

- (a) Locate the vehicles white DLC connector in the lower instrument finish panel. Disconnect the factory DLC connector from sub-assembly panel. Connect the jumper to the factory DLC then insert the jumper into the factory DLC retainer.
- (b) Connect the vehicle's DLC connector to the DLC Power & Ground Jumper. Figure 33. Once connected verify the connection is secure and wire tie as shown in Figure 33 and Figure 34.

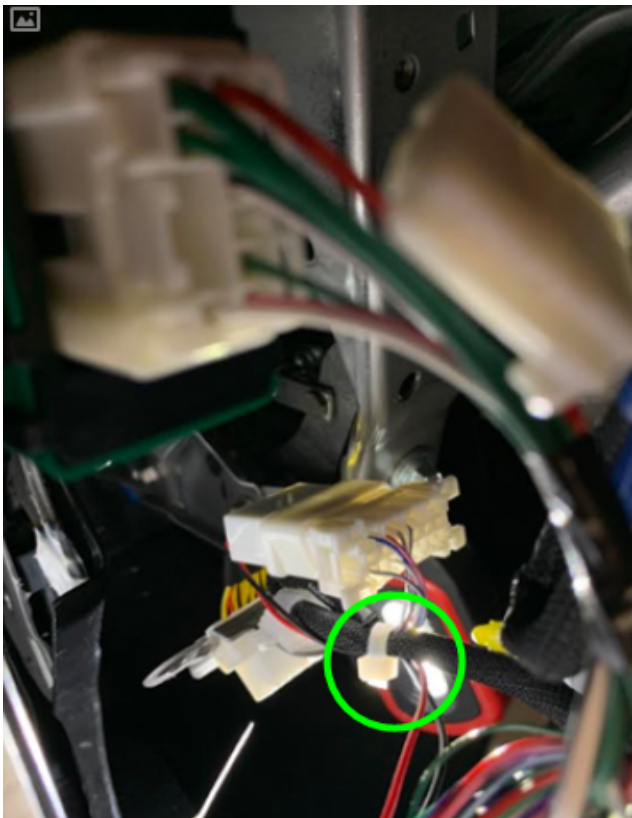

*Figure 34*



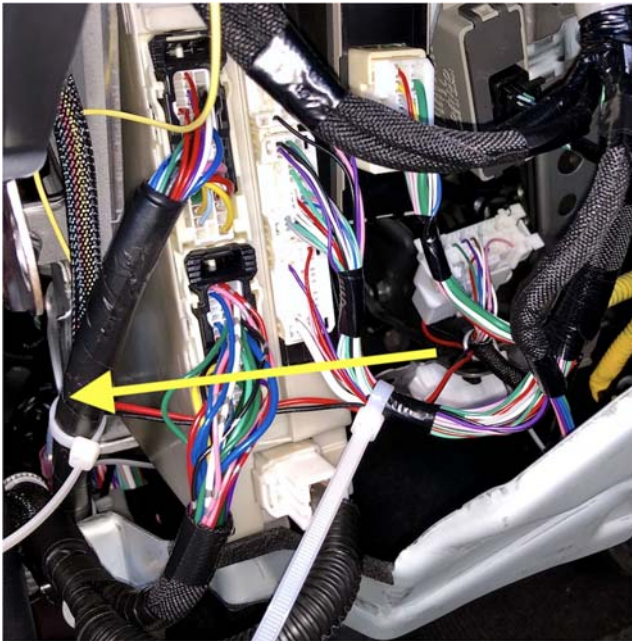


**Figure 35**

(d) Route the DLC Jumper's Power & Ground wires along the factory wire harnesses above and to the left of the connector. Figure 35.

(e) Connect the male blade connector of the DLC Jumper's RED power wire to the TKP Vehicle Harness PINK power wire's female connector.

(f) Connect the male blade connector of the DLC Jumper's BLACK ground wire to the TKP Vehicle Harness BLACK ground wire's female connector.

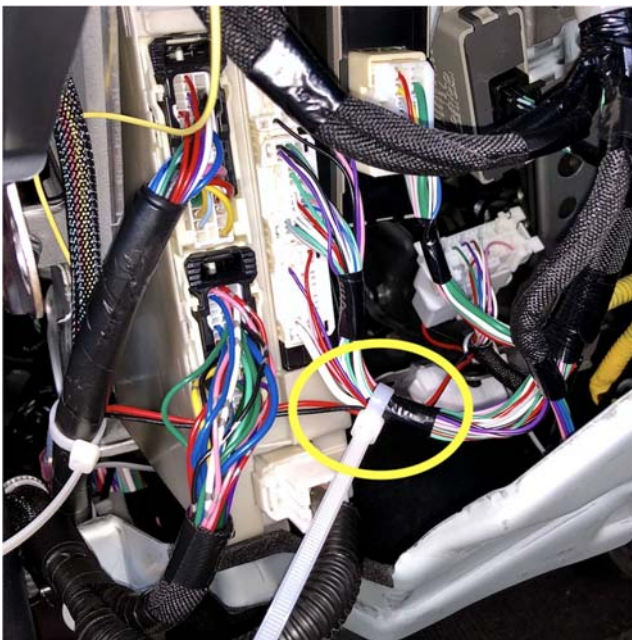

**Figure 36**



Use one (1) 8" zip tie.

#### 24. SECURE THE DLC POWER & GROUND JUMPER WIRES

(a) Secure the DLC Power & Ground Jumper wires with one (1) of the supplied 8" zip ties to the factory wire harness to the left of the DLC connector as shown. Figure 36.

(b) Snip the excess zip tie length.




**Figure 37**



Use three (3) 8" zip ties.

**25. BUNDLE & SECURE THE TKP VEHICLE HARNESS WIRES AT CONNECTOR IF2**

- (a) Pull the TKP Vehicle Harness down to remove any excess slack in the harness run to the connectors.
- (b) Bundle & secure the TKP Vehicle Harness wires to the factory harness at connector IF2 with three (3) of the supplied 8" zip ties as shown. Figure 37.
- (c) Make sure the inline fuse is accessible so that it can be serviced without removing any zip ties.
- (d) Snip excess zip tie lengths.

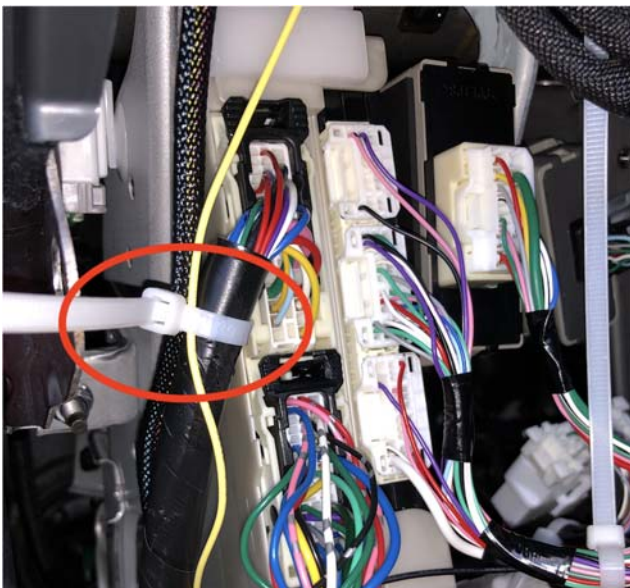

**Figure 38**



Use one (1) 8" zip tie.

**26. SECURE THE TKP VEHICLE HARNESS WIRE BELOW CONNECTOR F4**

- (a) Secure the main TKP Vehicle Harness and the TKP Vehicle Harness' YELLOW wire to the F4 connector to the factory harness with one of the supplied 8" zip ties as shown. Figure 38.
- (b) Snip excess zip tie length.



**Figure 39**

## 27. SECURE THE TKP VEHICLE HARNESS MOLEX 5-PIN CONNECTORS

- (a) Route the TKP Molex (male) connector on the Back housing pigtail around the back of the factory harness and pull the Back housing pigtail down snugly.
- (b) Connect the TKP Molex (male) connector on the Back housing pigtail to the Molex (female) connector on the Vehicle Harness.
- (c) Secure the TKP Vehicle Harness wires to the factory harness at the A-pillar with a supplied 8" zip tie as shown. Figure 39.
- (d) Snip excess zip tie length.

## 28. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

- (a) Connect each connector and hood lock control cable assembly.
- (b) Attach the 13 clips and 2 guides to install the lower instrument panel finish panel sub-assembly.
- (c) Install the 2 bolts.
- (d) Attach the 2 claws to close the cover.
- (e) Attach the 5 clips to install the No. 1 instrument cluster finish panel garnish.

## 29. INSTALL NO. 2 SWITCH HOLE BASE

- (a) Connect each connector.
- (b) Attach the 6 clips and 2 guides to install the No. 2 switch hole base.

## 30. INSTALL FRONT PILLAR GARNISH LH

- (a) Remove the protective cover.
- (b) Attach the 2 guides and clip to install the front pillar garnish LH.
- (c) Install the bolt.
- (d) Attach the 2 claws to install the No. 1 front pillar garnish cover LH.



## 31. INSTALL COWL SIDE TRIM BOARD LH

(a) Attach the clip and claw to install the cowl side trim board LH.

(b) Install the clip.

## 32. INSTALL DOOR SCUFF PLATE ASSEMBLY LH

(a) Attach the 4 clips, 10 claws and 2 guides to install the door scuff plate assembly LH.

## RE-INSTALL BATTERY



Use 10mm socket & torque wrench.

33. Reconnect the negative battery cable.  
Figure 40.



Torque: 48 in•lbs [5.4 N•m]



**Caution: DO NOT touch the positive terminal.**



**When disconnecting the cable, some systems need to be initialized after the cable is reconnected.**



**Figure 40**

34. Print Warranty Statement and place in the glove box, DIO only.

**FUNCTION AND QUALITY CHECK**

CHECKLIST - these points MUST be checked to ensure a quality installation.

**ACCESSORY FUNCTION CHECK:**

**With Keys out of the vehicle and the Driver Side window in the down position.**

**LOOK FOR:****TKP FUNCTION CHECK:****1) First Time Use**

- a. To guard against accidental lock, the Keypad awakes inactive
- b. In this state, the confirmation and digit button LEDs quickly flashes three (3) times when awoke to signal there is no Access Code programmed
- c. Then Keypad will immediately re-enter the sleep state

**2) Set 5-digit Access Code**

- a. Press the Program button
  - i) Digit confirmation LED and all digit button LEDs illuminate
- b. Enter the 5-digit Access Code 1-3-5-7-9
  - i) Confirmation LED flashes with each accepted digit entry
  - ii) When the new 5-digit Access Code is set, all Keypad LEDs quickly flash three times
- c. Keypad allows 20 seconds after each touch to enter a new code
- d. If you enter an incomplete or incorrect Access Code, simply press the Program button and repeat the steps above

**3) Lock All Doors**

- a. Using multiple finger tips, touch any of the digit buttons to wake up the Keypad
- b. Touch & hold the 3/4 & 7/8 digit buttons simultaneously
  - i) Confirmation LED quickly flashes five (5) times
  - ii) You should also hear all doors lock (background noise permitting)
- c. Keypad goes to sleep (all digit button LEDs turn off) after about 10 seconds

**4) Unlock Driver's Door**

- a. Using multiple finger tips, touch any of the digit buttons to wake up the Keypad
- b. Enter the 5-digit Access Code 1-3-5-7-9
- c. Confirmation LED flashes with each accepted digit entry
- d. Confirmation LED flashes long once when the Driver's door is unlocked
- e. You should hear the Driver's door unlock (background noise permitting)
- f. All doors unlocked. Enter the 5-digit Access Code 1-3-5-7-9. Hold the 9 Key down for 5 seconds.

**5) Turn Key on to Ignition Power**

- a. With ignition turned to the on position verify that numbers 1-3-5-7-9 do not illuminate.

Note: The indicator light will flash.

**6) Return to Factory Reset State (Keypad Disabled)**

- a. Press & hold the Program button for about 10 seconds
- b. In this state when awoke, the confirmation and digit button LEDs will blink three times to signal there is no code programmed


**7) Check function of all disconnected switches**

 User Manual


Place User Manual in the glove box.

 Headrest Hangtag


Hang Seat Headrest Hang tag from Passenger seat headrest.


 Check Speaker

Left Front A-Pillar Speaker, if applicable.

 Warranty Statement

Place Warranty Statement in the glovebox, DIO only.

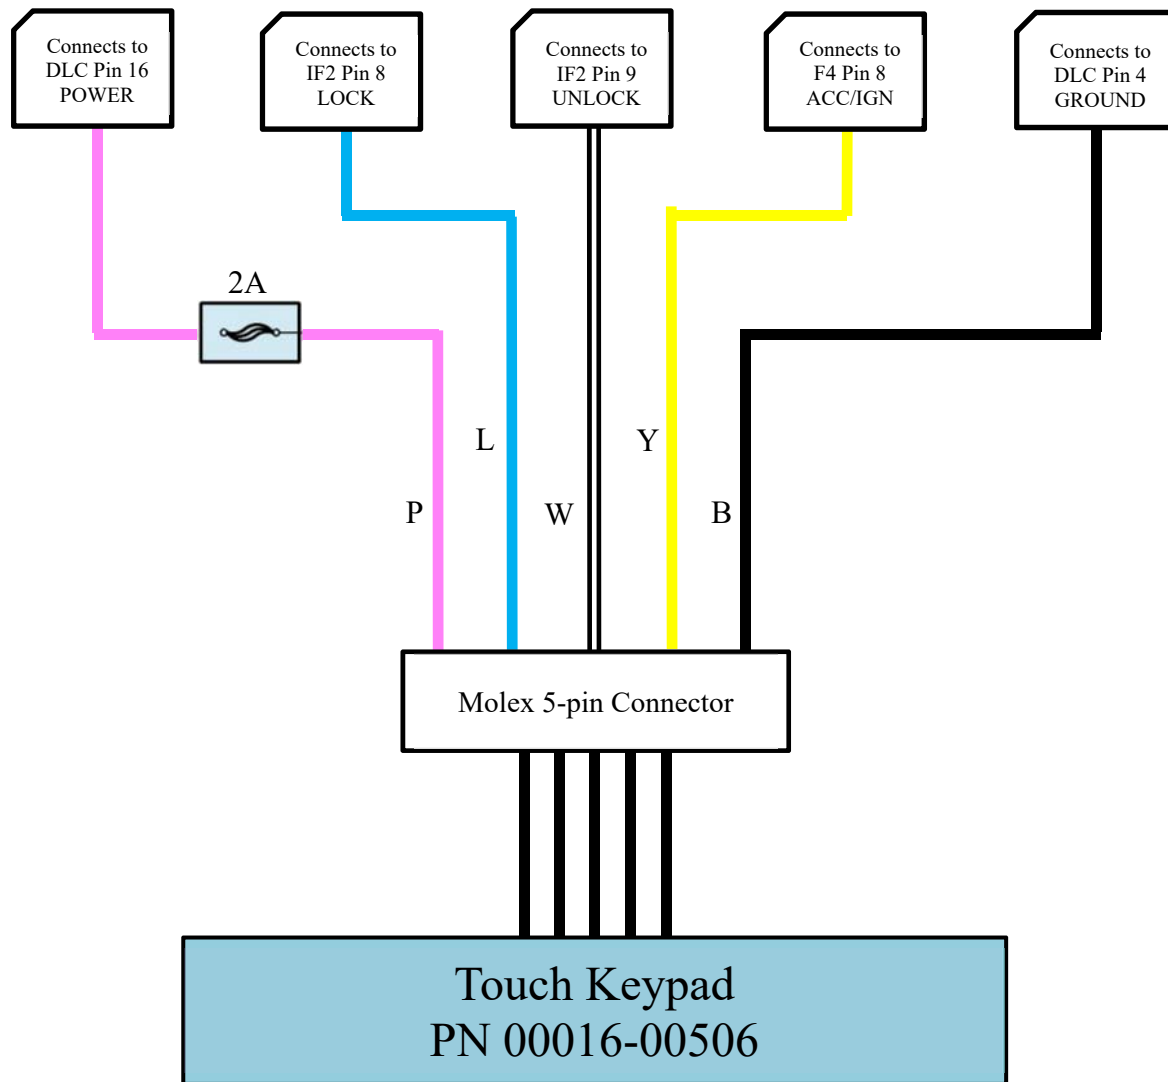
**DIAGNOSTIC / BLOCK DIAGRAMS & CONNECTOR PROCEDURES**

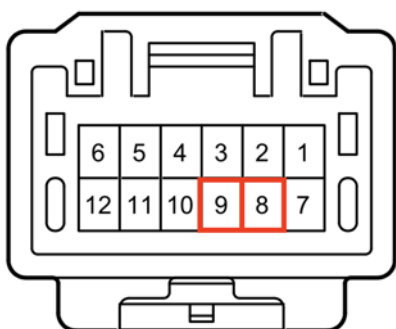**Connector IF2****Pin 8 LOCK**


Pin	Wire Color	Test Reference	Proper Operation
8	GR	Pin 8 to Ground	12-14VDC

**Pin 9****UNLOCK**

Pin	Wire Color	Test Reference	Proper Operation
9	LG	Pin 9 to Ground	12-14VDC

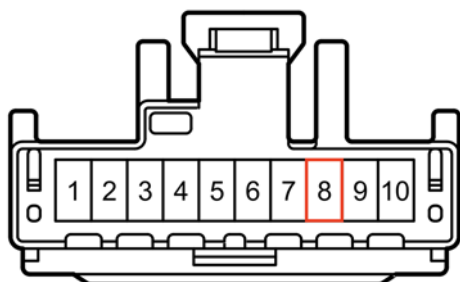**Connector F4****Pin 8****IGNITION**

Pin	Wire Color	Test Reference	Proper Operation
8	W	Pin 8 to Ground	12V when ACC or IGN is ON

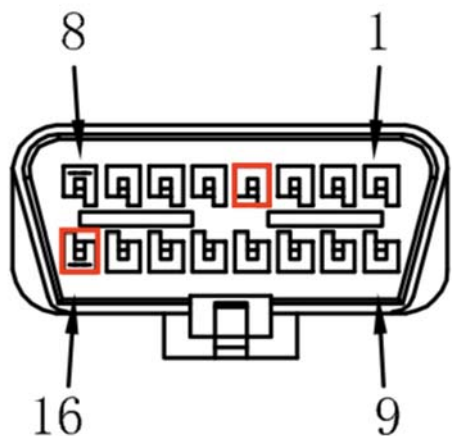

DLC Jumper

Pin 4

GROUND

Pin	Wire Color	Test Reference	Proper Operation
4	B	Pin 4 to Ground	0VDC

Pin 16

POWER

Pin	Wire Color	Test Reference	Proper Operation
16	R	Pin 16 to Ground	Approximately 0VDC when IGN is OFF and +12VDC when IGN is ON



## LIMITED WARRANTY – SOUTHEAST TOYOTA

**SOUTHEAST TOYOTA DISTRIBUTORS, LLC** ("we," "our" and "us") provides the following limited warranty on our accessories, excluding tires, ("Accessories" or "Accessory") installed on a Toyota. This limited warranty is not provided by and does not bind or provide benefit to the vehicle dealer, the manufacturer, or Toyota Motor Sales, U.S.A., Inc. This limited warranty does not apply to tires; please consult the tire manufacturer and/or its materials accompanying the vehicle for any warranty terms concerning tires. This limited warranty also does not apply to ToyoGuard Exterior Paint Sealant and ToyoGuard Interior Protector; please consult the ToyoGuard Limited Warranty Certificate for the warranty terms concerning those products.

### SCOPE OF LIMITED WARRANTY:

#### A. Protection:

- i. **Accessories Installed by Southeast Toyota Distributors, LLC on a new Toyota vehicle.** We warrant that, for a period of 36 months or 36,000 miles, whichever occurs first, we will repair or replace (includes labor), free of charge, any defect in such an Accessory due to faulty material or workmanship, or, at our option, provide a full refund of the purchase price of the Accessory. The warranty period begins on the vehicle's In-Service Date, which is the first date the new vehicle is either delivered to an ultimate purchaser, leased, or used as a company car or demonstrator. Accessories installed by Southeast Toyota Distributors, LLC are identified on the vehicle's window sticker (Monroney Label).
- ii. **Accessories Installed by a Toyota Dealer on a Toyota vehicle.** We warrant that, for 12 months, regardless of mileage, from the date such an Accessory was installed on the vehicle or the remainder of the Toyota new vehicle warranty, whichever is longer, we will repair or replace (includes labor), free of charge, any defect in the Accessory due to faulty material or workmanship, or, at our option, provide a full refund of the purchase price of the Accessory. For a new vehicle, the warranty period begins on the vehicle's In-Service Date, which is the first date the new vehicle is either delivered to an ultimate purchaser, leased, or used as a company car or demonstrator.
- iii. **Accessories purchased from a Toyota Dealer but not installed by the Toyota Dealer.** We warrant that, for a period of 12 months, regardless of mileage, from the date the accessory was purchased, we will repair or replace (does not include labor), free of charge, any defect in the Accessory due to faulty material or workmanship, or, at our option, provide a full refund of the purchase price of the Accessory.

**B. Limitation of Warranty.** This limited warranty does not apply to, and we will not repair, replace, or reimburse you for: (1) wheel balancing and wheel alignments, except for one wheel balancing or alignment during the first 12 months or 12,000 miles, whichever occurs first, from the vehicle's In-Service Date, as defined above, (2) abrasions or dents, whatever their cause, and any failure or damage resulting directly or indirectly from accidents, collisions, impacts from foreign objects, fire, theft, larceny, explosion, malicious mischief, vandalism, civil commotion, riots, war, or any other similar causes, (3) any failure or damage resulting directly or indirectly from lightning, windstorms, hail, water, floods, subfreezing temperatures, airborne chemicals, tree sap, dust, salt, and any other environmental conditions or similar causes, (4) any failure or damage caused by: (a) a failure of any part, other than the Accessory, (b) any misuse, abuse, improper towing, negligence or lack of maintenance of the vehicle or Accessory, (c) the alteration, modification or repair of the Accessory by anyone other than persons expressly authorized by us to perform such alteration, modification or repair, or (d) the use of the vehicle for commercial purposes, competitive driving or racing, (5) any failure or damage, if the Accessory has not been installed according to instructions, (6) any failure or damage occurring outside of Canada, the United States of America, its territories or possessions, (7) except to the extent required by the state whose laws govern this limited warranty, any consequential, secondary, or unreasonable costs that may be suffered as a result of the need to repair or replace the Accessory, including without limitation any loss of use of the vehicle, road service, towing, storage charges, inconvenience, loss of wages and/or income, additional expense incurred, loss of transportation, rental car expense, or any derivative damage to persons or things other than the Accessory, including other parts of the vehicle, or (8) liability for damage to property or for injury to or death of any person, arising out of the operation, maintenance or use of your vehicle whether or not related to the covered Accessory.

**C. Exclusive Remedy.** If there is a valid claim under this limited warranty for a defect due to faulty material or workmanship in the Accessory, we will, at our option, either: (i) repair, (ii) replace or (iii) provide a full refund of the purchase price of the Accessory. We have no other obligations under this limited warranty. Refunds will be made to the vehicle owner. If the vehicle is leased, the refund will be made to the leasing company.

**HOW TO MAKE A CLAIM:** In the event of a warranty claim, please contact the nearest Toyota dealer to arrange for repairs. The dealership must receive our prior authorization before making repairs covered by this limited warranty. The dealer will contact Southeast Toyota Distributors, LLC at 1-888-851-2722, select option #5 (Warranty Department), then option #4 (Repairs), for instructions on processing a warranty claim, if they are not already familiar with the process. If you have any questions or concerns regarding repairs covered by this limited warranty, please contact our **Customer Assistance Hotline at 1-800-301-6859**.

**OUR DISPUTE RESOLUTION PROGRAM:** Your satisfaction is our highest priority. In keeping with that focus, in the event that an issue arises related to this Limited Warranty, we invite you to call our Customer Assistance Hotline at 1-800-301-6859 to discuss it. In most cases, we expect that a satisfactory resolution of your issue can be reached through engagement with that Department. If our Customer Loyalty Department is unable to resolve your issue to your satisfaction, we offer a dispute resolution program administered by the National Center for Dispute Settlement (NCDS) ("the Program"). The purpose of the Program is to resolve disputes in an informal setting before an impartial arbitrator. The Program is free of charge to you (although you must bear the cost of any expert witness or attorney you elect to employ). You are required to complete the Program before exercising rights or seeking remedies under the federal Magnuson-Moss Warranty Act, 15 U.S.C. § 2301 et seq. ("the Act"). If you choose to seek remedies that are not created by the Act, you are not required to use the Program before pursuing such remedies – although the Program is still available to you to resolve the dispute. When utilizing the Program, you will need to provide (a) the vehicle identification number of your vehicle, (b) the identity of your selling and servicing dealerships, (c) the mileage on your vehicle at relevant times, (d) the date and nature of any relevant repairs, (e) legible copies of repair orders and other relevant documents, (f) a summary of the unresolved issue and the requested action, and (g) your contact information. In most cases, the dispute resolution process under the Program will be completed within forty (40) days of your submission of your request and will consist of steps such as an initial eligibility determination, an opportunity for you and us to submit information in writing relating to your claim, an oral hearing, and a decision from the arbitrator. A decision will be binding on you only if you choose to accept it. You may submit a request to NCDS by telephone at their toll free number: (877)-276-8848 or in writing at P.O. Box 463196, Mt. Clemens, MI 48046. You may obtain additional information regarding the Program at [www.ncdsusa.org](http://www.ncdsusa.org). In the event that the NCDS does not exist or no longer handles disputes for us at the time that you seek to submit a request, you may contact our **Customer Assistance Hotline at 1-800-301-6859** to obtain current information about our dispute resolution programs.

Rev. 12/01/16

**GENERAL LIMITATION OF WARRANTY:** THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES OR LIABILITIES. IN NO EVENT SHALL WE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. SOME STATES DO NOT ALLOW THE EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE INFORMATION OR EXCLUSION MAY NOT APPLY. NO EXPRESS WARRANTY OF FITNESS OR MERCHANTABILITY IS GRANTED BY THIS LIMITED WARRANTY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THOSE DESCRIBED IN THIS DOCUMENT. ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH MAY BE APPLICABLE BY OPERATION OF LAW SHALL BE LIMITED TO THE PERIOD OF THIS WRITTEN LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY. THIS LIMITED WARRANTY PROVIDES SPECIFIC LEGAL RIGHTS, AND THERE MAY BE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN A PERIOD NOT EXCEEDING 12 MONTHS AFTER EXPIRATION OF THIS LIMITED WARRANTY. THE REMEDIES SPECIFIED HEREIN AND THOSE SPECIFIED BY APPLICABLE LAW ARE THE ONLY REMEDIES AVAILABLE. WE ASSUME NO OTHER OBLIGATION OR RESPONSIBILITY WITH REGARD TO THE ACCESSORY. WE NEITHER ASSUME, NOR AUTHORIZE ANYONE TO ASSUME FOR US, ANY ADDITIONAL LIABILITY IN CONNECTION HERewith.

**GENERAL:** This limited warranty describes the complete and exclusive rights that result from the purchase of Accessories. No oral representations or statements may be relied upon. This limited warranty may not be amended or modified, and additional rights may not be granted, unless in a written statement signed by one of our officers. This limited warranty shall be governed by the laws of the state where the vehicle is purchased, excluding laws concerning conflicts of law. We may delegate the performance of our duties and obligations and assign our rights and benefits hereunder. For inquiries regarding this limited warranty, we can be contacted directly at **Customer Assistance Hotline at 1-800-301-6859**, or by mail to: **Southeast Toyota Distributors, LLC, Attention: Customer Loyalty Department, 100 Jim Moran Boulevard, Deerfield Beach, Florida 33442.**