Preparation

Part Number: PTS25-52040

Kit Contents

Item#	Quantity Reqd.	Description
1	1	LH Taillight Assembly
2	1	RH Taillight Assembly
3	1	Hardware Bag

Hardware Bag Contents

Item#	Quantity Reqd.	Description
1	2	Wire Ties
2	1	Compliance Card
3	2	"TYC" Stickers
	1	Instruction Sheet

Additional Items Required For Installation

Item#	Quantity Reqd.	Description
1		

Conflicts

Taillight Garnish

Recommended Tools

Personal & Vehicle	Notes	
Protection		
Blankets		
Special Tools	Notes	
•		
Installation Tools	Notes	
Socket	10mm	
Extension	3"	
Ratchet		
Side cutter		
Pry tool	Non-scratch	
Special Chemicals	Notes	

General Applicability

Recommended Sequence of Application

Item #	Accessory	
1	Satellite Radio	
2	Taillight	
3		

*Mandatory

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Item#	Quantity Reqd.	Description
1		
2		
3		

Legend



STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



<u>CAUTION:</u> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



<u>TOOLS & EQUIPMENT:</u> Used in Figures calls out the specific tools and equipment recommended for this process.



<u>**REVISION MARK:**</u> This mark highlights a change in installation with respect to previous issue.

Replacement bulbs are available locally or through your TOYOTA Dealer.

unbugn your 10101A beater.			
Description	Universal P/N	TOYOTA P/N	
Reverse	921	90981-11059	
Tail/Stop	7443	90981-11048	
Turn Signal	7440	90981-13043	

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).

 $\mathbf{x}\mathbf{A}$


- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.







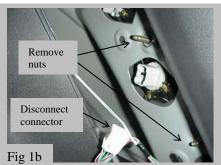




1. Remove Taillight.

- (a) Starting with either side of the vehicle, remove the access cover by using a nonscratch pry tool. (Fig. 1a)
- (b) Unplug the taillight connector. The taillight connector is located directly on the back of the taillight. (Fig. 1b)
- (c) Remove the (2) mounting nuts. (Fig. 1b)
- (d) Remove the taillight assembly by pulling straight back. (Fig. 1c).
- (e) Repeat steps (a) through (d) on the opposite side of the vehicle.



Procedure



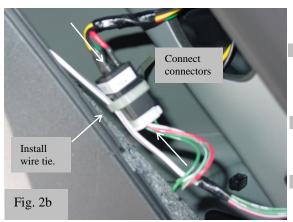



Side Cutter





Torque wrench

2. Install Taillight.

- (a) Push the connector of the new lamp through the large, middle opening in the taillight cavity. (Fig 2a)
- (b) Align the bolts through the holes and push the light forward into the cavity.
- (c) Pull all slack through hole to make sure the wires are not pinched between the light and the sheet metal.
- (d) Connect the taillight connector to the vehicle connector. (Fig. 2b)
- (e) Use the supplied wire ties to tie the connector to the factory wire harness and cut off excess. (Fig 2b)
- (f) Reinstall the mounting nuts and torque to 36lbf-in (30lbf-in min/-37lbf-in max)
- (g) Reinstall the access covers.
- (h) Repeat steps (a) through (f) on opposite side of vehicle

3. Post Installation



(a) Place DIO instructions, stickers (2), and Compliance Card in glove box.



(b) Reconnect battery negative terminal and torque to 36 lbf-in.



(c) Perform function checks. See section - III Functional Verifications.

BRAND	MODEL	MY -	ACCESSORY
DIAND	MODEL	1411 -	ACCESSORI

Check:	Look For:
Accessory Function Checks	
Brake Light	Proper operation
Turn Signal Light	Proper operation
Reverse Light	Proper operation
Tail/Park Light	Proper operation
Vehicle Function Checks	