




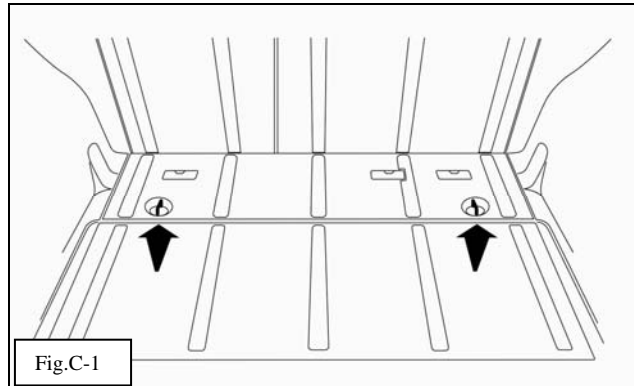 
### A. Remove One Lug Nut

1. Remove one lug nut from each wheel.


### B. Install Wheel Lock

 
1. By hand, install a Wheel Lock on each wheel.
2. Take the key supplied in the wheel lock set. Place it on top of the wheel lock and turn until the patterns engage.

-  3. Place the socket on top of the key. Using a torque wrench and while applying pressure on the key tighten the wheel locks to 103 N•m (76 lbf•ft.).




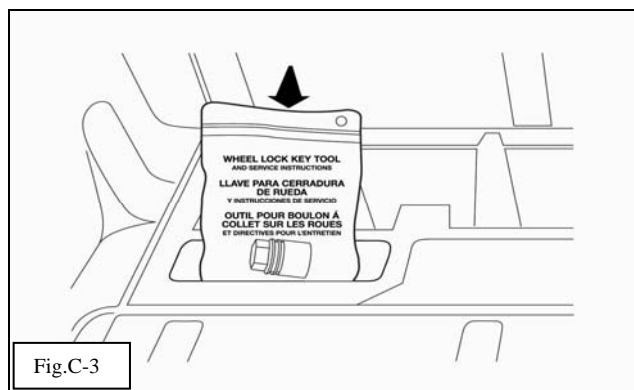 
### C. Key Storage

-  1. Unlock the luggage compartment forward floor board by turning the locking switches, per figure C-1 (Fig. C-1).
2. Remove the floor board to expose the molded equipment tray, per figure C-2 (Fig. C-2).
  3. Insert the wheel key and pouch into the rear left storage slot as show in figure C-3 (Fig. C-3).
  4. Replace and lock floor board.

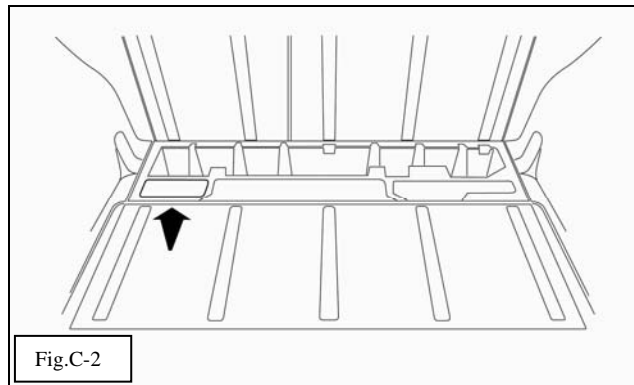

### D. Complete the installation

-  1. Place wheel lock information packet in the glove compartment.



**TOYOTA                      MATRIX                      2009 -                      WHEEL LOCK**

Checklist - these points **MUST** be checked to ensure a quality installation.

Check: \_\_\_\_\_

Look For: \_\_\_\_\_

☐ Correct part number has been installed

Verify part number on package

 ☐ Wheel lock tightness

Wheel locks have been installed at a torque of 103 N•m (76 lbf•ft.). Verify process only  
– Check torque during installation