2007 -

TVIP V5 RS3200 PLUS

Part Number: 08586-OC890

Conflicts

Preparation

Do not install into vehicles with Factory Alarm Systems or without Immobilizer.

Do not use Techstream Lite for Registration.

**Recommended Sequence of Application** 

		100000000000000000000000000000000000000
Item #	Accessory	
1	TVIP/RES	Any TVIP or RES system
2	XM Radio	

\*Mandatory

#### **Kit Contents**

Item#	Quantity	Description	
1	1	GBS ECU w/bracket attached	

**Hardware Bag Contents** 

Item#	Quantity	Description	
1	1	M6 Flange Nut	
2	1	GBS Microphone	
3	2	V2 Window Label w/ red tag	
		(discard)	
4	2	V2 Window Label w/ red tag	
		SPANISH (discard)	
5	2	V5 Window Label	
6	2	V5 Window Label SPANISH	
7	1	V2 Owner's Guide (discard)	
8	1	V5 Owner's Guide	
9	1	Warranty Card	

#### **Additional Items Required For Installation**

Item # Quantity		Description		

**NOTE:** Part number of this accessory may not be the same as the part number shown.

#### **Recommended Tools**

Personal & Vehicle	Notes	
Protection		
Safety Glasses		
Safety Gloves	(Optional)	
Vehicle Protection	Blankets, Parts Boxes	
Special Tools	Notes	
Striker Tool (PPO only)	CAD-E IADS P/N ALL 02-	
	016-01	
Scan Tool and Software Card	01001271 with Version 13.4	
	Software (or later)	
Techstream Notebook	Do not use Techstream Lite	
<b>Installation Tools</b>	Notes	
Phillips Head Screwdriver	#2, screwdriver or tip	
Flat Blade Screwdriver	1/8" wide screwdriver	
Nylon Panel Removal Tool	e.g. Panel Pry Tool #1	
_	Toyota SST # 00002-06001-01	
Torque Wrench	Battery - 36 in•bf (4.7 N•m)	
-	Airbag - 88.5 in•bf (10 N•m)	
Clear Tape		
Socket	10mm, Extension	
Special Chemicals	Notes	
Cleaner	VDC approved cleaner	

#### Legend



**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.



**<u>REVISION MARK:</u>** This mark highlights a change in installation with respect to previous issue.



**SAFETY TORQUE:** This mark indicates that torque is related to safety.


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Toyota dealer for a copy of this document

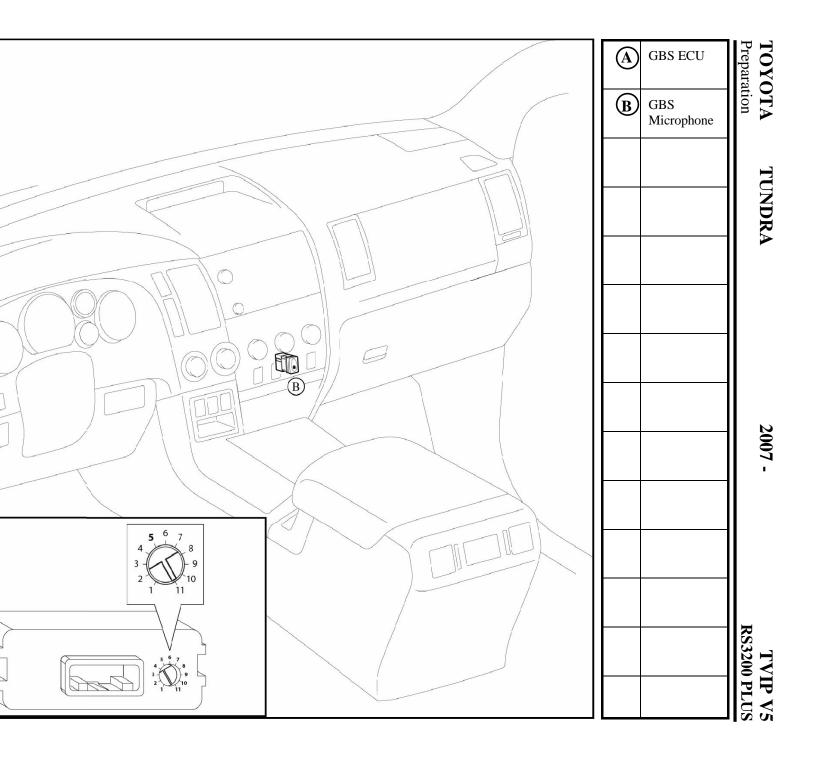

### 1. Vehicle Disassembly




(a) Vehicles with Automatic Transmission should be placed in Park and have the Parking Brake set before disconnecting the Battery.

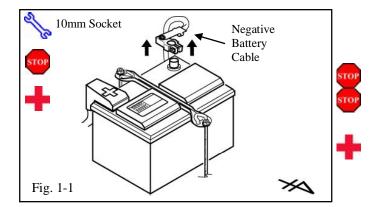


- (b) Remove the Negative Battery Cable. (Fig. 1-1)
  - (1) Protect the Fender before starting.
  - (2) Note the Battery Cable Position, as it will be reinstalled in the same position.


DO NOT TOUCH THE POSITIVE BATTERY TERMINAL.

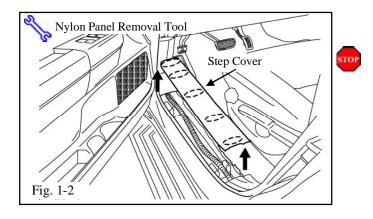


- (c) Remove the Driver's Step Cover. (Fig. 1-2)
  - (1) Begin by protecting the Vehicle Interior with Blankets.

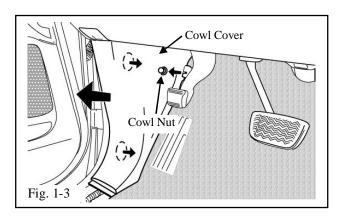


- (d) Remove the Driver's Cowl Cover. (Fig. 1-3)
  - (1) Remove 1 Cowl Nut.

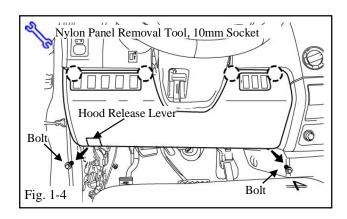


- (e) Dislodge the Lower Dash Cover. (Fig. 1-4)
  - (1) Remove 2 Bolts.
  - (2) Disconnect any Connectors.

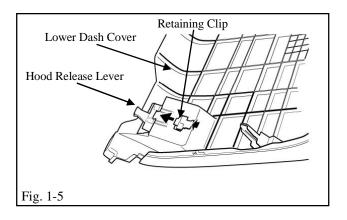

- (f) Dislodge the Hood Release Lever from the Lower Dash Cover. (Fig. 1-5)
  - (1) Press down on the Retaining Clip while pushing the Lever out.

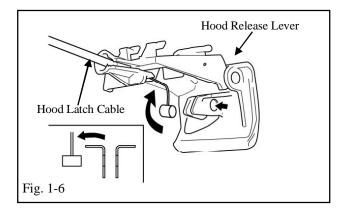


- (g) Remove the Hood Latch Cable from the Hood Latch Lever. (Fig. 1-6)
- (h) Remove the Lower Dash Cover.

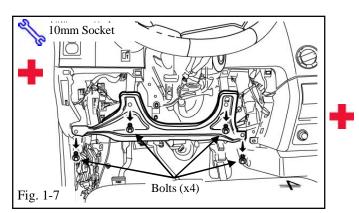

- (i) Dislodge Driver's Side Knee Airbag. (Fig. 1-7)
  - (1) Remove 4 bolts.


**CAUTION: SHARP METAL EDGES.** 

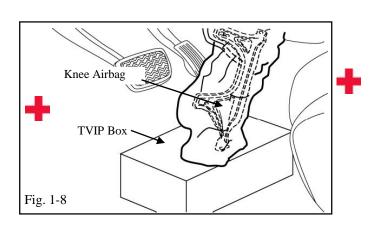

**TUNDRA** 

(j) Wrap the Airbag in a blanket and place on a box to avoid tension on the harness. (Fig. 1-8)

**CAUTION: SHARP METAL EDGES.** 

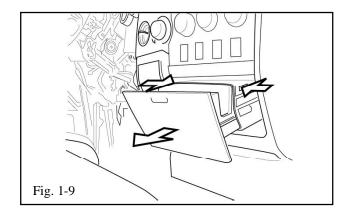


# Phillips Screwdriver Screws (x2) Fig. 1-10

# FOR VEHICLES WITH COLUMN MOUNT AUTOMATIC SHIFT LEVERS ONLY. (Steps k-n)

- (k) Remove Vehicle Drink Holder. (Fig. 1-9)
  - (1) Press in the tabs on each side and pull outward on the Cup Holder.


(1) Remove the 2 bottom Screws from the Cup Holder Drawer Assembly. (Fig. 1-10)

CONTINUED

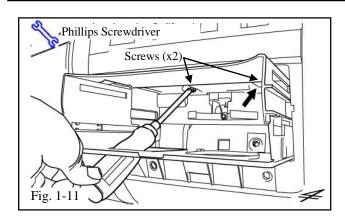


**TUNDRA** 

(m)Remove the 2 top Screws. (Fig. 1-11)

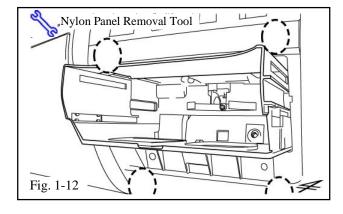


(n) Remove the Cup Holder Drawer Assembly (Fig. 1-12)


# FOR VEHICLES WITH FLOOR MOUNT AUTOMATIC SHIFT LEVERS ONLY. (Steps o)

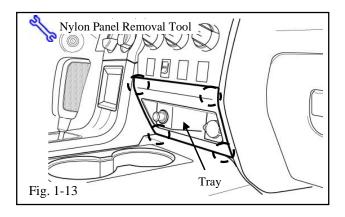

- (o) Remove the small Tray below the Climate Control Console. (Fig. 1-13)
  - (1) Disconnect any Connectors.

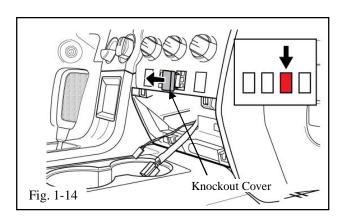


- (p) Remove the Knockout Cover from the Climate Control Console. (Fig. 1-14)
  - (1) Disconnect the 4P Connecter from the Knockout Cover.
  - (2) Discard the Knockout Cover.

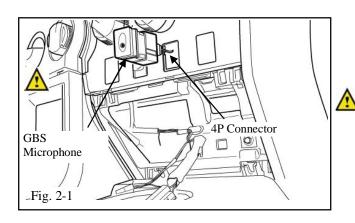


## 2. GBS Microphone Installation

(a) Feed the 4P Connector through the Climate Control Console and connect it to the GBS Microphone. (Fig. 2-1)



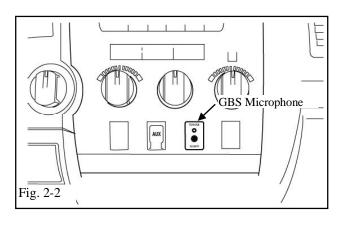


(b) Insert the GBS Microphone into the Climate Control Console. (Fig. 2-2)

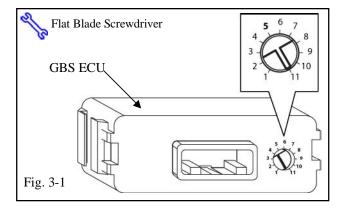


### 3. GBS ECU Preparation

(a) Verify that the GBS ECU's sensitivity is set to 5. (Fig. 3-1)

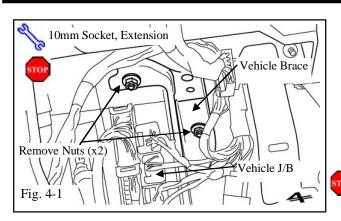


#### 4. ECU installation


- (a) Remove 2 Nuts from the Vehicle Brace near the Drivers Side J/B. (Fig. 4-1)
- (b) Pull the Brace away from the Vehicle Reinforcement. (Fig. 4-1)
  - (1) Do not remove the Brace from the studs.

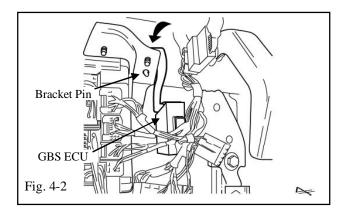


- (c) Install Bracket and GBS ECU. (Fig. 4-2)
  - (1) Make sure that the Bracket Pin seats properly.

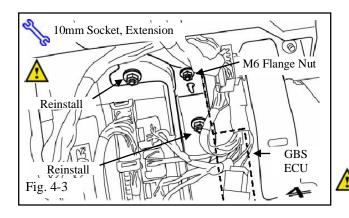


- (d) Use the M6 Flange Nut from the supplied kit to secure the ECU Bracket in place. (Fig. 4-3)
- (e) Re-secure the Vehicle Brace by reinstalling 2 Nuts. (Fig. 4-3)
  - (1) Verify that the Bracket is secure.

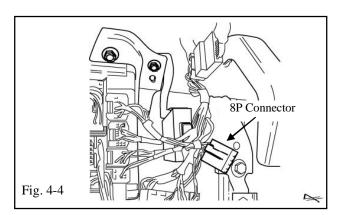

- (f) Locate the Vehicle's White 8P Connector near the Driver's Side J/B Area. (Fig. 4-4)
  - (1) Remove the Tape securing the Connector.

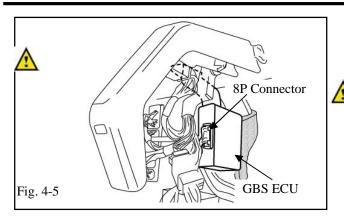

- (g) Connect the Vehicle Harness's White 8P Connector to the GBS ECU. (Fig. 4-5)
  - (1) Verify that Connector is securely connected.

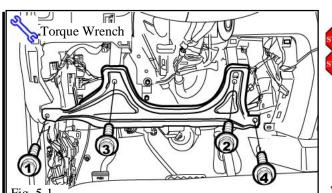


### 5. Registration Preparation


- (a) Complete the reassembly of the vehicle.
  - (1) Reconnect any disconnected connectors.
  - (2) Verify the panels fit together properly with no uneven gaps between them.
- (b) When installing the Driver's side KneeAirbag, install the bolts in the specified order.(Fig. 5-1)



(1) Tighten the bolts to 88.5 in•lbf (10 N•m)

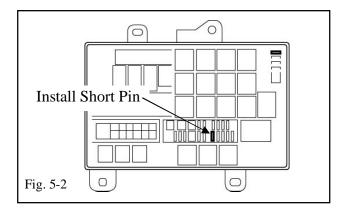



(c) Install the Short Pin (Fig. 5-2)

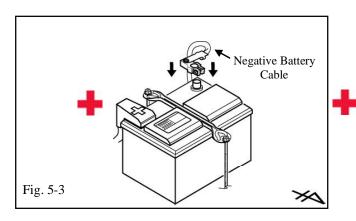


(d) Temporarily reconnect the Negative Battery Terminal. (Fig. 5-3)

DO NOT TOUCH THE POSITIVE BATTERY TERMINAL.

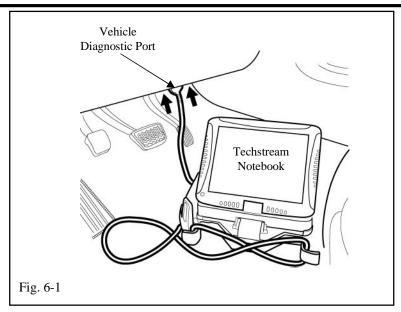

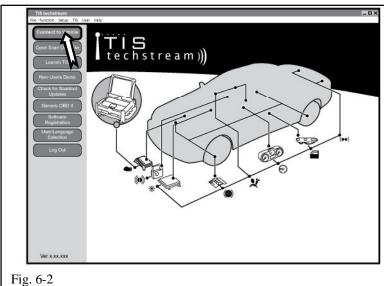

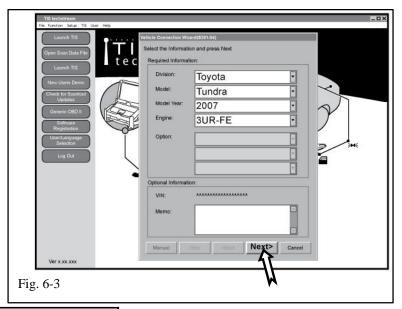

6. Registration w/Techstream Notebook.




**CAUTION:** Techstream Lite will not work for this section, use the Techstream Notebook ONLY.

- (a) Connect the TechstreamNotebook to the VehiclesDiagnostic Port. (Fig. 6-1)
- (b) Start the TIS Techstream
  Application by clicking on the shortcut located on the Desktop.
- (c) Use the Vehicle Key to turn the Vehicles Ignition Switch to "ON."
- (d) Click "Connect to Vehicle." (Fig. 6-2)


- (e) Confirm that the information displayed on the Vehicle Connection Wizard is correct for the vehicle. If not verify that the Techstream is properly connected.(Fig. 6-3)
- (f) Click "Next>." (Fig. 6-3)

Issue B: 07/28/11


Page 10 of 22 pages

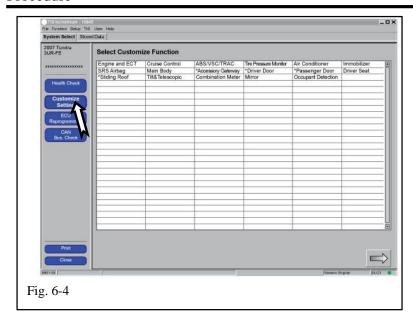


(g) Click "Customize Setting." (Fig. 6-4)

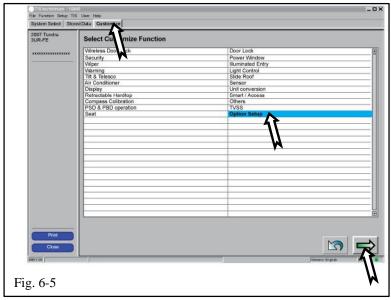



- (h) Make sure that the "Customize" tab is selected.(Fig. 6-5)
- (i) Select "Option Setup." (Fig. 6-5)
- (j) Click (Fig. 6-5)
- (k) Select "ON." (Fig. 6-6)
- (l) Click (Fig 6-6)

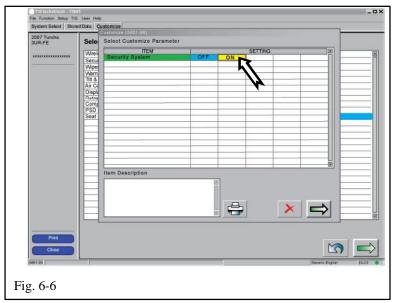

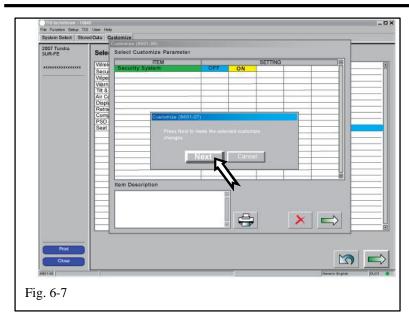


(m)Click "Next" to accept the changes to the Vehicle. (Fig. 6-7)

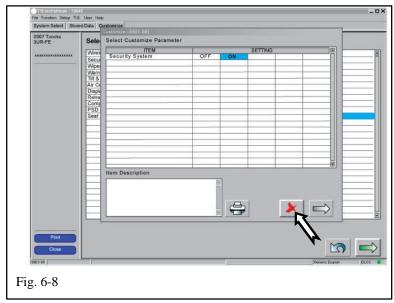

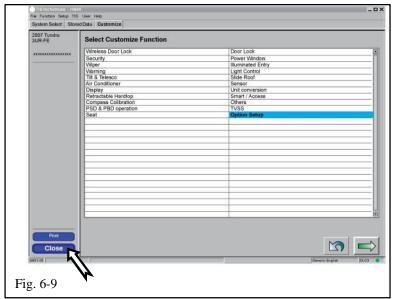

(o) Click "Close." (Fig. 6-9)

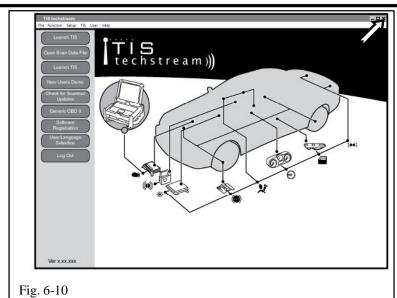

**TUNDRA** 


(p) Click (Fig. 6-10)


7. Registration w/ Scan Tool.




Ensure the Scan Tool Software is version 13.4 or later). If not, download the latest version from Toyota Information Systems (TIS)

- (a) Connect the scan tool connector to the vehicle's diagnostic connector in the right side of the lower dash area. (Fig. 7-1)
- (b) Use the key to turn the ignition to the "ON" position.
- (c) Verify the shift lever position is in "N" or "P".
- (d) Push the scan tool main switch to "ON," then press "ENTER." (Fig. 7-2)

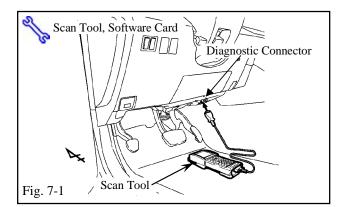


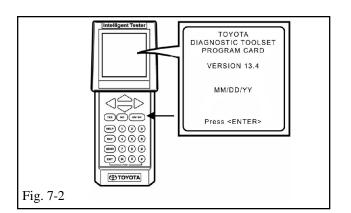

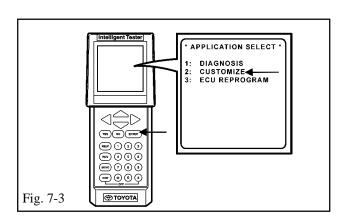


**TUNDRA** 


(e) Select "CUSTOMIZE" in the Application Select menu with the scroll key, then press "ENTER." (Fig. 7-3)

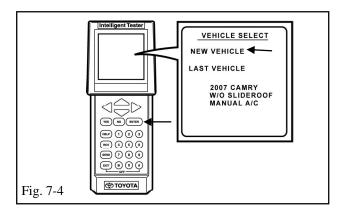


(f) Select "NEW VEHICLE" with the scroll key, and press "ENTER." (Fig. 7-4)

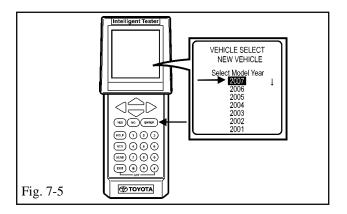


(g) Select "2007" with the scroll key, and press "ENTER." (Fig. 7-5)

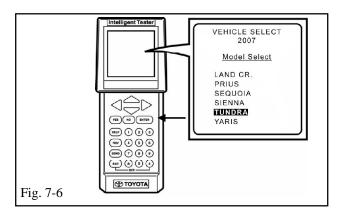


(h) Select "TUNDRA" with the scroll key, then press "ENTER." (Fig. 7-6)

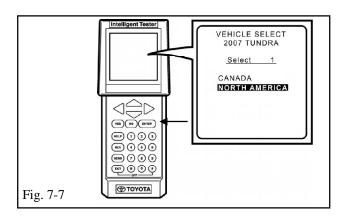


(i) Select "NORTH AMERICA" with the scroll key, then press "ENTER." (Fig. 7-7)

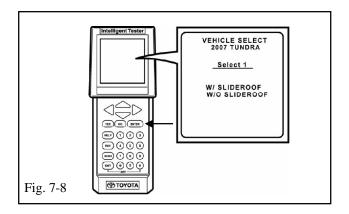


(j) Select the Slide Roof Option that is Equipped on the Vehicle with the scroll key, then press "ENTER." (Fig. 7-8)

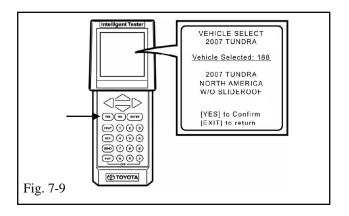


(k) Verify the Information, and press "YES." (Fig. 7-9)

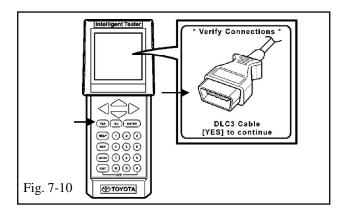


(l) Verify the connection of the DLC3 Cable. Press "YES" to continue. (Fig. 7-10)

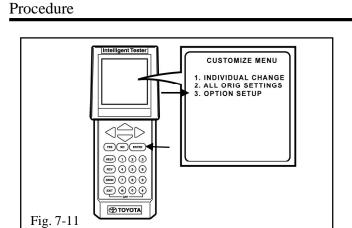


(m)In the "Customize" menu, select "OPTION SETUP" then press "ENTER." (Fig. 7-11)

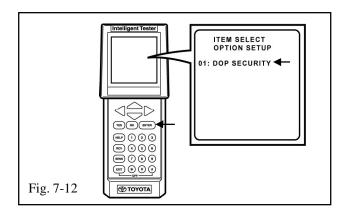


(n) Select "01: DOP SECURITY," then press "ENTER." (Fig. 7-12)

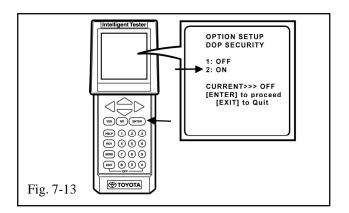


(o) Select "ON" in the "OPTION SETUP" menu with the scroll key, then press "ENTER." (Fig. 7-13)

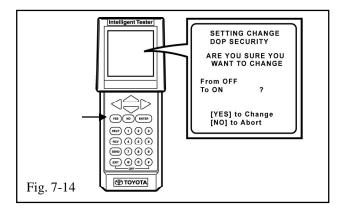

(p) Press "YES." (Fig. 7-14)

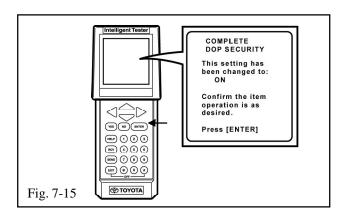

(q) Press "ENTER." (Fig. 7-15)

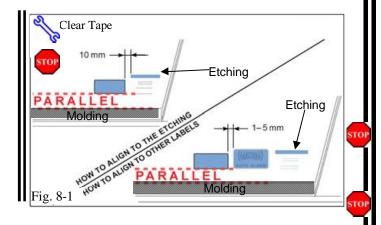

For US Vehicles use the English Labels and Dispose of the Spanish Labels.

For Mexico Vehicles use the Spanish Labels and Dispose of the English Labels.


- (a) Use Household Glass Cleaner to clean the inside of the Front Door Window. (Fig. 8-1)
- (b) Use a piece of Clear Tape to lift the Label from the protective backing.

**CAUTION:** Do not touch the adhesive surface.

(c) Attach the V5 Window Label. (Fig. 8-1)

**NOTE:** Make sure to Align according to Etching or Other Label. (Fig. 8-1)

**REPEAT:** steps a—c with the other Window.

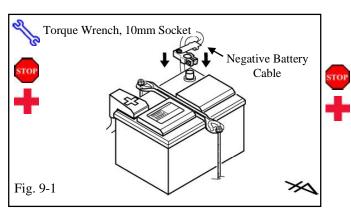

### 9. Complete the Installation

- (a) Position the Negative Battery Cable at the original factory position. (Fig. 9-1)
  - (1) Tighten the Nut to 36 in•lbf (4.7 N•m)

DO NOT TOUCH THE POSITIVE BATTERY TERMINAL.

- (b) Clean up and remove any trash.
- (c) Place the RS3200 PLUS Owner's Guide and Warranty Card, sealed in the bag, in the Glove Box.
- (d) Discard the GBS Owners Guide.

# **Accessory Function Checks**

Perform		Look For	
1	Press and release the remote control's lock button to start the system's arming process.	The turn signal lights flash once. All doors lock. The security LED lights up.	
2	Wait 30 seconds.	Security LED starts flashing; the system is now armed.	
3	Press and release the remote control's unlock button to disarm the system.	The turn signal lights flash twice. The driver's door unlocks. The Security LED stops flashing.	

Open the driver's door, insert the key into the ignition switch and turn it to "ON." Roll down all the windows, remove the key and exit the vehicle.

4	Arm and disarm the system with the remote again, then wait 30 seconds.	The doors automatically relock. The system automatically starts the arming process.
5	Press and release the remote control's unlock button again to stop the arming process.	Refer to step 3
6	Insert the key into the driver's door key cylinder and turn it toward the front of the vehicle to start the arming process.	All doors lock. The Security LED lights up.
7	Wait 30 seconds.	Security LED starts flashing; the system is now armed.
8	Reach inside and manually unlock the driver's door to trigger an alarm.	The driver's door automatically relocks. The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.
9	Manually unlock the driver's door again and hold it unlocked, open the door, then sit in the driver's seat.	The driver's door lock attempts to lock repeatedly. The horn continues to sound repeatedly. The headlights and turn signal lights continue flashing. The Security LED remains on.
10	Insert the key into the ignition switch and turn it to "START" to stop the alarm.	The horn stops sounding. All the lights stop flashing and/or turn off. The Security LED turns off. The starter cranks and the engine starts.

#### Turn the key back to "LOCK", remove it, and then exit the vehicle.

11 With the door open, press the lock switch on the door to lock the doors, then close the door to start the system's arming process.		All doors lock. The Security LED lights up.	
12	Wait 30 seconds.	Security LED starts flashing; the system is now armed.	

13	Reach inside and manually unlock the front passenger's door to trigger an alarm.	The front passenger's door automatically relocks. The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.	
14	Press and release the remote control's unlock button to stop the alarm.	The horn stops sounding. All the lights stop flashing. The Security LED stops flashing.	
15	Press and release the remote control's lock button to start the system's arming process, then wait 30 seconds until the system is armed.	Refer to steps 1 and 2.	
16	Unlock and open one of the rear passenger doors to trigger an alarm. (if available)	Refer to step 13.	
17	Press and release the remote control's unlock button to stop the alarm.	Refer to Step 14	
18	Repeat the above steps with the other rear passenger door. (if available)	Refer to steps 1, 2, and 13.	

#### Roll up all windows, remove the key and exit the vehicle.

19	Press and release the remote control's lock button to start the arming process.	Refer to step 1.	
20	Wait 30 seconds.	After 30 seconds, the Security LED starts flashing; the system is now armed.	

#### Perform the following check in a temperature-controlled environment. (50°-90° F)

21	With the tip of a key, or Striker Tool pulled all the way out (PPO only), tap the center of the driver's door window to trigger the alarm.	The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.
22	Insert the key into the driver's door key cylinder and turn it toward the back of the vehicle to stop the alarm.	Refer to Step 10

**NOTE:** If the alarm still does not trigger during the section test, increase the GBS sensitivity to the next setting and test again.

NOTE: If you do not disarm the system, the alarm will last 20 seconds. It is not necessary to check the alarm duration.

**Vehicle Function Checks** 

Issue: B 07/28/11

**TOYOTA** 2007-TVIP V5 CHECKLIST – these points **MUST** be checked to ensure a quality installation. RS3200 PLUS

		Function		Function		
En	Enter the Vehicle					
		Dome/Courtesy Lights		Steering Wheel Column Adjusts Without Interference		
		Horn		Hood Latch Release		
Sta	art the	Vehicle				
		Starter		Gauges		
		Panel/Switch Illumination		ABS Light (if equipped)  If the warning light remains on, it may indicate a system malfunction.		
		Lamp Failure Sensor  If the warning light remains on, it may indicate a system malfunction.		Track/Skid Control Light (if equipped)  If the warning light remains on, it may indicate a system malfunction.		
		Seat Belt Warning Light If the warning light remains on, it may indicate a system malfunction.		Tire Pressure Monitoring System (TPMS) (if equipped)  Prior to TPMS activation and Pre-delivery		
		Air Bag Warning Light If the warning light remains on, it may indicate a system malfunction.		Service (PDS) of the Vehicle the TPMS light will blink when IG is turned on.  After TPMS activation and PDS of the Ve-		
		Cruise Control Light (if equipped)		hicle the TPMS light will illuminate for a few seconds and go off when IG is turned on.		
U	sing a l	Mirror or Assistant check the following.	•			
		Trunk/Tailgate/Bed Lights (if equipped)		Tail Lights		
		Brake Lights		Daytime Running Lights (if equipped)		
		Backup Lights		Marker Lights		
		Clearance Sonar (if equipped)				
St	Stop the Engine, Place the Vehicle's IG in the ON position.					
		Hazard Lights		Turn Signal Lights		
		Head Light		Fog Lights (if equipped)		
		High Beams		Accessory Controls/Illumination (if equipped)		
		Power Side Mirrors (if equipped)		Convenience Memory Settings (if equipped)		
		Power Sliding Door (if equipped)		Rear Sunshade (if equipped)		

Function		Function	
	Front Wiper/Washer		Rear Wiper/Washer (if equipped)
	Power Sun/Moon Roof (if equipped)		Rollover Side Curtain Air Bag Switch (RSCA) (if equipped)
	Clock (if equipped)		Navigation System (if equipped)
	Audio/Video (if equipped)		HVAC
	Steering Wheel Audio Control (if equipped)		Rear Window Defogger (if equipped)
	Front Windshield Defogger (if equipped)		Accessory Power Socket (if equipped)
	Side Mirror Defogger (if equipped)		Heated/Vented Seats (if equipped)
	Massage Seats (if equipped)		
	Glovebox Light (if equipped)		Passenger Air Bag Switch (if equipped)
	Power Locks (if equipped)		Power Windows (if equipped)
	Power Seats (if equipped)		Key Sensor Buzzer

Remove the short pin after Function check. Check with your Port/Dealer to see if this step is necessary.

