Preparation

Part Number: PK456-00J00

NOTE: Part number of this accessory may not be the same as the part number shown.

Kit Contents

Item #	Quantity Reqd.	Description
1	4	Wheel Lock
2	1	Key
3	1	Port Stuffing Pack w/ID Card

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1	1	Key Pouch - PT276-34190

Conflicts

PK456-00J00 (black wheel lock) used for Nightshade package only.

Recommended Tools

Personal & Vehicle Protection	Notes
Safety Glasses	
•	
Special Tools	Notes
None	
Installation Tools	Notes
Socket	21mm Deep Socket
Torque Wrench	Dial type or Digital
	(76 lbf•ft. (103 N•m))
Special Chemicals	Notes
None	

General Applicability

All Factory Alloy Wheel. PK456-00J00 used for nightshade package only.

Recommended Sequence of Application

- to to a manage of the control of the production		
Item #	Accessory	
1		
2		
3		

*Mandatory

Vehicle Service Parts (may be required for reassembly)

		, J
Item #	Quantity Reqd.	Description
1		
2		
3		

Legend



STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



<u>CAUTION:</u> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.



REVISION MARK: This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.



1. Remove One Lug Nut.

(a) Remove one lug nut from each wheel (Fig. 1-1) and discard according to local scrap/recycle regulations.



(b) If studs are dirty, clean with a wire brush prior to installing wheel locks. Use Safety Glasses while using wire brush.





CAUTION: DO NOT USE IMPACT WRENCH TO INSTALL OR REMOVE WHEEL LOCKS.

- (a) By hand, install a wheel lock on each wheel.
- (b) Take the key supplied in the wheel lock set. Place it on top of the wheel lock and turn until the patterns engage (Fig. 2-1)







(c) Place the socket on top of the key. Apply pressure on the key, and using a torque wrench, tighten the wheel locks to 76 lbf•ft. (103 N•m). (Fig. 2-2).



CAUTION: DO NOT USE IMPACT WRENCH TO INSTALL OR REMOVE WHEEL LOCKS.



Torque: 103 N·m (76 ft·lbf)




3. Store the Key.

(a) Place the key in the key pouch (PT276-34190) and store in the glove box (Fig. 3-1)

Complete the Installation.

(a) Place the wheel lock information packet in the glove compartment.

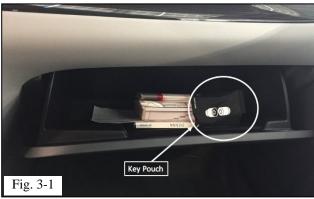

Checklist - these points **MUST** be checked to ensure a quality installation. Check: Look For: Accessory Function Checks Correct part number has been installed Verify part number on package Wheel lock tightness Wheel locks have been installed at a torque of 103 N•m (76 ft•lbf). Verify process only, Check torque during installation. Key secure in the tool tray with pouch **Key Placement** Vehicle Appearance Check After accessory installation and removal of Ensure no damage (including scuffs and protective cover(s), perform a visual scratches) was caused during the inspection. installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)