


Mirror Cover Installation Instructions for Toyota Tundra/Sequoia

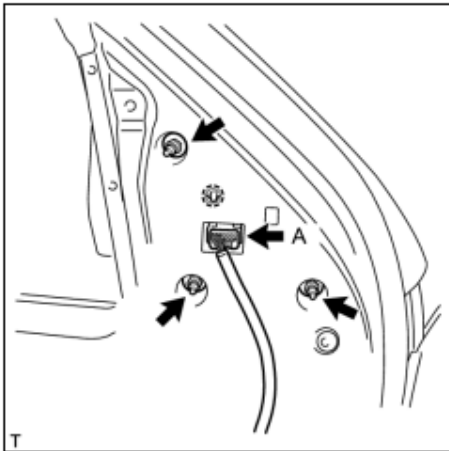


7. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY

(a) w/ Power Mirror Control System:

Disconnect the connector labeled A.

(b) Remove the 3 nuts.


(c) Detach the claw and remove the outer rear view mirror.

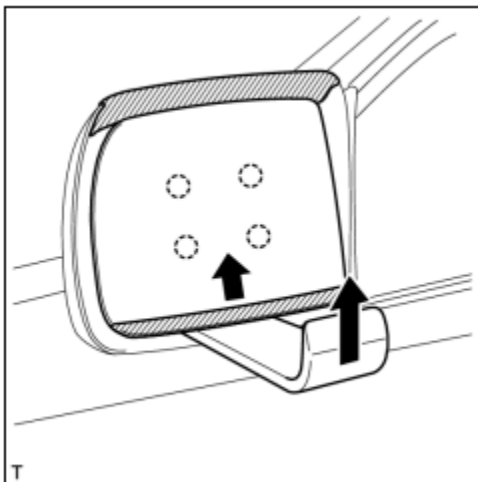

(b) Using a moulding remover, push the bottom of the glass upwards as shown in the illustration. Slide the glass upwards to detach the 4 claws, and remove the glass.


HINT:

Apply protective tape to the outer rear view mirror to prevent it from being damaged.

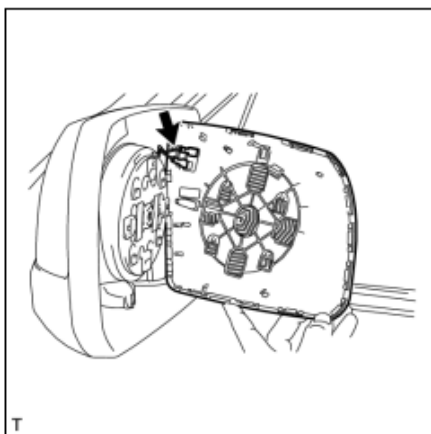

(c) w/ Mirror Heater:


Disconnect the 2 connectors and remove the mirror glass.

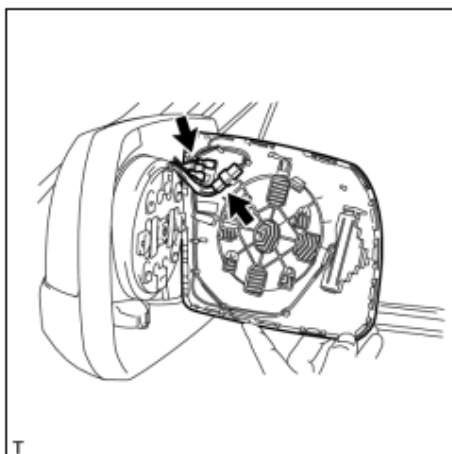

(d) w/ Retract Mirror:

Disconnect the 3 connectors and remove the mirror glass.

10. REMOVE OUTER MIRROR COVER (for Standard)

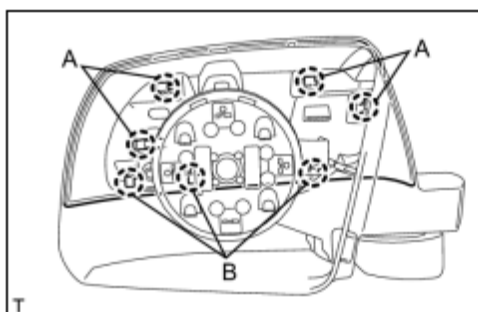

(a) Detach the 4 claws labeled A.

(b) Slightly lift up the cover to detach the 3 claws labeled B and remove the outer mirror cover.