

**Part Number: PT276-30986 (PPO)
PT276-52041 (DIO)**

NOTE: Part number of this accessory may not be the same as the part number shown.

Kit Contents

Item #	Quantity Reqd.	Description
1	4	Wheel Lock
2	1	Key
3	1	Instruction Card
4	1	ID Card
5	1	Order Form / Envelope

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
None	
Installation Tools	Notes
Socket	21 mm, Deep Well
Torque Wrench	Dial type or Digital (lbf-ft.)
Special Chemicals	Notes
None	

General Applicability


--


Recommended Sequence of Application


Item #	Accessory
1	
2	
3	


*Mandatory


Legend


 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

1. Remove One Lug Nut.



- (a) Carefully remove one lug nut from each wheel, avoid damage to wheel.

2. Install Wheel Lock.

- (a) By hand, install a Wheel Lock on each wheel.
- (b) Take the key supplied in the wheel lock set. Place it on top of the wheel lock and turn until the pattern engages.



- (c) Place the socket on top of the key. Using a torque wrench and while applying pressure on the key tighten the wheel locks to 103 N-m (76 lbf-ft). **DO NOT** use an impact wrench.



- (d) Re-check wheel lock tightness with torque wrench.

3. Key Storage




- (a) Place the wheel lock key under the lug wrench in the tool storage tray located in the rear cargo area (Fig. 3-1).

4. Complete the Installation.



- (a) Place wheel lock information packet in the glove compartment.

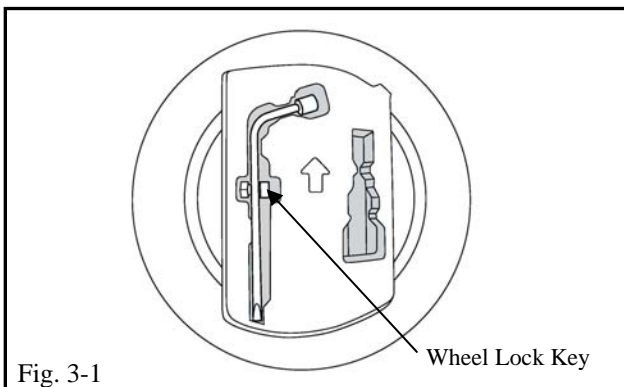

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- Correct part number has been installed.
- Wheel lock tightness

- Wheel damage
- Key Placement

Verify part number on package

Wheel locks have been installed at a torque of 103 N-m (76 lbf-ft.). Verify process only - Check torque during installation.

No damage to wheel.

Key secure in the tool tray