



**PT278-00160**




**ACCESSORIES**


Distributed by Toyota Motor Sales, U.S.A., Inc.  
Torrance, CA 90509  
©2006 Toyota Motor Sales, U.S.A., Inc.

Part# PT278-00160


**INSTRUCTION SHEET: FOR INSTALLATION OF MINI TIE-DOWN**

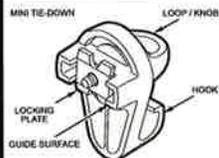


The bed rail system enables you to insert and move the mini tie-down to the best location along the bed rail to secure a load.

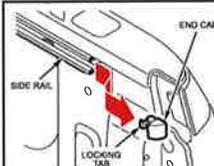


Remove (DO NOT DISCARD) end cap from side rail.

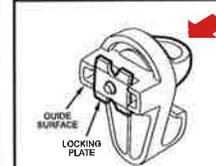

Depress the loop/knob so locking plate is equal with guide surface of the mini tie-down.

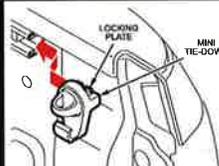

With the loop/knob depressed, slide the tie-down into the rail. Release the loop/knob once the tie-down enters the rail.

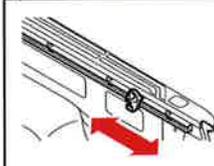

Slide mini tie-down to nearest detent position and snap into place. To move to another detent position, depress loop/knob to slide to next detent.



Tighten loop/knob in a clockwise motion until tight. Re-install end cap. Check tie-down to ensure that it is locked into detent and secure on rail.

**WARNING**  
Properly install & tighten the mini tie-downs into the bed rail system. Failure to properly install & tighten the mini tie-downs can cause cargo to become unsecured. Unsecured cargo can cause injury when the vehicle is in motion.

**WARNING**  
Properly secure all cargo to prevent shifting or sliding during driving. Failure to properly secure cargo can cause injury when the vehicle is in motion.

**CAUTION**  
Applying loads at an angle to the mini tie-down greater than 45° or loads greater than 110lbs (for the loop/knob) and 50lbs (for the hook) may cause damage to the bed, bed rail system, mini tie-down and/or the cargo.

Place this instruction sheet in glove box for future reference