 
 
 
Part #: PT398-89100

 
Conflicts:

Kit Contents

 


 
























Additional Items

(may be required)

| Item# | Description |
|-------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Recommended Sequence of Application

| Item# | Description |
|-------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Recommended Tools

| Personal & Vehicle Protection | Description |
|-------------------------------|---|
| Safety Glasses | |
| Safety Gloves | (Optional) |
| Vehicle Protection | Blankets, Parts Boxes |
| Special Tools | |
| Techstream | Use latest version on TIS |
| Installation Tools | |
| Screwdriver | #2 Phillips, Phillips Jeweler's, Flat Blade Jeweler's |
| Nylon Panel Removal Tool | e.g. Panel Pry Tool #1 Toyota SST# 00002-06001-01 |
| Side Cutters | |
| Torque Wrench | Battery : 48 in•lbf (5.4 N•m); |
| | Hood Lock Assy: 66.4 in•lbf (7.5 N•m); |
| | Passenger's Knee Airbag : 88.5 in•lbf (10 N•m) |
| Utility Knife | |
| Таре | Clear, Electrical |
| Socket | 10mm, extension |
| Pliers | Needle Nose |
| Special Chemicals | |
| Cleaner | VDC Approved Cleaner |
| Glass Cleaner | Household Glass Cleaner |

Table of Contents

| I. | Pre | eparation | 1–4 |
|-----|-----|---|-------|
| | | Table of Contents | |
| | | Wire Routing Overview | |
| II. | | ocedure | |
| | 1. | Hood Switch Installation | 5 |
| | 2. | RES ECU Preparation | 12 |
| | | Disassembly (Passenger's Area) | |
| | 4. | Disassembly (Driver's Area) | 17 |
| | | V4 ECU and Wire Harness Installation (Passenger's Area) | |
| | | V4 Wire Harness Installation (Driver's Area) | |
| | | Registration Preparation | |
| | 8. | Registration | 31 |
| | | Tags and Labels | |
| | | Complete the Installation | |
| Ш. | Che | ecklist | 38-40 |
| | | Accessory Function Checks | |
| | | Vehicle Appearance Check | |
| | | Vehicle Function Checks | |

Legend



Do not proceed until process has been completed.



Follow steps carefully to avoid damaging the Vehicle or Accessory



Use caution to avoid injury.



Used in Figures to call attention to specific tools recommended for the process.



Highlights a change in installation with respect to previous issue.



Indicates that torque is related to safety.



Video available; click to play.

Accessory Installation Practice (read before installation)

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:


- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.)
- Safety (eye protection, checking torque procedure, etc.)
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.)
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.)

Please see your Toyota dealer for a copy of this document.

PREPARATION


REMOTE ENGINE STARTER (RES)


| Description | 8P White | 8P White | 64P White | 64P White | 8P White (for RES ECU) | 24P White (for RES ECU) | 7P White | Wire Terminal (White/Black Wire) | 1P White (for Registration) | 1P White (for Registration) | White Tape Marker | 2P White | 2P White | RES ECU | Relay | Fuse | | | | | | |
|-------------|----------|----------|-----------|-----------|------------------------|-------------------------|----------|-------------------------------------|-----------------------------|-----------------------------|-------------------|----------|----------|---------|-------|----------|--|--|--|--|--|--|
| Vehicle | F15 | F15 | FN1 | FN | ı | ı | E53 | I | ı | ı | ı | I | ı | ı | I | ı | | | | | | |
| ₽ | Α | В | ပ | ۵ | Φ | Ш | ග | لـ | Σ | z | 0 | ۵ | Ø | ~ | S | — | | | | | | |

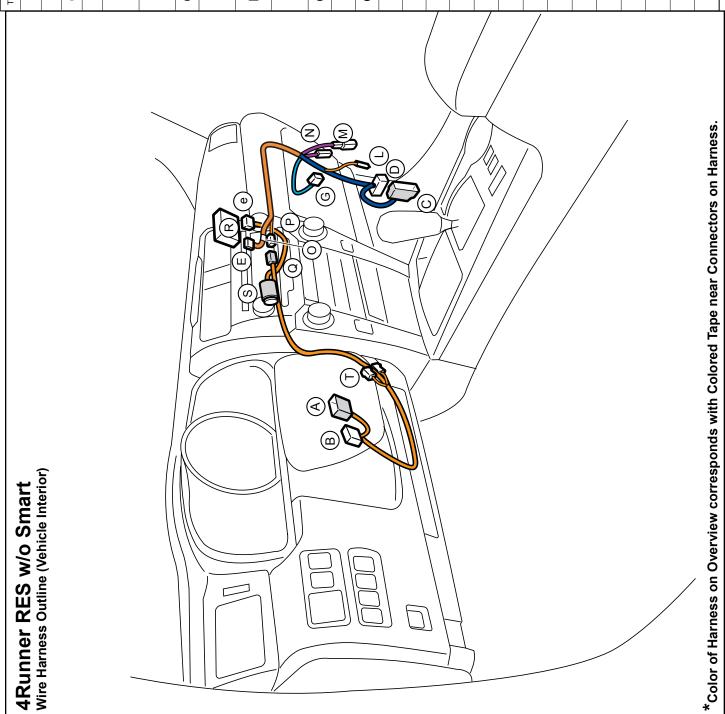

PREPARATION

REMOTE ENGINE STARTER (RES)

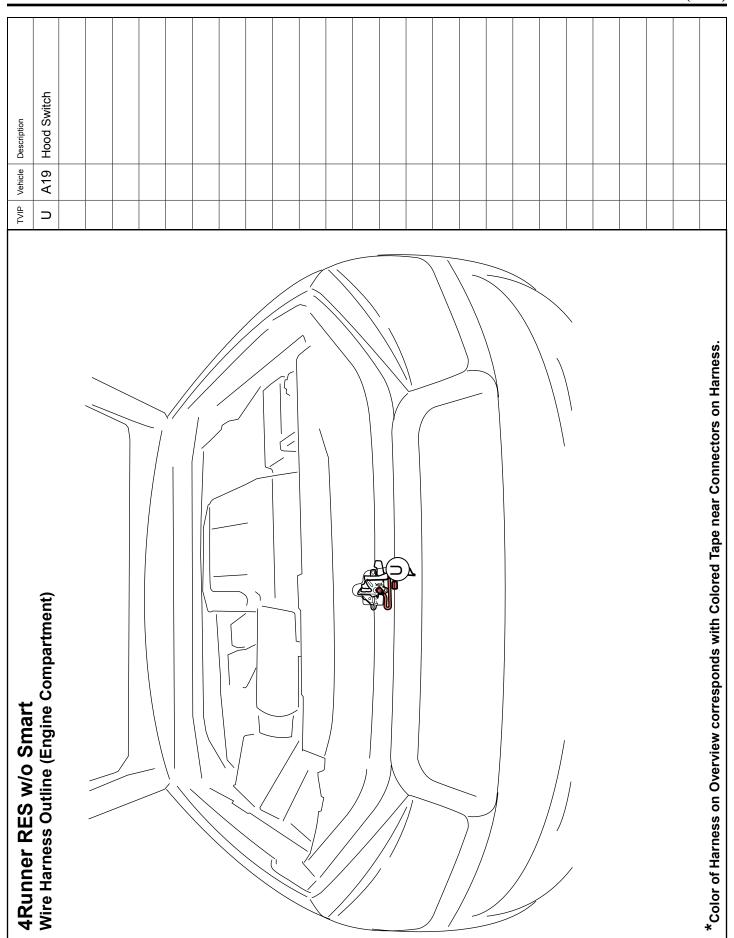

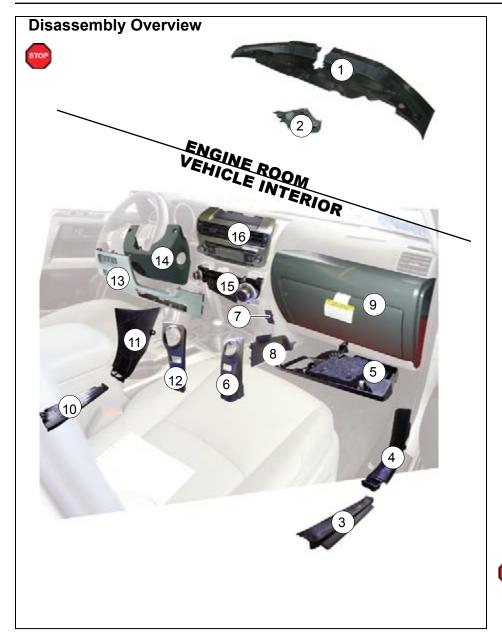

| | 1 | Engine Cover | | | | | |
|----|--|------------------------|--|--|--|--|--|
| | 2 | Hood Latch Cover | | | | | |
| | 3 | PS Step Cover | | | | | |
| | 4 | PS Cowl Cover | | | | | |
| | 5 | Glove box Under Cover | | | | | |
| | 6 | PS IP Trim | | | | | |
| | 7 | Lower Glove box Trim | | | | | |
| | 8 | PS Center Console Trim | | | | | |
| | 9 | Glove box | | | | | |
| | 10 | DS Step Cover | | | | | |
| | 11 | DS Cowl Cover | | | | | |
| | 12 | DS IP Trim | | | | | |
| | 13 | DS Lower Dash | | | | | |
| | 14 | Column Cover | | | | | |
| | 15 | A/C Panel | | | | | |
| | 16 | Audio Unit | | | | | |
| | | | | | | | |
| вт | Disconnect all Corresponding Connectors. | | | | | | |
| | | | | | | | |

 
1. Hood Switch Installation

 
- a. Verify that the Short Pin is Installed.
 - If not Install now.

Confirm the following:


Before beginning, close the Hood and the Doors. Press the remote control's lock button.








Observe the Security LED on the console

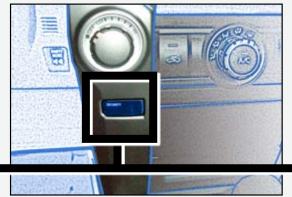



WITH ALARM (Vehicle has Hood Switch)

 Security LED starts blinking immediately



WITHOUT ALARM (Vehicle does not have Hood Switch)

- b. Place the Vehicle in Park with the Parking Brake set.
- c. Disconnect the Negative Battery Terminal.
 - · Protect the Fender.
 - Note the Battery Cable Position as it will be re-installed in the same position.



Vehicles Without Hood Switch ONLY

- d. Remove the Engine Cover.
 - Remove 12 clips.

e. Remove the 3 Bolts on the Hood Latch Cover.

f. Remove the Hood Latch Cover.

Issue C: 11/19/14 Page 7 of 41

TOYOTA

- g. Dislodge the Hood Latch Assembly.
 - Remove 3 Bolts.

h. Remove the Hood Release Cable from the Hood Latch Assembly.

- i. Dislodge the Spring on the Hood Latch Assembly.
 - Do not discard the Spring.

-

Make sure to hold Hood Switch by its sides.



Make sure the Hood Switch Lever is positioned properly.



If the Hood Switch is broken RES will not function.

Install the Hood Switch with the Switch Lever underneath the Hood Lock Trigger Lever.



CAUTION: Make sure the Hood Switch Lever is under the Latch Lever.

k. Tighten 2 Screws.

TOYOTA

PROCEDURE



Using 1 Wire Tie secure the V4 Hood Switch Harness to the Hood Latch Assembly.



Rotate the Wire Tie Lock to the inside of Hood Latch Assembly.

m. Disconnect and discard the Connector Cover from the Hood Switch Pre-Connector.

- n. Reattach the Hood Latch Spring.
- o. Reattach the Hood Release Cable.

p. Connect the Hood Switch Connector to the Vehicle's Pre-Connector.

 q. Affix the Hood Switch Connector to the Vehicle as shown.


r. Reinstall the Hood Lock Assembly.



NOTE: Make sure to Torque the Bolts in the correct sequence.

1 2 3 66.4 in•lbf (7.5 N•m)

Issue C: 11/19/14

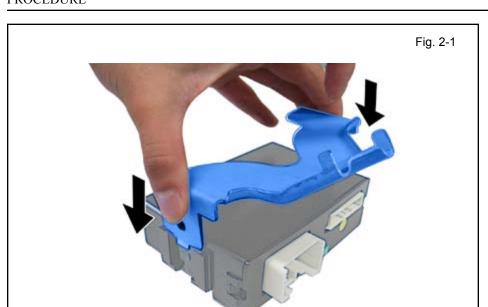

2. RES ECU Preparation

a. Attach the RES Bracket to RES ECU.

3. Disassembly (Passenger's Area)

a. Remove the PS Step Cover.

- b. Remove the PS Cowl Cover.
 - · Remove 1 Nut.

- c. Remove the Glove Box Under Cover.
 - Disconnet the LED if present.

d. Remove the PS IP Trim.

TOYOTA

e. Remove the Lower Glove Box Trim.

f. Remove the PS Center Console Trim.

- g. Dislodge the PS Knee Airbag.
 - Remove 3 Bolts.

TOYOTA

h. Wrap the Airbag in a blanket and place on the TVIP Box.

Remove the 2 Bolts from the bottom of the Glove box.

- Remove the 3 Screws from the Glove box.
 - · Open the Glove box.
 - · Remove the 3 Covers.

k. Dislodge the Glove box.

- I. Open the Harness Clamp.
- m. Dislodge the Harness Clamp.
- n. Remove the 2 Connectors.

TOYOTA

- o. Temporarily Re-install the Passenger's Knee Airbag.
 - Tighten 3 Bolts.

- 4. Disassembly (Driver's Area)
 - a. Remove the DS Step Cover.

- b. Remove the DS Cowl Cover.
 - Remove 1 Nut.

TOYOTA

- - d. Remove the 2 Bolts on the DS Lower Dash.
 - Open the cover using Flat Blade Jeweler's Screwdriver.

- e. Remove the DS Lower Dash.
 - Dislodge the Hood Release Cable.

TOYOTA

f. Remove the 2 Screws on the Steering Column Cover.

g. Dislodge the Center Clip on the Steering Column.



CAUTION: Do not force this clip as it is very easy to break.

h. Remove the Steering Column Cover.

i. Remove the A/C Panel.

- j. Remove the Audio Unit.
 - · Remove 4 Bolts.

Vehicles with Mayday ECU ONLY

k. Dislodge the Connector as shown.

TOYOTA

b. Disconnect the V4's 2P Connectors.

TOYOTA

TOYOTA

PROCEDURE

c. Route the V4 Harness through the Center Console as shown.

d. Connect the V4's 2P Male and Female Connectors together.

- e. Secure the V4's White Tape
 Marker and the 2P Connector
 to the Vehicle Harness with 1
 Wire Tie.
- f. Secure the V4 Harness's Relay to the Vehicle Harness with 1 Wire Tie.

Vehicles with Mayday ECU ONLY

g. Reconnect the Mayday ECU Connector.

h. Connect the V4's 24P and 8P Connectors to the RES ECU.

Issue C: 11/19/14

 Secure the V4 Harnesses together to the Vehicle Harness with 2 Wire Ties.



VERIFY: That the V4 Harness is positioned to avoid potential interference with Glovebox screw.

- Route the V4 Harness toward the Passenger's Cowl Area as shown.
- k. Secure the V4 Harness to the Vehicle Harness with 4 Wire Ties.

Vehicles with USB ECU ONLY

- . Remove the USB ECU.
 - Remove 2 nuts.

- m. Dislodge the Passenger's Side Junction Box (J/B).
 - Release 1 Clip.

- n. Locate the 7P Pre-connector on the backside of the Passenger's J/B.
- o. Disconnect the Vehicle's 7P Pre-connector.



CAUTION: Do not discard the pre-connector.

- p. Plug the V4 7P Connector into the Vehicle's 7P Connector.
- q. Reinstall the J/B.
- Reinstall the USB ECU (if Equipped)
- s. Using 2 Wire Ties secure the V4 Harness to the Vehicle Harness.

Using Electrical Tape secure the Vehicle's 7P Pre-connector to the Vehicle Harness.



NOTE: If the RES system is removed this Pre-connector must be re-installed.

u. Disconnect the 64P Vehicle Connector from the Passenger's Cowl area.

NOTE: Some Vehicles may have two 64P Connectors present. Make sure you disconnect the correct one.

v. Connect the V4's 64P Connectors in between the Vehicle's 64P Connectors.

w. Disconnect the 8P Vehicle Connector from the Passenger's Cowl area.

- x. Lift up the Terminal Retainer Clip.
 - · Do not pull out the Retainer.
- y. Insert the V4 White/Black Wire Terminal into the indicated location on the 8P Vehicle Connector.
- z. Close the Terminal Retainer.



· Make sure that the Terminal does not come out when pulled from the back.

aa. Reconnect the Vehicle's 8P Connector.

ab. Connect 2 Wire Ties together to make 1 long Wire Tie.

- ac. Use the Double Wire Tie to secure the V4 64P Connector to the Vehicle Harness.
 - Route the Wire Tie created around the V4 64P Connector and Vehicle Harness as shown.
- ad. Using 2 Wire Ties secure the V4 Harness to the Vehicle Harness.



NOTE: Do not secure the RES Diagnostic Connectors.

6. V4 Wire Harness Installation (Driver's Area)

- Using 2 Wire Ties secure the V4 Harness to the Vehicle Harness.
- b. Using 1 Wire Tie secure the V4 Harness to the Vehicle Brace.

- Using 2 Wire Ties secure the V4 Fuse to the Vehicle Harness near the Harness Clamp.
- d. Using 2 Wire Ties secure the V4 Harness to the Vehicle Harness.

- e. Remove the Vehicle's 8P Connector from the steering area.
- Remove the Vehicle's 2P Connector from the steering area.

TOYOTA

- g. Connect the V4 8P Connectors in between the Vehicle's 8P Connectors.
- h. Re-Connect the Vehicle's 2P Connector.

- Using 1 Wire Tie secure the V4 8P Connector to the Vehicle Harness.
- Using 2 Wire Ties secure the V4 Harness to the Vehicle Harness.



NOTE: Make sure the V4 Harness is routed along the Vehicle Harness as shown.

Issue C: 11/19/14 Page 30 of 41

7. Registration Preparation

a. Partially reassemble the Vehicle.



VERIFY: That panels fit together properly, with no uneven gaps.



VERIFY: That all Connectors are plugged in.




CAUTION: Make sure to Torque the 3 Bolts of the PS Knee Airbag to 88.5 in•lbf (10 N•m).

- b. Verify that the Short Pin is Installed.
 - · If not Install now.



8. Registration


- a. Open the Hood.
- b. Temporarily reconnect the Negative Battery Cable.
- **CAUTION:** Do not touch the Positive Terminal.

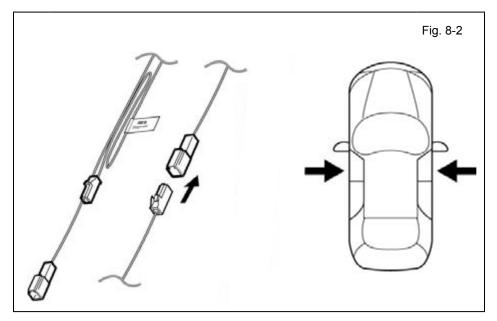

c. Locate the 1P RES
 Diagnostic Connectors in the Passenger's Side
 Cowl Area and connect them.

NOTE: Once connected you will have 10 minutes to complete this section, steps d—ac.


d. Close all doors.

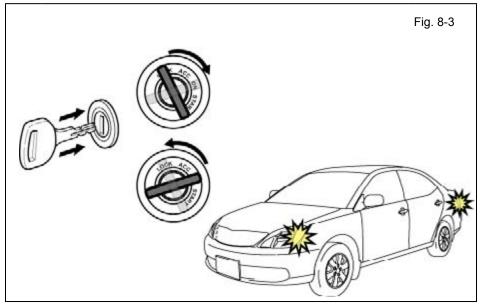

- e. Insert the key into the Ignition.
- f. Turn it from "OFF" to "ON" 5 times.


LOOK: For the Hazard Lights to flash Once.

g. Turn the key to the "OFF" position.

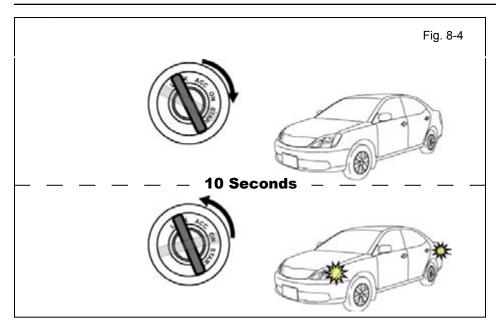

- h. Start the Engine.
- i. After 10 seconds stop the Engine.


LOOK: For the Hazard Lights to flash Once.

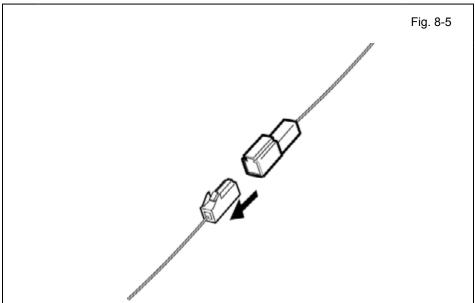

IF THIS PROCEDURE FAILED

The Hazard Lights don't flash or flashes Twice.


- Disconnect the V4 Harness's 1P RES Diagnostic Connectors.
- · Start again from step c.

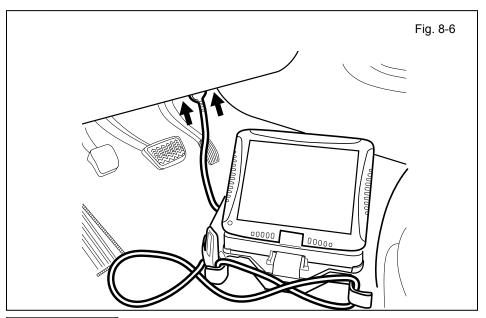

- Connect the Techstream Notebook to the Vehicle's Diagnostic Port.
- k. Turn the Key in the Ignition to the "ON" position.

Issue C: 11/19/14

Page 33 of 41

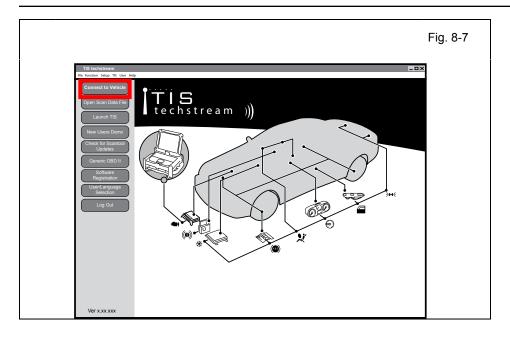


- Start the TIS Techstream Application by clicking on the shortcut located on the Desktop.
- m. Click "Connect to Vehicle"


- n. Confirm that the information displayed on the Vehicle Connection Wizard is correct for the vehicle. If not verify that the Techstream is properly connected.
- o. Select w/o Smart Key.
- Select w/ KDSS or w/o KDSS depending on the Vehicles Specification.
- q. Click "Next>."

| | | | | | | | Fig. 8-9 |
|--|---|-------------------------------|--------------------|-----------|----------------|--------------|----------|
| File Function Setup TIS System Select Stores | User Help | | | | | 0 | × |
| XXXX XXXXXXXX XXX-XX XXXXXXXXXXXXXXXXX | System Selection Menu Select desired system and then pre System System White = ECU comn *System White w/Asterisk = | us unknown. nunication OK. | or not responding. | | | | |
| Customize Setting | | SRS Arroag Smart Key | Occupant Detection | Back Door | D Door Motor | Sliding Roof | |
| ECU Reprogramming | | | | | | | |
| CAN Bus. Check | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| This ECU controls keyless entry and starting engine with the detection SmartKey. | | | | | | | |
| Print Main Menu | | | | | Generic Englis | | |


- r. Select "Body Electrical" tab.
- s. Select "Remote Engine Starter."
- t. Click

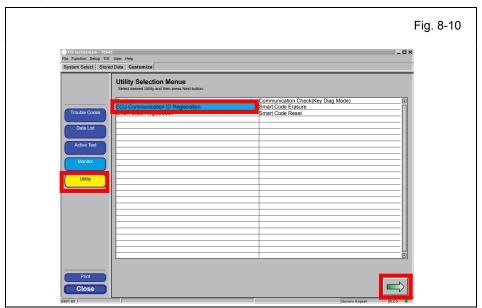


- u. Select "Utility."
- v. Select "ECU Communication ID Registration."
- w. Click

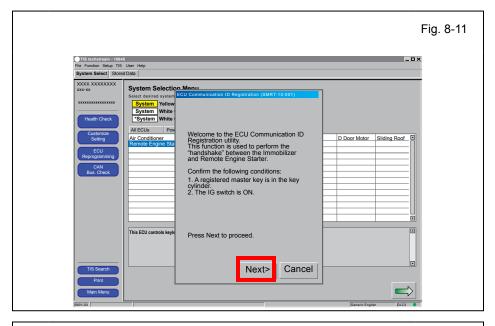

x. Click "Next>."

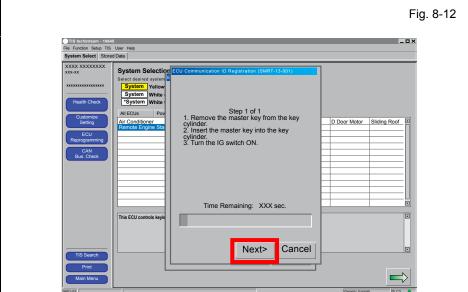


- y. Follow the steps on the Techstream.
- z. Click "Next>."

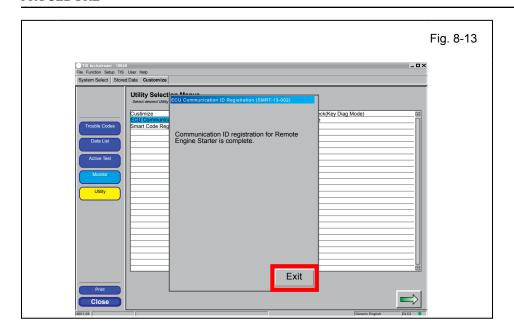

CONFIRM: That the ECU Communication ID was completed successfully.

aa. Click "Exit."

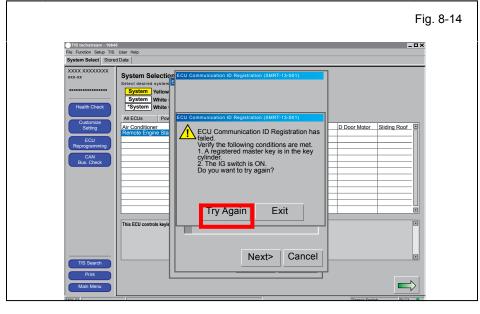

IF THIS PROCEDURE FAILED

- · Click "Try Again"
- · Start again from step u.

- ab. Exit the vehicle.
- ac. Close the Hood.
- ad. Look for the Hazards to flash Twice.

IF THIS PROCEDURE FAILED

The Hazard Lights flash Three Times.

- Disconnect the V4 Harness's 1P RES Diagnostic Connectors.
- · Start again from step c.

- ae. After a successful Registration, disconnect the 1P RES Diagnostic Connectors.
- af. Using Electrical Tape secure the Female Connector and Harness to the Vehicle Harness.

9. Tags and Labels

- For US Vehicles use the English Tags and Labels, and discard the Spanish Tags and Labels.
- For Mexico Vehicles use the Spanish Tags and Labels, and discard the English Tags and Labels.
 - Using VDC approved cleaner and cleaning method, clean the area indicated on the Underside of the Hood.
 - b. Attach the Engine Room Warning Label as shown.



CAUTION: Do not touch the adhesive surface.

- Using VDC approved cleaner and cleaning method, clean the indicated area on the key.
- d. Use a piece of Clear Tape to lift the label off its protective backing.




CAUTION: Do not touch the adhesive surface.

- e. Attach the Key Label as shown.
- f. Attach the Key Tag.

REPEAT: steps c–f with the other Key.



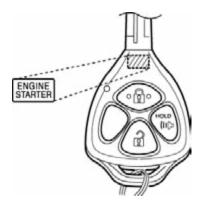

- g. Use Household Glass
 Cleaner to clean the inside of the Front Door Windows.
- h. Use a piece of Clear Tape to lift the Label from the protective backing.



CAUTION: Do not touch the adhesive surface.

Attach the Label as shown.



NOTE: Make sure to Align according to Etching or Other Label.

REPEAT: steps g—i with the other Window.

10. Complete the Installation

 Position the Negative Battery Cable at the original factory position.



Torque: 5.4 N·m (48 in•lbf)



CAUTION: Do not touch the Positive Terminal.

b. Finish reassembling the Vehicle.



VERIFY: That panels fit together properly, with no uneven gaps.



VERIFY: That all Connectors are plugged in.

- c. Clean up and Remove trash.
- d. Sealed in its protective bag, place the Owner's Manual in the Glove box.

TOYOTA

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

Accessory Function Checks

Close the hood, enter the vehicle and close all doors. Place the shift lever in the "P" (Park) position, set the parking brake and make sure the Vehicle is off.

| | Perform | Look For |
|---|--|---|
| 1 | Press the remote control's lock button twice within 2 seconds, then press and hold the lock button for 3 seconds. | The hazard lights flash after 3 seconds. The engine starts. The hazard lights flash repeatedly for 10 seconds. |
| 2 | With the engine running, pull the hood release handle. NOTE: Some Vehicles may require you to exit the Vehicle and pull up on the Hood. | The engine stops. The hazard lights flash once. The security alarm triggers. (Only if equipped with OE Factory Alarm, not Genuine Accessory alarm, and only if armed) |
| 3 | Move the shift lever out of "P" (Park). Attempt to start the Vehicle using the remote. | The engine does not start. |

Vehicle Appearance Check

| Perform | Look For |
|--|---|
| After accessory installation and removal of protective cover(s), perform a visual inspection of the vehicle. | Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.) |

2010-2011 ||

TVIP V4
REMOTE ENGINE STARTER (RES)

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

Vehicle Function Checks

| | | Function | | Function |
|-----|-----------|--|------|--|
| En | ter the | Vehicle | | |
| | | Dome/Courtesy Lights | | Steering Wheel Column Adjusts Without Interference |
| | | Horn | | Hood Latch Release |
| Sta | art the \ | /ehicle | | |
| | | Starter | | Gauges |
| | | Check Engine Light If the warning light remains on, it may indicate a system malfunction. | | ABS Light (if equipped) If the warning light remains on, it may indicate a system malfunction. |
| | | Lamp Failure Sensor If the warning light remains on, it may indicate a system malfunction. | | Track/Skid Control Light (if equipped) If the warning light remains on, it may indicate a system malfunction. |
| | | Seat Belt Warning Light If the warning light remains on, it may indicate a system malfunction. | | Tire Pressure Monitoring System (TPMS) Prior to TPMS activation and Pre-delivery |
| | | Air Bag Warning Light If the warning light remains on, it may indicate a system malfunction. | | Service (PDS) of the Vehicle the TPMS light will blink when IG is turned on. After TPMS activation and PDS of the Ve- |
| | | Cruise Control Light (if equipped) | | hicle the TPMS light will illuminate for a few seconds and go off when IG is turned on. |
| | | Mayday ECU (if equipped) | | |
| Us | sing a N | lirror or Assistant check the following. | | |
| | | Trunk/Tailgate/Bed Lights (if equipped) | | Tail Lights |
| | | Brake Lights | | Daytime Running Lights (if equipped) |
| | | Backup Lights | | Marker Lights |
| | | Clearance Sonar (if equipped) | | |
| St | op the | Engine, Place the Vehicle's IG in the ON posit | ion. | |
| | | Hazard Lights | | Turn Signal Lights |
| | | Head Light | | Fog Lights (if equipped) |
| | | High Beams | | Accessory Controls/Illumination (if equipped) |
| | | Power Side Mirrors (if equipped) | | Convenience Memory Settings (if equipped) |

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

| Function | Function |
|--|---|
| Front Wiper/Washer | Rear Wiper/Washer (if equipped) |
| Power Sun/Moon Roof (if equipped) | Rollover Side Curtain Air Bag Switch (RSCA) (if equipped) |
| Clock (if equipped) | Navigation System (if equipped) |
| Audio/Video (if equipped) | USB Connections (if Equipped) |
| Steering Wheel Audio Control (if equipped) | HVAC |
| Front Windshield Defogger (if equipped) | Rear Window Defogger (if equipped) |
| Side Mirror Defogger (if equipped) | Accessory Power Socket (if equipped) |
| Massage Seats (if equipped) | Heated/Vented Seats (if equipped) |
| | |
| Glove box Light (if equipped) | Passenger Air Bag Switch (if equipped) |
| | |
| Power Locks (if equipped) | Power Windows (if equipped) |
| Power Seats (if equipped) | Key Sensor Buzzer |

