Preparation

Part Number: PT413-42191 (Black, Aluminized) PT413-42190 (Fully Aluminized)

Kit Contents

Item #	Quantity Reqd.	Description
1	1	RH LED Fog Light
2	1	LH LED Fog Light
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

None

Recommended Tools

Personal & Vehicle	Notes
Protection	
Blankets	
Special Tools	Notes
Installation Tools	Notes
Screwdriver	#2 Phillips
Ratchet	
Socket Extension	
Socket	10mm
Small Nylon Removal Tool	i.e. Panel Pry Tool #1 Toyota SST#00002-06001- 01
Torque Wrench	5.4 N-m (48 in-lbs)
Special Chemicals	Notes

General Applicability

Issue: B 02/25/2020

MY18 and newer Highlander, Highlander HV models

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

STOP

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



<u>CAUTION:</u> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.



<u>REVISION MARK:</u> This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.



REGULATORY MARK: This mark indicates the component is related to regulatory compliance

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-


- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).

HIGHLANDER/HV

- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.


1. Prepare the vehicle.

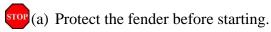


(b) The engine components and coolant may be hot.

LED FOG LIGHTS

- (c) Check the kit for contents and any damage.
- (d) Remove the battery cable from the negative terminal (Fig. 1-1)
- **CAUTION:** Do not touch the positive terminal with any tool during removal.

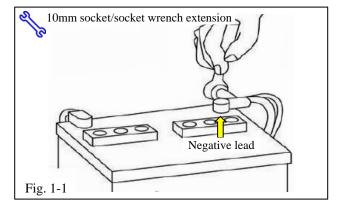


10mm socket/socket wrench extension

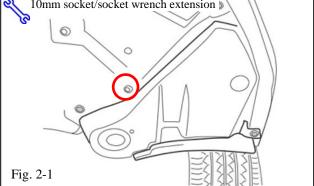

2. Remove the Body Panel.


- (a) Raise the vehicle on a lift.
- (b) Remove the indicated bolt (Fig. 2-1).

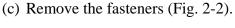

NOTE: Fasteners will be reused.

(d) Remove the panel and place it in a safe location.


LED FOG LIGHTS

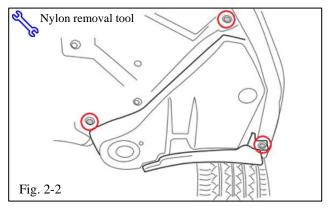


HIGHLANDER/HV

3. Remove the Fog Light.

- (a) Disconnect fog light harness indicated by the circle (Fig. 3-1).
 - (1) Press the tab and pull the connector in the direction indicated by the arrow.

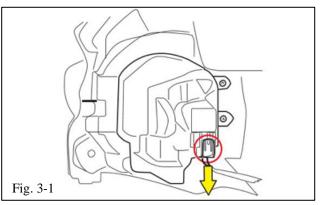


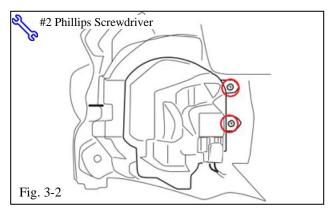


(b) Remove the Phillips screws indicated by the circles (Fig. 3-2).

 \triangle

NOTE: The screws will be reused to install the LED fog light.

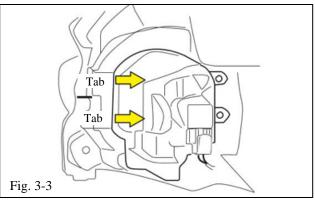


(c) Slide original equipment fog light off of the guides in the direction indicated (Fig 3-3).

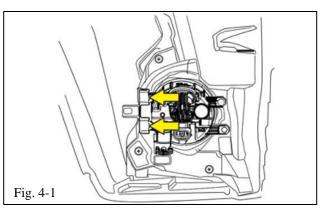


4. Install the LED Fog Lights.


(a) Insert the LED fog light in to the guides (Fig. 4-1).

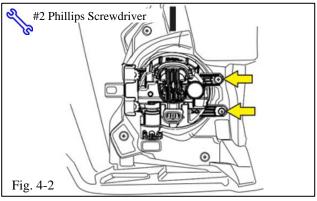


(b) Secure with screws removed and saved from Step 3b (Fig 4-2).

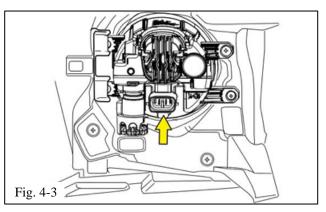


(c) Reconnect the harness disconnected in Step 3a (Fig. 4-3).

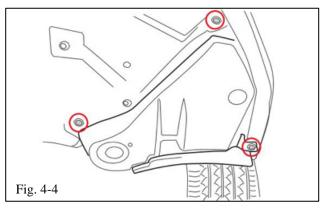


(d) Reinstall the body panel removed in step 2 by reinstalling the fasteners in the locations indicated (Fig. 4-4).

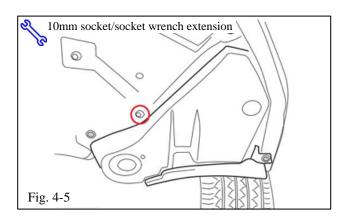

HIGHLANDER/HV

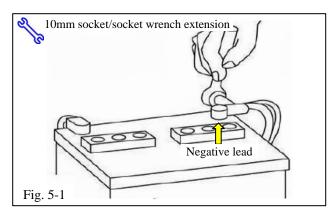

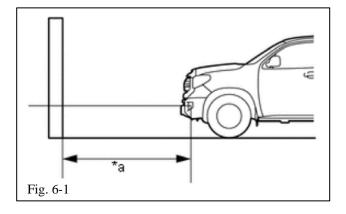


(e) Reinstall the bolt in the location indicated (Fig. 4-5).

LED FOG LIGHTS

(f) Repeat the procedure on the opposite side.

5. Reconnect the Battery.

(a) Reconnect the negative (-) battery cable (Fig. 5-1).

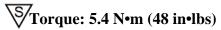

CAUTION: Do not touch the positive terminal with any tool.

6. Adjust the LED Fog Light.

(a) Prepare the vehicle for fog light aiming adjustment (Fig. 6-1).

NOTE: *a: Distance of 7.62 m (25.0 ft.) between the vehicle (fog light bulb center) and wall. If unavailable, secure exactly 3m (9.84 ft.) for the adjustment (the target zone will change with the distance, so follow the instructions in the illustration (Fig. 6-2)).

- (1) Make sure that there is no damage to or deformation of the body around the fog lights.
- (2) Fill the fuel tank.
- (3) Make sure that the oil is filled to the specified level.

HIGHLANDER/HV


Aligning distance is 7.62 Aligning distance is 3 m: VRH Line 7.62 m Fig. 6-2

Issue: B 02/25/2020

(4) Make sure that the coolant is filled to the specified level.

LED FOG LIGHTS

- (5) Inflate the tires to the appropriate pressures.
- (6) Unload the vehicle, ensuring that the spare tire, tools and jack are in their original positions.
- (7) Have a person of average weight (68 kg, 150 lb) sit in the driver seat.
- (b) Prepare for fog light aiming.
 - (1) Place the vehicle in a location that is dark enough to clearly observe the cutoff line. The cutoff line; below which light from the fog lights can be observed and above which it cannot.
 - (2) Place the vehicle at a 90° angle to the wall.
 - (3) Create a 7.62 m (25.0 ft.) distance between the vehicle (fog light bulb center) and the wall (Fig. 6.2).
 - (4) Make sure that the vehicle is on a level surface.
 - (5) Bounce the vehicle up and down to settle the suspension.
- (c) Prepare a piece of thick white paper approximately 2.0 m (6.56 ft.) (height) x 4.0 m (13.1 ft.) (width) screen.
- (d) Draw a vertical line down the center of the screen (V line).

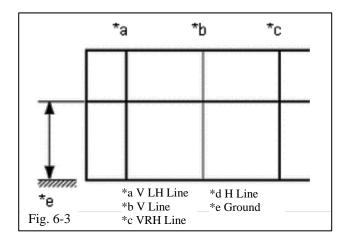



- (e) Set the screen as shown (Fig. 6-2).
- (f) Draw base lines (H line, V LH, V RH lines on the screen as shown (Fig. 6-3).
 - (1) H Line (Fog light height): Draw a horizontal line across the screen so that it passes through the center marks. The H line should be at the same height as the fog light bulb center marks of the fog lights.
 - (2) V LH Line, V RH Line (Center mark position of left-hand (LH) and right-hand (RH) fog lights): Draw two vertical lines so that they intersect the H line at each center mark.
- (g) Inspect fog light aiming.
 - (1) Cover the fog light or disconnect the connector of the fog light on the opposite side to prevent light from light that is not being inspected from affecting the fog light aiming inspection.



NOTE: Do not keep the fog light covered for more than 3 minutes. The fog light lens is made of synthetic resin may melt or be damaged due to excessive heat.


- (2) Start the engine.
- (3) Turn on the fog light and check if the cutoff line falls within the specified area (Fig. 6-4).

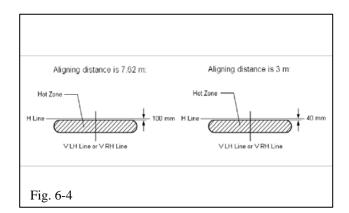

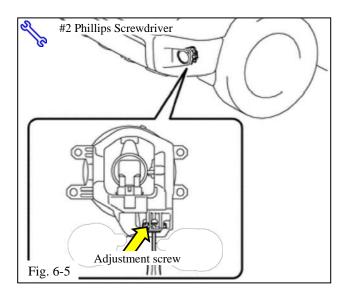

- (h) Adjust fog light aiming.
 - (1) Adjust the aim vertically (6-5).
 - (2) Adjust the aim of each fog light to the specified range by turning the aiming screw with a screwdriver.

LED FOG LIGHTS

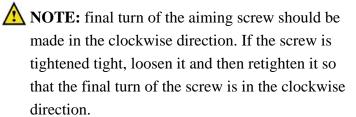

(3) If it is not possible to correctly adjust fog light aim, check the bulb, fog light unit and fog light unit reflector installation.

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
Accessory Function Checks	
Install a short pin (if necessary)	Headlights function as normal
Turn the headlights on	Switch lights up
Check the fog light switch illumination	Fog lights turn on
Turn the fog lights on	High beams on/Fog lights off
Switch the high beams on	Headlights and fog lights turn off
Turn the headlights off	
Vehicle Function Checks	
Taillights/brake lights/turn signals	All function properly
Reverse lights & emergency flashers	Function properly
Mirror & dimmer controls	Function properly
Traction control	Functions properly
Negative battery cable torque	5.4 N-m (48 in-lbs)
Vehicle Appearance Check	
After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process.
	(For PPO installations, refer to TMS Accessory Quality Shipping Standard.)