

Part Number: PTR05-34070

Kit Contents

Item #	Quantity Req'd.	Description
1	1	Performance Air Filter
2	1	Warning Label
3	1	Cleaning & Oiling Instructions

Additional Items Required For Installation

Item #	Quantity Req'd.	Description
1		

Conflicts

PPO Code	Description
None	N/A

Recommended Tools

Safety Tools	
Safety Glasses	or Goggles
Special Tools	
Vehicle Protection	Blankets
Installation Tools	
None	
Special Chemicals	
Toyota Approved Cleaner	Prep Solvent 70 or similar

Color Applicability/Trim Level

N/A										
Accessory Color Vehicle/Trim Color	N/A									
N/A										

General Applicability

 

 

 
Tundra with 4.7L & 5.7L V8, 2007 →

Recommended Sequence of Application

Item #	PPO Code	Accessory
	None	N/A

*Mandatory

Legend

-  **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.
-  **OPERATOR SAFETY:** Use caution to avoid risk of injury
-  **CRITICAL PROCESS:** Proceed with caution to ensure a quality installation. These points will be audited on a completed vehicle installation
-  **GENERAL PROCESS:** This highlights specific processes to ensure a quality installation. These points will be audited during the accessory installation
-  **TOOLS & EQUIPMENT:** This calls out the specific tools and equipment required for this process

A. Check Box Contents

1. Check box for contents and/or damage.


B. Vehicle Preparation



1. Use blankets to protect the front grille and passenger-side front fender area.

C. Removal Procedure: OE Air Filter


1. Remove the factory air filter.
 - i. Unlatch four air filter housing clips. (Fig. C1)

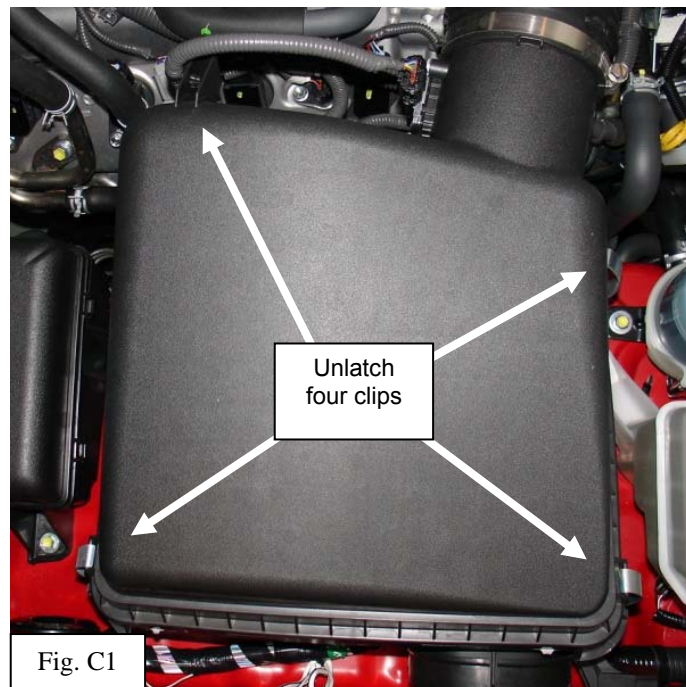

- ii. Lift air filter housing lid up to expose factory air filter. (Fig. C2)



- iii. Remove factory air filter from air filter housing and discard filter. (Fig. C2)

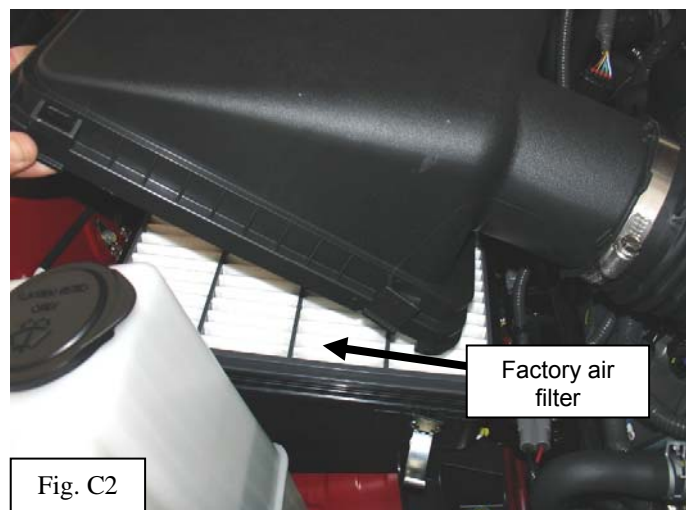


D. Installation Procedure: TRD Air Filter

1. Install the TRD air filter.




- i. Insert the TRD air filter into the air filter housing with the deep side of the filter down in the housing. (Fig D1)

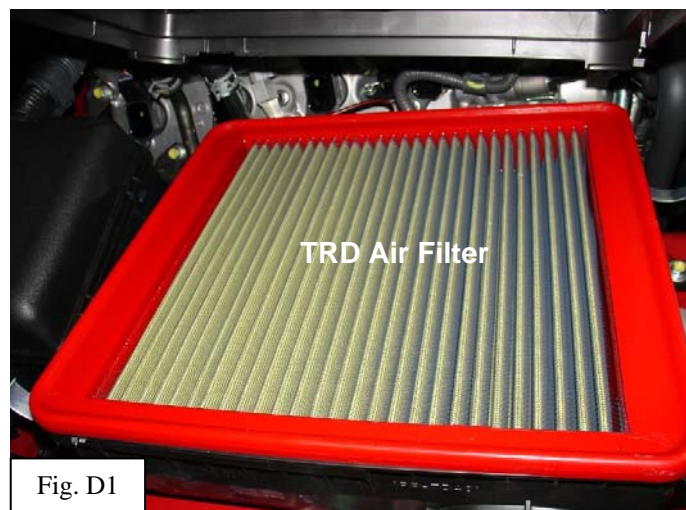

- ➡ ii. Move air filter housing lid into place. (Fig. D2)
- iii. Re-latch all four air filter housing clips. (Fig. C1)



- ➡ 2. Use a lint free cloth and a Toyota approved cleaner such as 3M Prep Solvent 70 or similar to clean the air filter housing lid adjacent to the intake duct. (Fig. D3)
- ➡ 3. Use a lint free cloth and water to clean the same area as in Step 2 above. (Fig. D3)

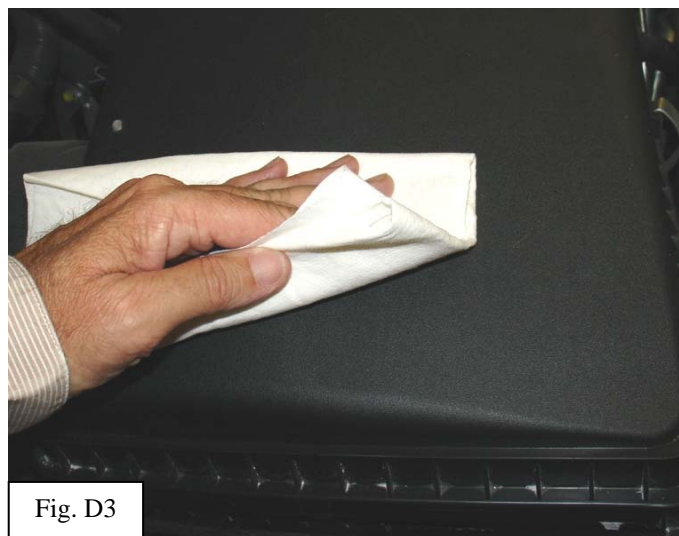

- ⚠ 4. Apply TRD air filter warning label to area pre-cleaned from the steps above. (Fig. D4)

E. Post Installation

- 1. Remove blankets from front fender and grille area.
- ⚠ 2. Place “Performance Air Filter Cleaning & Oiling Instructions” in vehicle glove box for customer’s future reference.





Section III – Functional Verifications

Check: _____



Air Filter Housing Lid



Glove box

Look For: _____

- Re-usable air filter warning label
- Performance Air Filter Cleaning & Oiling Instructions.