

**Part Number: PTR05-52070****Kit Contents**

Item #	Quantity Req'd.	Description
1	1	Performance Air Filter
2	1	Warning Label
3	1	Cleaning & Oiling Instructions

**Additional Items Required For Installation**

Item #	Quantity Req'd.	Description
1		

**Conflicts**

PPO Code	Description
None	N/A

**Recommended Tools**

<b>Safety Tools</b>	
Safety Glasses	or Goggles
<b>Special Tools</b>	
Vehicle Protection	Blankets
<b>Installation Tools</b>	
None	
<b>Special Chemicals</b>	
Toyota Approved Cleaner	3M™ Prep Solvent-70 (DIO) VDC Approved Cleaner (PPO)

**Color Applicability/Trim Level**

Accessory Color														
Vehicle/Trim Color	N/A													
N/A														

**General Applicability**




 

YARIS: 2006 →
SCION xD: 2008 →

**Recommended Sequence of Application**

Item #	PPO Code	Accessory
	None	N/A

\*Mandatory

**Legend**

	<b>STOP:</b> Damage to the vehicle may occur. Do not proceed until process has been complied with.
	<b>OPERATOR SAFETY:</b> Use caution to avoid risk of injury
	<b>CRITICAL PROCESS:</b> Proceed with caution to ensure a quality installation. These points will be audited on a completed vehicle installation
	<b>GENERAL PROCESS:</b> This highlights specific processes to ensure a quality installation. These points will be audited during the accessory installation
	<b>TOOLS &amp; EQUIPMENT:</b> This calls out the specific tools and equipment required for this process

Section II – Installation Procedure

**A. Check Box Contents**

1. Check box for contents and/or damage.

**B. Vehicle Preparation**



1. Use blankets to protect the front grille and driver-side front fender area.

**C. Removal Procedure: OE Air Filter – 2008 Scion xD Shown**

1. Remove the factory air filter.
  - i. Unlatch two air filter housing clips. (Fig. C1)
  - ii. Lift air filter housing lid up to expose factory air filter. (Fig. C2)
  - iii. Remove factory air filter from air filter housing and discard filter. (Fig. C2)



**D. Installation Procedure: TRD Air Filter – 2008 Scion xD Shown**

1. Install the TRD air filter.
  - i. Insert the TRD air filter into the air filter housing with the deep side of the filter down in the housing. (Fig D1)
  - ii. Position filter so that TRD part number is at the driver side of the vehicle. (Fig. D1)
  - iii. Move air filter housing lid into place.
  - iv. Re-latch two air filter housing clips. (Fig. C1)

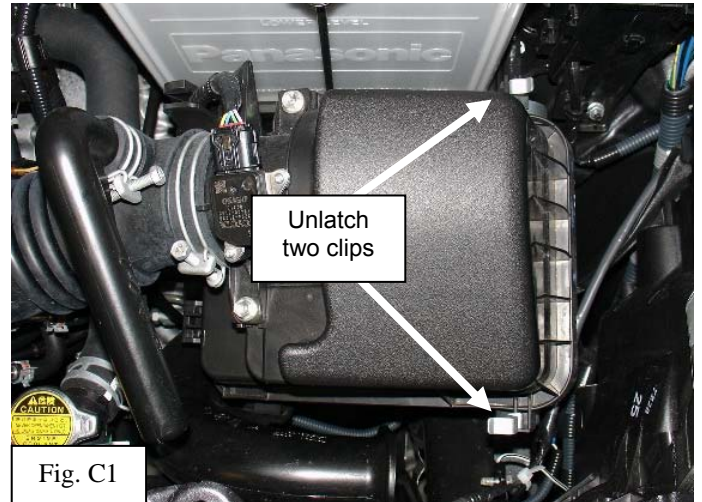


Fig. C1

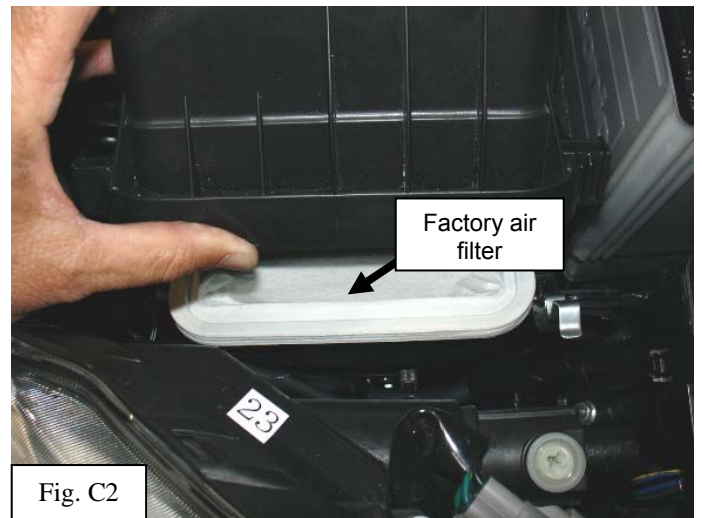


Fig. C2

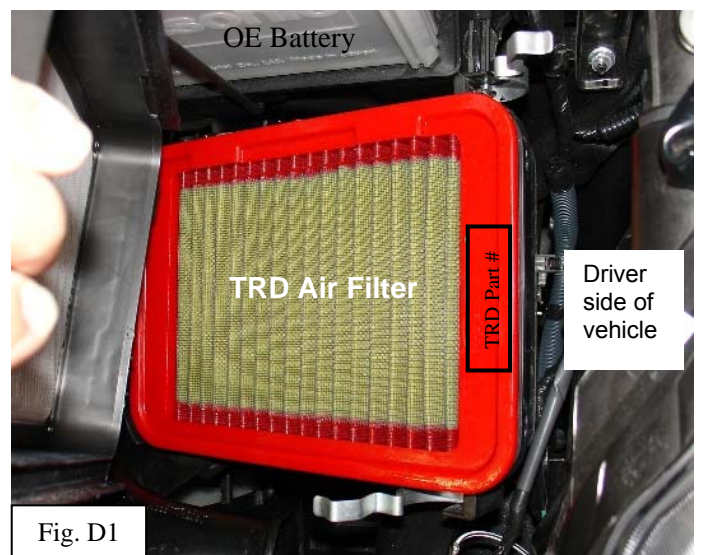


Fig. D1

**Section II – Installation Procedure**

- ➔ 2. Use a lint free cloth and a Toyota approved cleaner such as 3M™ Prep Solvent-70 (DIO)/ VDC approved cleaner (PPO) to clean the air filter housing lid adjacent to the intake duct. (Fig. D2)
- ➔ 3. Use a lint free cloth and water to clean the same area as in Step 2 above. (Fig. D2)
- ⚠ 4. Apply TRD air filter warning label to area pre-cleaned from the steps above. (Fig. D3).



Fig. D2



Fig. D3

**E. Post Installation**

1. Remove blankets from front fender and grille area.
- ⚠ 2. Place “Performance Air Filter Cleaning & Oiling Instructions” in vehicle glove box for customer’s future reference.



Section III – Functional Verifications

Check: \_\_\_\_\_



Air filter direction



Air filter housing lid



Glove box

Look For: \_\_\_\_\_

- TRD part number towards driver side
- Re-usable air filter warning label
- Performance Air Filter Cleaning & Oiling Instructions