

Section I – Installation Preparation

Part Number: 00016-12020

Accessory Code: PC30



Section I – Installation Preparation

Kit Contents

Item #	Quantity Req'd.	Description
1	1	Cargo Net
2	1	Hardware Pack
3		
4		
5		
6		
7		
8		

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1	2	T-Anchor
2	2	Double Ended Studs
3	2	Panel Clip Nuts
4		
5		
6		
7		
8		

Additional Items Required For Installation

Item #	Quantity Req'd.	Description

Conflicts

Note:

Recommended Tools

Safety Tools	
Special Tools	
Installation Tools	
Trim Panel Removal Tool	Snap-On Part # ASG185
Special Chemicals	

Color Applicability/Trim Level

[illegible]

General Applicability

--

Recommended Sequence of Application

Item #	Accessory	
1		
2		
3		

*

Section I – Installation Preparation

PROTECT VEHICLE

1. Open trunk and position protection cover over bumper.

Section II – Installation Procedure

SPECIAL NOTE:

Installation Sequences

After **TMS** and **Safety** mandated preparatory steps have been taken, the installation sequence is the suggested method for completing the accessory installation. In some instances the suggested sequence is written for one associate to install and in others the sequence is given as part of a team accessory installation. Unless otherwise stated in the document, the associates may perform the installation steps in any order to make the installation as efficient as possible while maintaining consistent quality.



ASSEMBLE HARDWARE



1. Assemble double-ended stud to T-Anchor. See figure 1




2. Locate trim plug at rear of trunk opening. Remove with trim plug removal tool and discard. See f

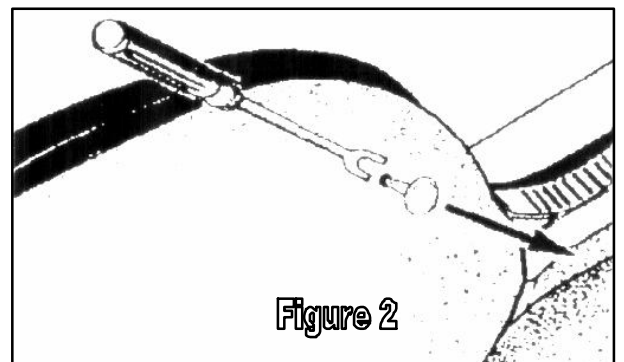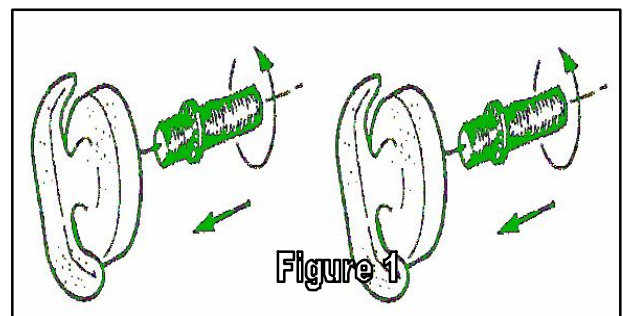




3. Pull back trim panel and locate trim panel bracket. Attach panel clip nut over top hole in bracket, making sure hole in bracket lines up with panel nut threaded hole. See figure 3

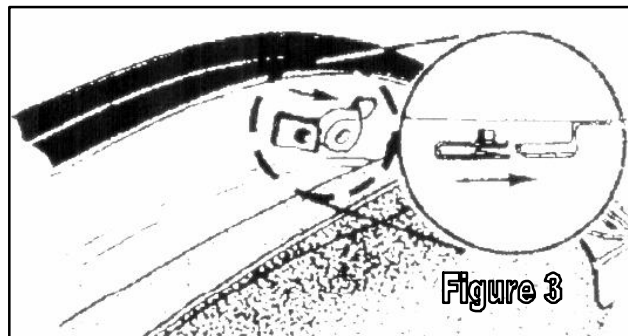

4. Push trim panel back in place and thread T-Anchor assemble through trim hole and tighten into panel clip nut. Repeat steps 1-4 on other side of vehicle.

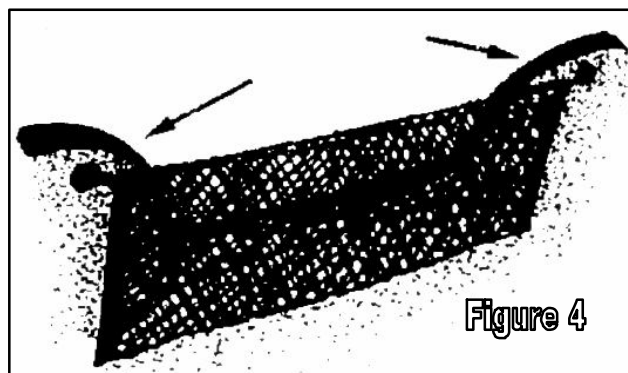

ATTACH CARGO NET



1. Attach the loops at the top of net to the upper anchors. See figure 4
- 2.