

TOYOTA Camry 2007 -
Part Number: 00016-32016,-01, 03, 04, 07, 10, 11
Accessory Code: MW3



Kit Contents

Item #	Quantity Req'd.	Description
1	1	Passenger side 2 piece molding
2	1	Driver side two piece molding
3		
4		
5		
6		
7		
8		

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1		
2		
3		
4		
5		
6		
7		
8		

Additional Items Required For Installation

Item #	Quantity Req'd.	Description
	1 set	PIO install templates

Conflicts

Note:

Recommended Tools

Safety Tools	
Special Tools- PIO Only	2-12 3/8 in. magnetic templates
Molding Roller (Optional)	2-11 in. magnetic templates
IR Probe	2- large straight-edge templates.
Installation Tools	Grease pencil
	Tape measure
	Clean towels
Special Chemicals	Alcohol/water 50-50 mix

Color Applicability/Trim Level

Accessory Color \ Vehicle/Trim Color	040	1D4	1G3	3R3	4Q2	776														
040 Super White	x																			
1D4 Titanium Met.		x																		
1G3 Magnetic Gray			x																	
3R3 Barcelona Red Met				x																
4Q2 Desert Sand Mica					x															
776 Aloa Green Met.						x														

General Applicability

All models

Recommended Sequence of Application

Item #	Accessory	
1		
2		
3		

*Mandatory

Legend



STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury



CRITICAL PROCESS: Proceed with caution to ensure a quality installation. These points will be audited on a completed vehicle installation



TOOLS & EQUIPMENT: This calls out the specific tools and equipment required for this process



REVISION MARK: This mark highlights a change in installation with respect to previous issue.

SPECIAL NOTE:

After **TMS** and **Safety** mandated preparatory steps have been taken, the installation sequence is the suggested method for completing the accessory installation. In some instances the suggested sequence is written for one associate to install and in others the sequence is given as part of a team accessory installation. Unless otherwise stated in the document, the associates may perform the installation steps in any order to make the installation as efficient as possible while maintaining consistent quality. Also some items listed to be removed may not need to be removed if caution is taken to not damage vehicle.



Note: To ensure maximum adhesive bond, vehicle surface and molding temperature should be at least 60 degrees F.



1. Thoroughly clean area of install with alcohol and water mix.



2. Measure 4 inches back from front door leading edge along top feature line and make a mark.




Fig. 1 & 2.



3. Measure 8 inches forward of rear door handle along top feature line and make a mark. Fig. 3 & 4.

4. Center small magnetic template marked “rear” on mark near rear door handle, lining top edge of template up with feature line. Fig. 5



5. Center small magnetic template marked “front” on mark near front door edge, lining top of template up with feature line.

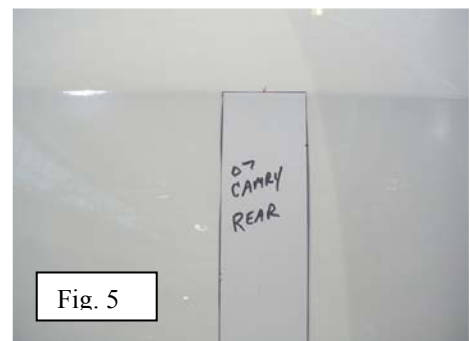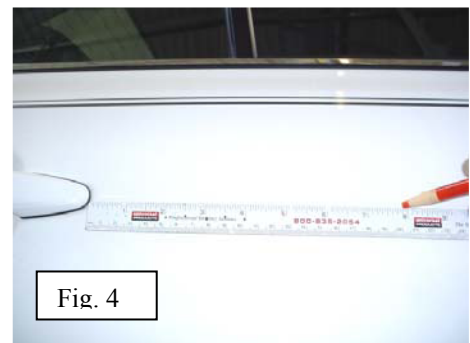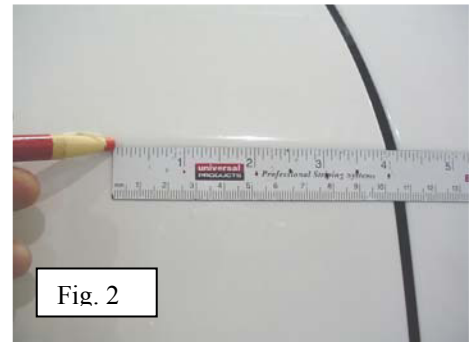

6. Small magnetic templates should look like Fig. 6 and 7 when placed correctly.

7. Line up appropriately marked, large straight edge template under small templates with edges touching. Make sure to line up door marks where both doors come together. Fig. 8 & 9.

8. Peel back approximately 2 inches of tape backing on both strips of the front door molding. Fig. 10

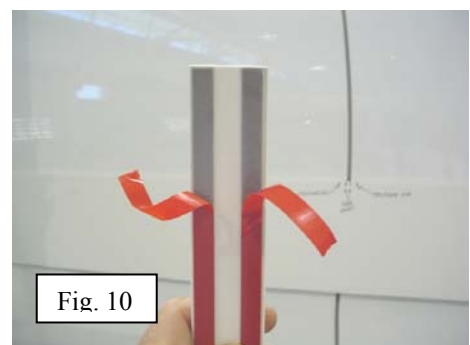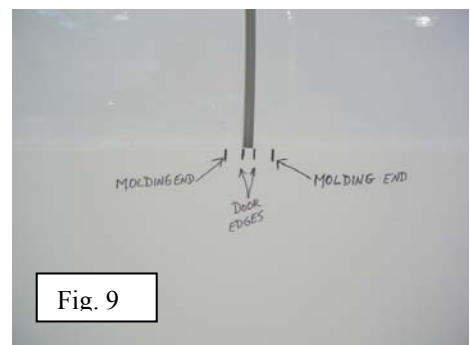

9. Line up flat end of front door piece with mark on template. Peel tape backing in small sections and keep molding touching straight edge of template. Fig.11 & 12.

10. Install rear door piece in same manner as front door starting at mark on template. Fig. 13

11. Molding should run straight along edge of template as shown in Fig. 14.

12. Remove large template & press molding firmly along entire length with a cloth or molding roller (Optional) to obtain maximum adhesive bond. Press hard on all ends.



13. After installed, remove grease pencil marks with alcohol/water mix. Fig. 15

