

## Preparation



Disconnect negative battery terminal

## Installation

1. Secure the relay and fuse to the negative battery harness next to the battery. Secure top and bottom with wire ties.
2. Attach the ring terminal with 2 black wires to the 10mm bolt at factory ground next to battery
3. Connect the ring terminal from the relay (12v red wire) routing it through positive red terminal cover
4. Locate the rubber grommet that seals the heater hoses on the firewall. Cut 1/2" slit in grommet. Secure excess wires with wire ties to fuse block wire harness. Push the red and gray/white wires through firewall. Note: Extra caution should be taken not to damage the bullet connectors. Seal with 3M Silicone sealant (picture 1)



Picture 1

5. Route wire to the left side of the vehicle and secure with wire ties


## Vehicle Disassembly

9. From underneath the left panel, push out the switch knockout. Mount switch into switch knockout on left side of dash
10. From inside the cabin, locate the wires that were pushed through in step 4
11. T-tap red wire from foglight harness switch green connector to the green wire located on 30 pin plug on top of the fuse box  
Or any parking light source. If you connect the red wire coming from the green plug to any 12v Acc wire, the fog lamps will work anytime the car ignition is on the ON position.

13. Secure fog light relay and excess wires to OE harness
14. Connect switch harness to switch
15. Reinstall dash panels and connectors

#### ENGINE COMPARTMENT

16. Remove lower splash panels
17. On the left side of the vehicle, drop wire harness to reach out the left fog lamp compartment. Route fog lamp wire under the car to the right side of the vehicle
18. Remove fog light cover plates on both sides of vehicle
19. Insert one side of the fog light into the plastic sleeve and secure with 2 supplied Phillip screws (picture 4). Repeat this step for other side of vehicle.

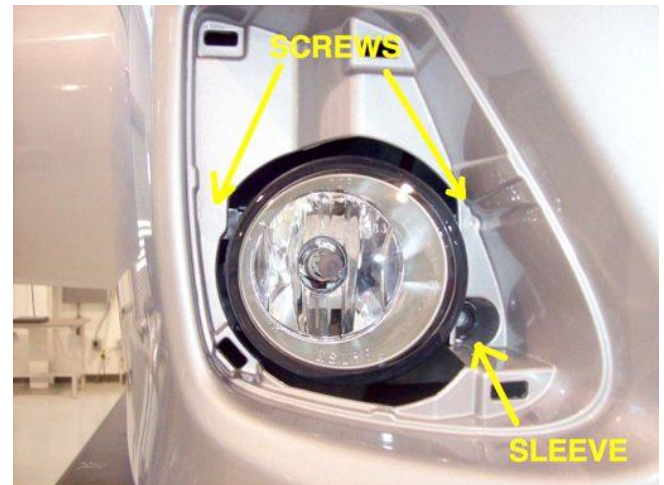

Picture 4

20. Plug in left side fog light into harness plug and secure with wire tie to factory harness
21. Plug in right fog light into harness plug and secure with wire tie to factory harness
22. Snap on both fog light bezels
23. Reinstall splash panels
24. Reconnect battery. Torque terminals to 36 in-lbs.