

FOG LIGHT KIT, TOYOTA TUNDRA 2010

Preparation


Disconnect positive terminal from battery

Installation

Secure the Relay to the ground black wire from battery, with wire ties (picture 1)




2. Attach the ring terminal with 2 black wires to the 10mm bolt next to the relay
3. Connect the ring terminal from the relay (12v red wire) to the positive terminal of the battery
4. Locate the large vehicle harness grommet on the left side. Cut the auxiliary wiring access nipple off the grommet and push small 2-wire connector through firewall. Note: Extra caution should be taken not to damage connector. Seal with 3M Silicone sealant (see picture 2)

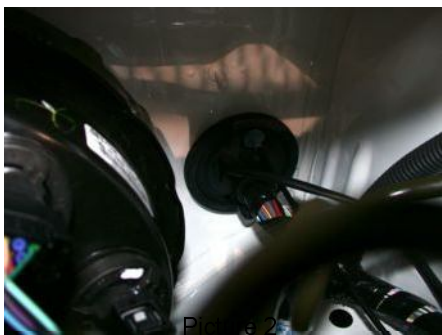

5. Run the fog light wire harness on the driver side of the car. Use wire ties as needed.
6. Remove dash panels
7. Mount switch into switch knockout on left side of dash

8. From inside the cabin, locate the small connector that was pushed through in step 4. It will be the grommet above the gas pedal (see picture 3)

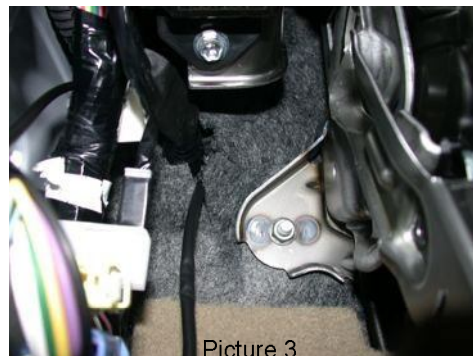

9. Install Switch Harness

10. Plug white/black wire female to White/black wire male coming from main harness

11. install red input wire and connect it to 12V+ IGNITION wire, located at the main ignition harness (white plug, black wire +) or (light green +) or any 12V+ ignition/switch controlled wire. Ground the black wire.



FOG LIGHT KIT, TOYOTA TUNDRA 2010

12. Secure relay and wires with wire ties.

13. Reinstall dash panels

14. Route the fog light wire under car.

Remove fog light cover plates and lower splash

15. shields on both sides

Install fog lights on the bumper openings (see picture 5)



16. Plug in left side fog light into harness plug and secure with wire ties

17. Run the wire to the right side of vehicle and plug into right fog light. Install wire ties to secure to vehicle

18. Reattach the lower splash shields

Reconnect battery