2021-

Part Number: PK241-08M01-TP

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Cargo Liner

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

Vehicles equipped with a jack in the cargo area

Recommended Tools

Personal & Vehicle	Notes
Protection	
Special Tools	Notes
•	
Installation Tools	Notes
Special Chemicals	Notes

General Applicability

Issue: B 09/28/2020

MY21 and newer Sienna models

Recommended Sequence of Application

Item#	Accessory
1	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend



STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.




CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.




TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.



<u>REVISION MARK:</u> This mark highlights a change in installation with respect to previous issue.





Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

1. Inspect the Parts for Preparation.

- (a) Open the package and check the parts for damage and kit contents.
- (b) Remove any cargo and debris from the rear cargo area.


2. Install the Cargo Liner.

- (a) With the third row seats up, place the folded cargo liner in the cargo area (Fig. 2-1) (Fig. 2-2).
- (b) Installation is complete.



NOTE: Do NOT fold third row seats down when the cargo liner is in the cargo area.



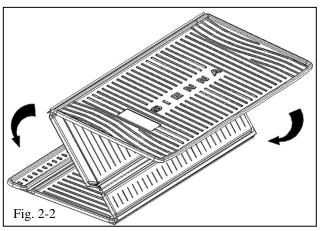

TOYOTA SIENNA 2021 -

CARGO TRAY

Checklist - these points MUST be checked to ensure a qua	lity installation.
Check:	Look For:
Accessory Function Checks Correct part number has been installed.	Verify part number on package.
Vehicle Function Checks Confirm rear tail gate closes completely	Verify gate fully closed
Vehicle Appearance Check After accessory installation and removal of protective cover(s), perform a visual inspection. Ensure no damage (including scuffs and scratches) was caused during the installation process.	