Part Number: PT347-08100

Kit Contents

Item#	Quantity Reqd.	Description
1	1	Cargo Net

Hardware Bag Contents

Item#	Quantity Reqd.	Description

Additional Items Required For Installation

Item#	Quantity Reqd.	Description

Conflicts

None

Recommended Tools

Personal & Vehicle	Notes
Protection	
None	
Special Tools	Notes
None	
Installation Tools	Notes
None	
Special Chemicals	Notes
None	
·	

General Applicability

A 11

Recommended Sequence of Application

Recommended Bequence of Application		
Item #	Accessory	

*Mandatory

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Item#	Quantity Reqd.	Description

Legend



STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



<u>CAUTION:</u> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.



REVISION MARK: This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.











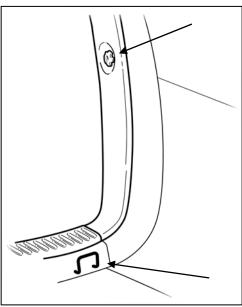


Fig. 1-1

1. Installation of Cargo Net

(a) Open the rear cargo door and locate the anchor points on the driver side of the vehicle. (Fig. 1-1)


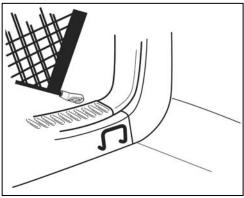


Fig. 1-2

(b) Orient the net so the pull-tab is facing towards the rear of the vehicle and install the bottom hook over the driver side lower D-ring as shown. (Fig. 1-2)

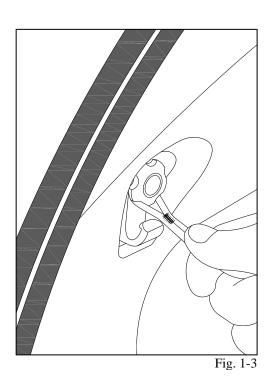

(c) Install the upper bungee loop over the driver side anchor as shown. (Fig. 1-3)

(d) Repeat steps 1(b) & 1(c) for the passenger side of vehicle.



Fig. 1-4

(e) Completed assembly as shown. (Fig. 1-4)

TOYOTA SIENNA 2011 - CARGO NET

Checklist - these points MUST be checked to ensure a quality installation.			
Check:	Look For:		
Accessory Function Checks			
Correct orientation of net and pull tab	Make sure the net's plastic pull tab is facing rearward.		
Confirm the net is attached properly to the anchor points in the vehicle.	Make sure the net hooks are attached to the lower D-rings and the loops are attached to the anchors at the top.		
Vehicle Function Checks			
Rear cargo door.	Rear cargo door should open and close freely without interference from cargo net.		