

Part Number: PT347-34071**NOTE:** Part number of this accessory may not be the same as the part number shown.**Kit Contents**

Item #	Quantity Req'd.	Description
1	1	Large Net
2	1	Small Net
3	1	Installation Instructions

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1		

Additional Items Required For Installation

Item #	Quantity Req'd.	Description
1		

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
None	
Installation Tools	Notes
None	
Special Chemicals	Notes
None	

General Applicability

Tundra CrewMax vehicles

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Req'd.	Description
1		
2		
3		

Legend**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.**OPERATOR SAFETY:** Use caution to avoid risk of injury.**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-


- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

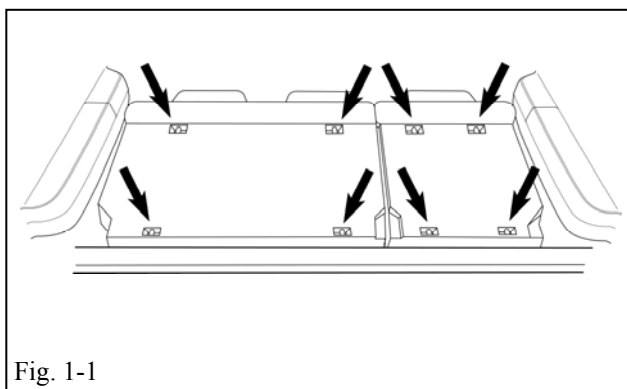


1. Installation of Cargo Net

- (a) Fold both rear seats flat, and locate the anchor positions for both as indicated by the arrows (Fig 1-1).
- (b) With the zippers closed, lay both nets flat on the seats with zipper pulls oriented as indicated (Fig 1-2).

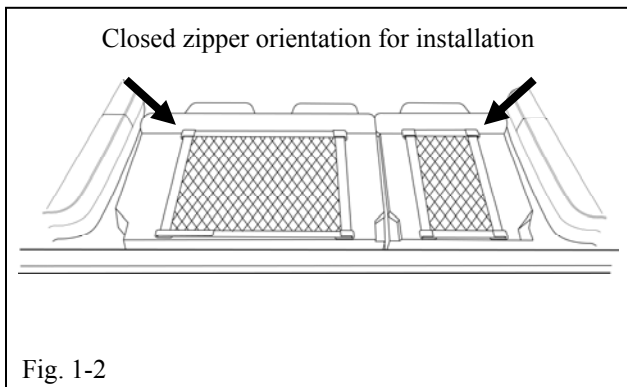


Small Net

- (c) Release all four velcro straps. Starting at one corner, loop the velcro strap under and around pin (Fig 1-3).
- (d) Pull the strap, align velcro and fasten to the webbing as shown (Fig 1-4).
- (e) Repeat steps 1(c) & 1(d) for the remaining three corners.

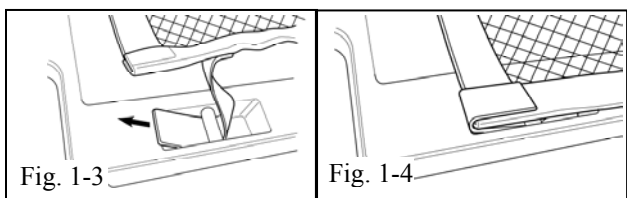


Large Net

- (f) Repeat steps 1(c), 1(d) for all corners except lower left.
- (g) For lower left, pull strap through and align both Velcro fasteners and attach. (Fig 2-2)

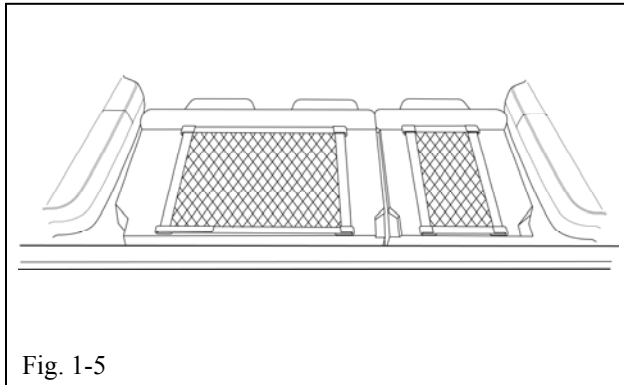


(h) Completed assemblies (Fig 1-5).

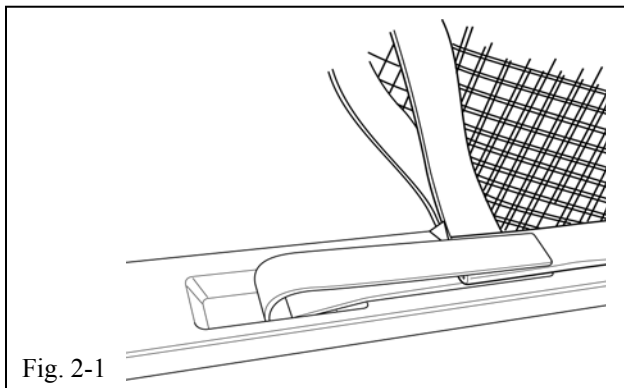

2. Cargo Net Use

(a) The large net has a feature that allows for the loading of larger objects. Unsecure the lower left strap and temporarily attach only the end of the velcro to the webbing. (Fig 2-1). Open the zipper and insert items into the net.

(b) Close zipper, pull strap, align velcro and fasten to the webbing as shown (Fig 2-2).

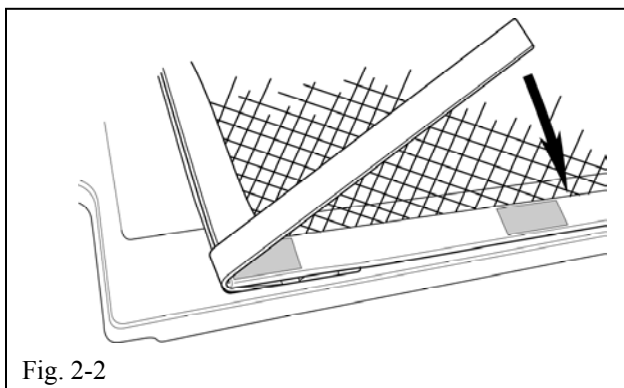

NOTE: After installation, please place this instruction sheet in glove compartment for future customer reference.

TOYOTA TUNDRA 2007 - CARGO NET - INTERIOR

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- ☐ Confirm that the net is attached properly to the anchor points in the vehicle.

Velcro straps are attached to the pins in the seat back and properly secured.