## Part Number: PT347-47160

### **Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Convenience Net
2	1	Hardware Bag

#### Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	1	LH Bracket Hook
2	1	RH Bracket Hook
3	1	LH Trim Panel Cover
4	1	RH Trim Panel Cover
5	1	LH Button Anchor
6	1	RH Button Anchor

## **Additional Items Required For Installation**

Item #	Quantity Reqd.	Description

### **Conflicts**

None

#### **Recommended Tools**

Personal & Vehicle	Notes
Protection	
None	
Special Tools	Notes
None	
<b>Installation Tools</b>	Notes
Screwdriver	Phillips
Trim Panel Removal Tool	
Special Chemicals	Notes
None	

#### **General Applicability**

All Prius Models


## **Recommended Sequence of Application**

Item #	Accessory

#### Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description

## Legend

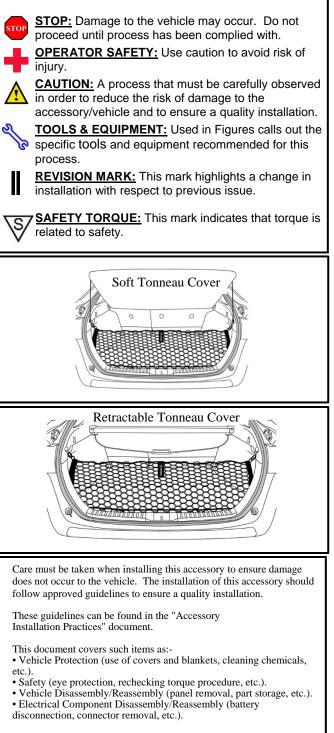


Please see your dealer for a copy of this document.

# TOYOTA


## PRIUS

Procedure

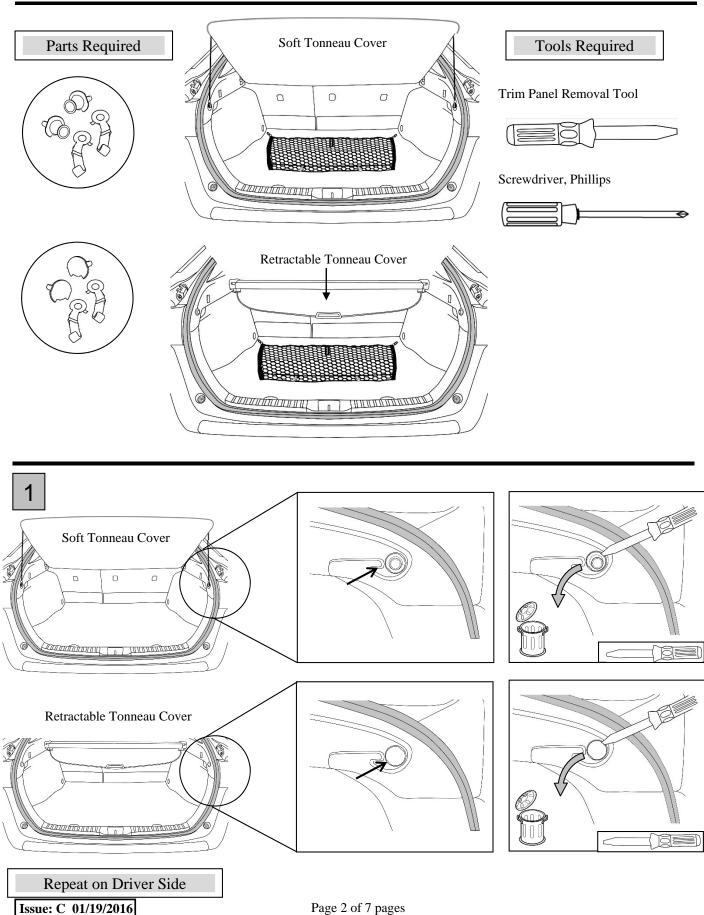


# TOYOTA PRIUS

Procedure

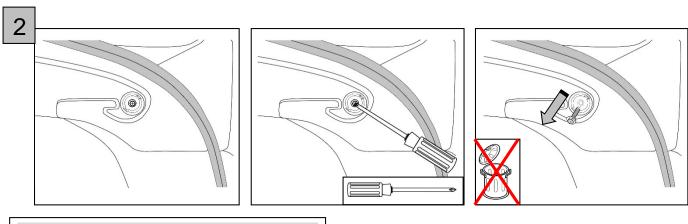

Retain Screws – Repeat on Driver Side

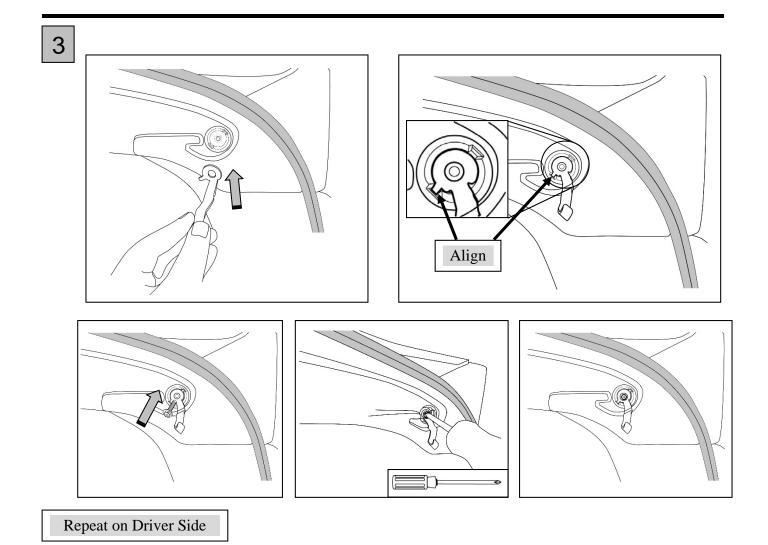



# TOYOTA P

## Procedure





Soft Tonneau Cover

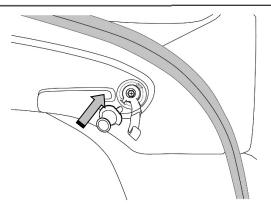

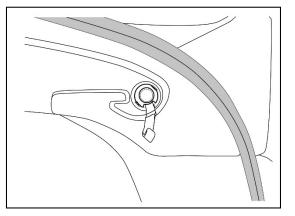


Retractable Tonneau Cover

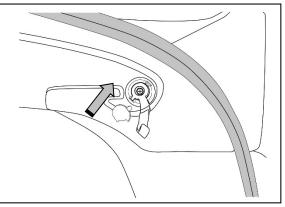

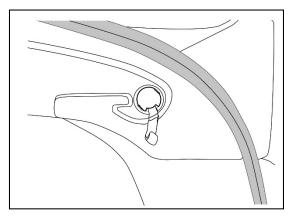


Repeat on Driver Side

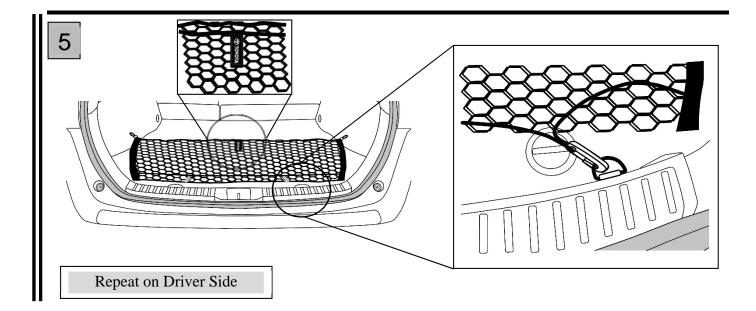

# ΤΟΥΟΤΑ


Procedure

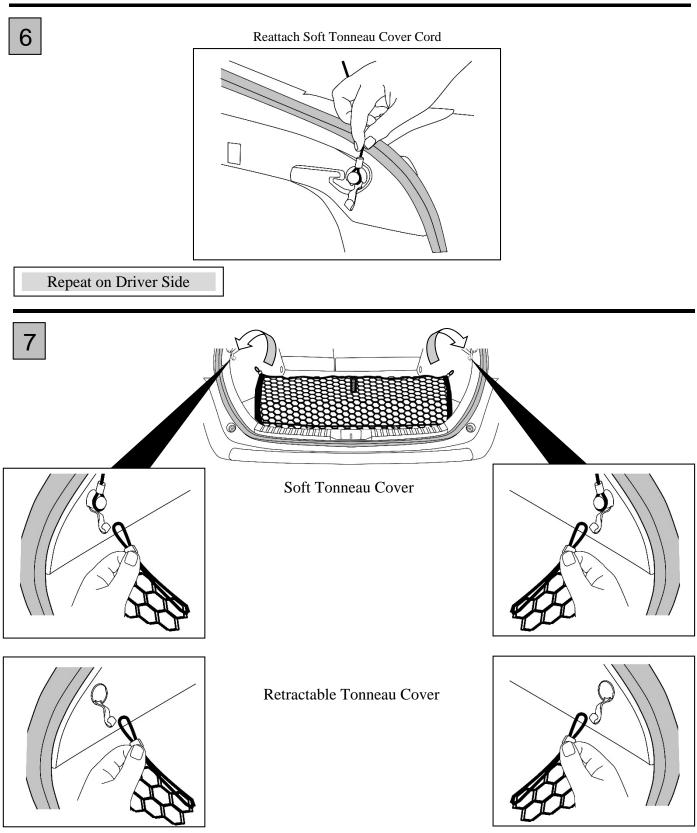

# ΤΟΥΟΤΑ

PRIUS

Procedure

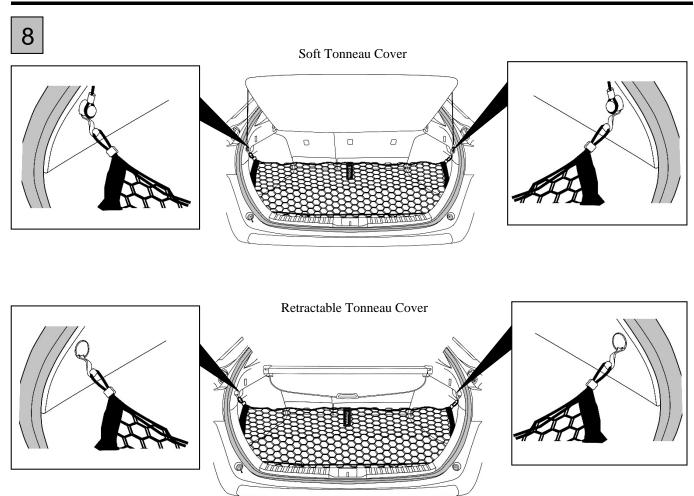

Checklist - these points **MUST** be checked to ensure a quality installation.

Accessory Function Checks Confirm that the net is attached properly to the anchor points in the vehicle.	Confirm net handle is facing toward the rear of the vehicle. Confirm upper loops at the top of the net are attached to the hooks of the vehicle.
<u>Vehicle Function Checks</u> Vehicle trunk operation	Confirm vehicle trunk opens and closes without interference from Cargo Net.
Tonneau cover operation	Confirm tonneau cover opens and closes freely without interference from cargo net or hook.
Vehicle Appearance Check         After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)