# Part Number: PT347-52043

Section I 🕹 Installation Preparation

#### **Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Cargo Cover
2	1	Installation Instructions

#### **Hardware Bag Contents**

Item #	Quantity Reqd.	Description
1		r r
2		
2		

## Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		

# Conflicts

Note:

#### **Recommended Tools**

Safety Tools	
None	
Special Tools	
None	
<b>Installation Tools</b>	
None	
Special Chemicals	
None	

## **General Applicability**

#### **Recommended Sequence of Application**

Item #	Accessory	
1		
2		
3		
		¿ *Mandatory


#### Legend

-	
STOP	<b>STOP:</b> Damage to the vehicle may occur. Do not proceed until process has been complied with.
÷	<b>OPERATOR SAFETY:</b> Use caution to avoid risk of injury.
<b>V</b>	<b><u>CRITICAL PROCESS</u></b> : Proceed with caution to ensure a quality installation.
	GENERAL PROCESS: This highlights specific processes to ensure a quality installation.
B	<b>TOOLS &amp; EQUIPMENT:</b> Calls out the specific tools and equipment recommended for this process.

Section II 2 Installation Procedure

# A. Attach Cargo Cover

- 1. Open rear liftgate and locate anchor points on each side of the vehicle. (Fig. A-1)
- 2. Flip open sides of cargo cover. Attach hooks to D-rings as shown. Repeat for other side of vehicle. (Fig. A-2)
- Adjust tension on cargo cover by holding the tensioning buckle in one hand and pulling the web strap in the opposite direction as shown Repeat for other side of vehicle. (Fig. A-3)
  - i. Ensure that cover is centered across the vehicle.
  - 4. Flip sides of cargo cover back down. Final assembly should resemble (Fig A-4).

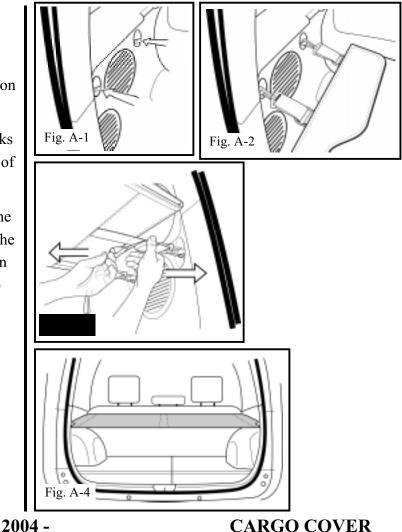

# SCION xB Section III ¿Functional Verifications

7
/

Section III E Functional Verifications

#### Check:

- Confirm that the cargo cover is attached properly to the anchor points in the vehicle.
- Confirm that the cargo cover is properly tensioned.
- Confirm that the cargo cover is properly centered across vehicle.

# Look For:

Make sure hooks are attached to the Drings on both sides of the vehicle.

Make sure straps have been tightened on both sides of the cargo cover.

Make sure gap between side edges of cover, on each side, and body panel is symmetrical.