

Part Number: PT347-52051**Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Convenience Net
2	1	Installation Instructions

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.

Hardware Bag Contents

Item #	Quantity Reqd.	Description

Additional Items Required For Installation

Item #	Quantity Reqd.	Description

Conflicts

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
None	
Installation Tools	Notes
None	
Special Chemicals	Notes
None	

General Applicability

Recommended Sequence of Application

Item #	Accessory

*Mandatory

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-


- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

1. Install Net.

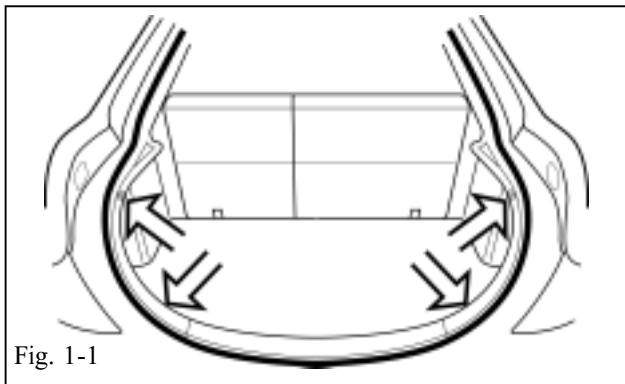


(a) Open rear liftgate and locate the four anchor points (Fig. 1-1).

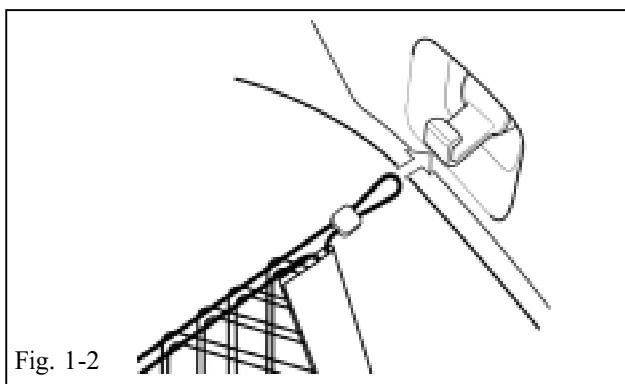

(b) Attach the loop at the top of the net to the hook, so that the net is on the passenger side of the vehicle (Fig 1-2).

(c) Attach the other loop at the top of the net to the hook, making sure the pouch is on the drivers' side of the vehicle. Attach the hooks at the bottom of the net to the lower D-rings on both sides of the trunk opening.

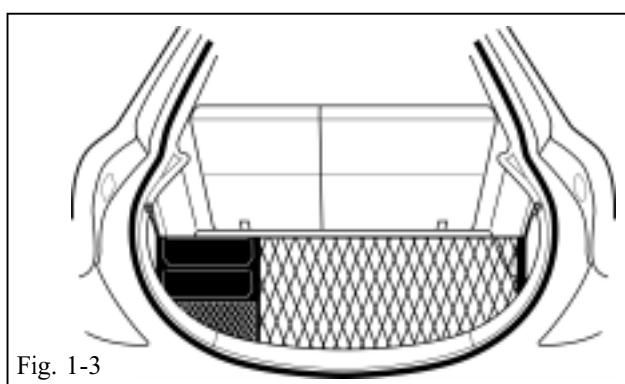

(d) Confirm completed assembly (Fig 1-3).

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Accessory Function Checks

Confirm that the net is attached properly to the anchor points in the vehicle.

Look For:

Make sure loops are attached to the hooks and the pouch is on the drivers' side of the vehicle.