

Part Number: PT347-89100

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Convenience Net

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	N/A	

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1	N/A	

Conflicts

Note: Vehicles with 3-row seating.

Recommended Tools

Personal & Vehicle Protection	Notes
Special Tools	Notes
Installation Tools	Notes
Special Chemicals	Notes

General Applicability

Vehicles equipped with 2 rows of seating.

Recommended Sequence of Application

Item #	Accessory


*Mandatory


NOTE: Part number of this accessory may not be the same as the part number shown.


Vehicle Service Parts (may be required for reassembly)


Item #	Quantity Reqd.	Description


Legend


 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

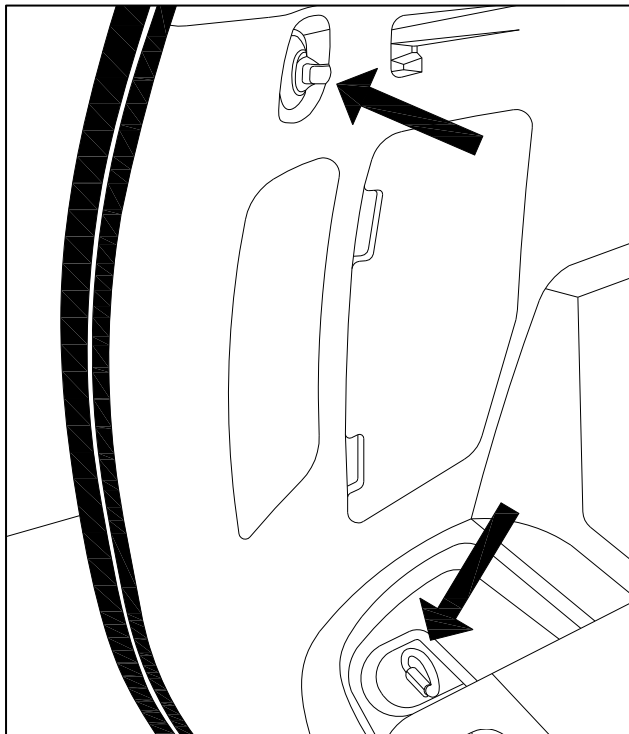


Fig. 1-1

1. Installation of Cargo Net

- (a) Open vehicle rear cargo door and locate the vehicle net mounting points on the driver side of the cargo compartment. (Fig. 1-1)

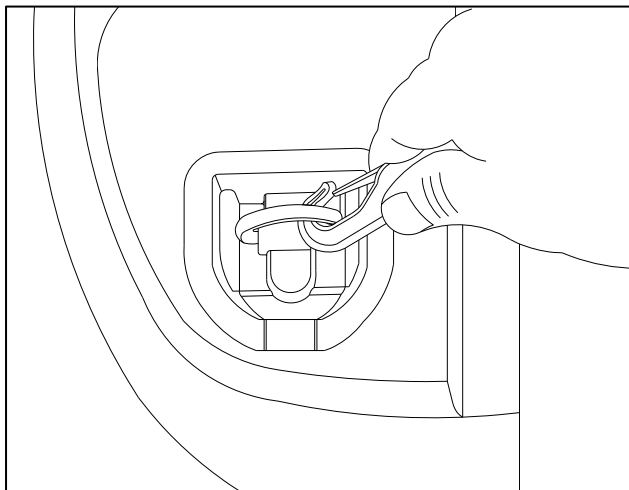


Fig. 1-2

- (b) Orient the net so the pull-tab is facing towards the rear of the vehicle and install the bottom hook over the lower D-ring as shown. (Fig 1-2)

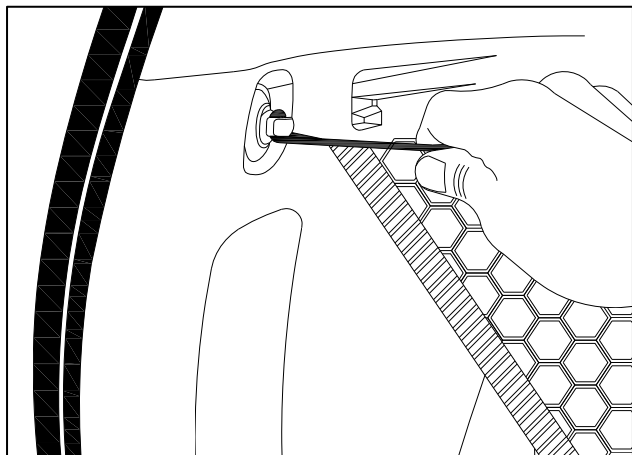


Fig. 1-3

(c) Install the upper bungee loop over the T-anchor as shown. (Fig 1-3). Attachment complete on driver side.

(d) Repeat steps 1(b) & 1(c) for the passenger side of vehicle

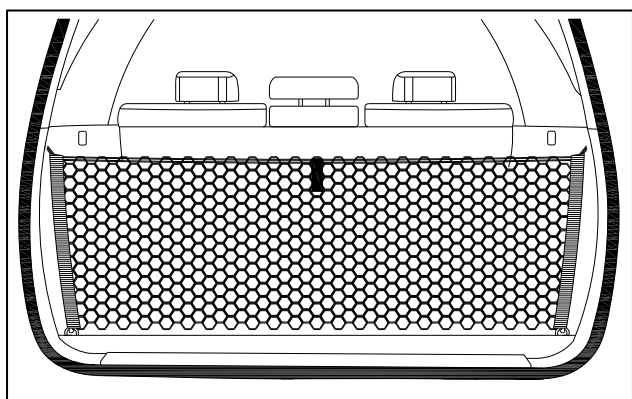


Fig. 1-4

(e) Completed assembly as shown. (Fig 1-4)

TOYOTA 4RUNNER 2010 - 2-ROW CARGO NET
Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <p><input type="checkbox"/> Confirm the net is attached properly to the anchor points in the vehicle.</p> <p><input type="checkbox"/> Pull Tab orientation</p>	<p>Make sure the net hooks are attached to the lower d-rings and the loops are attached to the t-anchors at the top.</p> <p>Make sure the net's plastic pull tab is facing rearward.</p>
<p><u>Vehicle Function Checks</u></p> <p><input type="checkbox"/> Rear cargo door</p>	<p>Rear cargo door should open and close freely without interference from cargo net</p>