

Part Number: PT747-07190**Kit Contents**

Item #	Quantity Req'd.	Description
1	1	Applique, RR Bumper

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1		

Additional Items Required For Installation

Item #	Quantity Req'd.	Description
1		

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	Notes										
None											
Special Tools	Notes										
Squeegee	4" (3M™Gold) or 4" (3M™Silver)										
Low Friction Sleeve	3M SA-1 (Optional)										
Surface Thermometer	Infrared Non-contact										
Heat Gun	Master Heat Gun HG-301A or equivalent										
Installation Tools	Notes										
Lint Free Rags											
Spray Bottle	For wetting agent										
Special Chemicals	Notes										
Cleaner	VDC approved cleaner and cleaning method										
Wetting Agent Note: Solution depends upon ambient temperature of the part and the vehicle surface. If it is difficult to remove bubbles with a squeegee, add one more ml. of shampoo.	Johnson's Baby Shampoo mixed in one liter of water: <table border="1"> <tr> <th>Temp</th><th>Shampoo</th></tr> <tr> <td>65° F</td><td>2 ml</td></tr> <tr> <td>70° F</td><td>3 ml</td></tr> <tr> <td>80° F</td><td>3.5 ml</td></tr> <tr> <td>90° F</td><td>4 ml</td></tr> </table>	Temp	Shampoo	65° F	2 ml	70° F	3 ml	80° F	3.5 ml	90° F	4 ml
Temp	Shampoo										
65° F	2 ml										
70° F	3 ml										
80° F	3.5 ml										
90° F	4 ml										

General Applicability

MY19 and newer Avalon/HV vehicles

Recommended Sequence of Application

Item #	Accessory
1	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Req'd.	Description
1		
2		
3		

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.




TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.



REVISION MARK: This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.

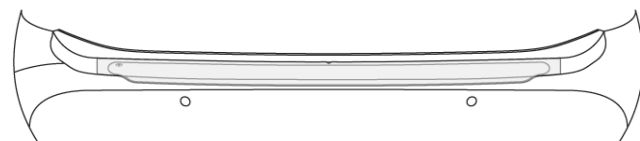







Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as: -


- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

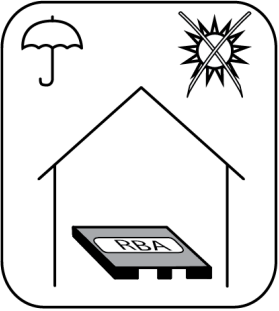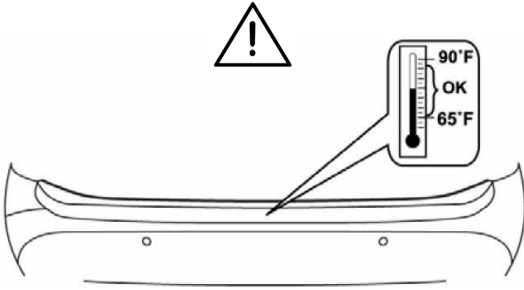
Please see your Toyota dealer for a copy of this document.

 STORAGE	 INSTALLATION TEMPERATURE	 CLEANER	 LINT FREE
		 SQUEEGEE	 SLEEVE (OPTIONAL)



REAR BUMPER APPLIQUE

1

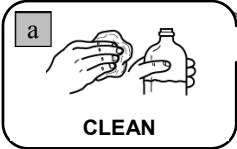
a
CLEAN


b
DRY


2

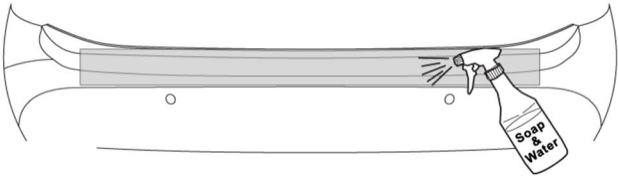


3




4

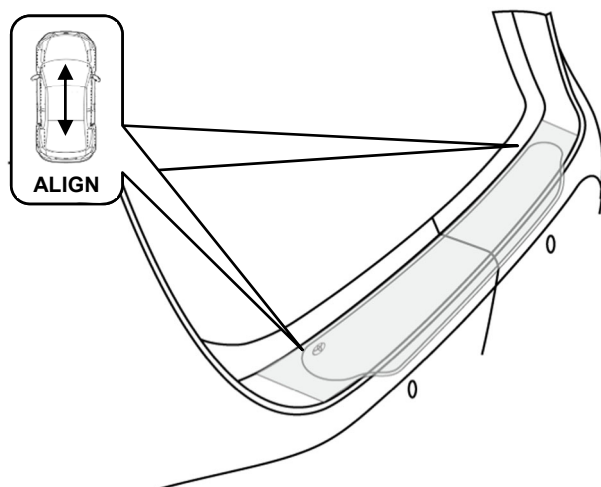


5

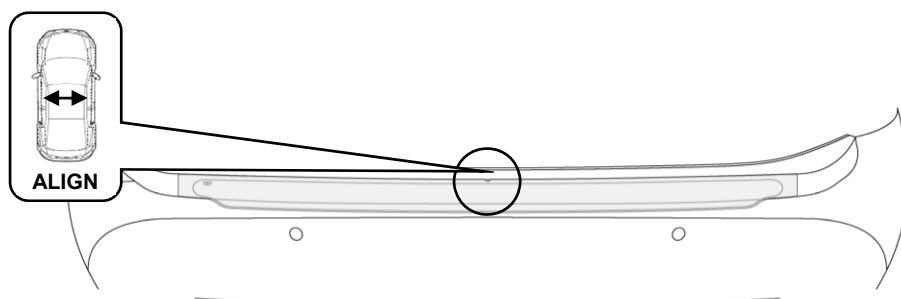


6

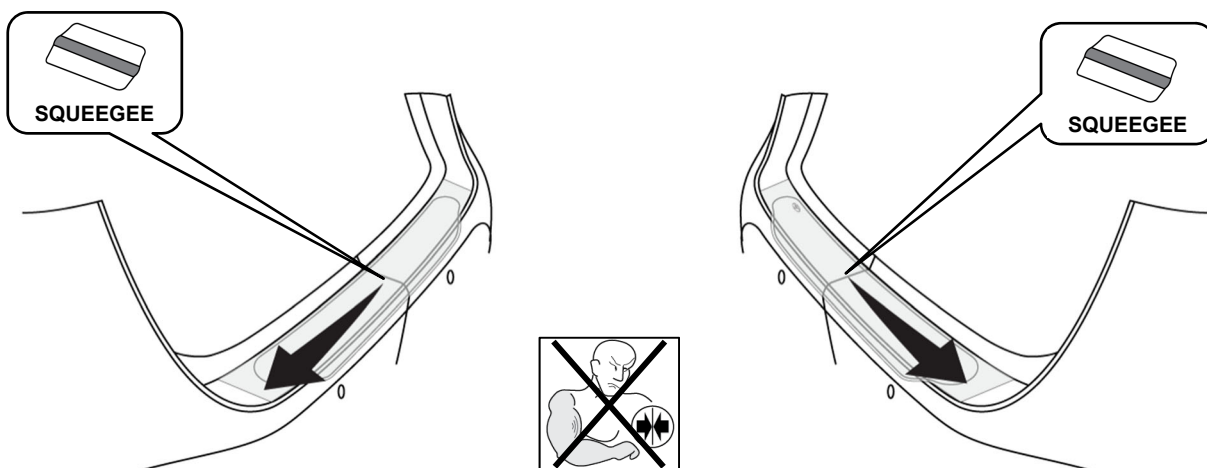


7

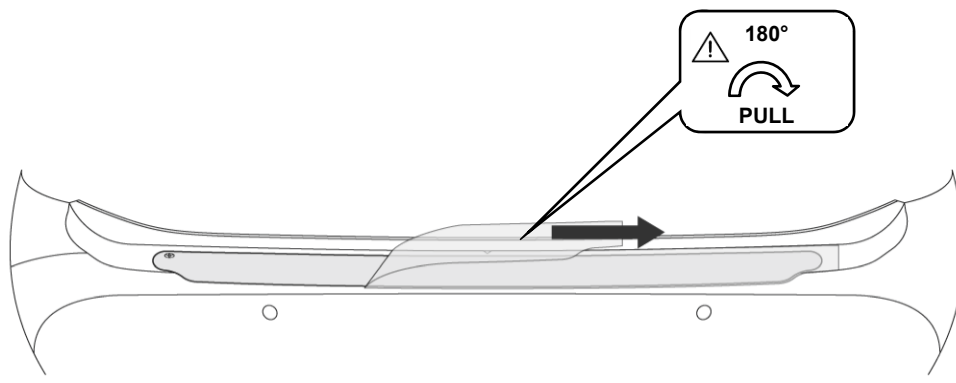

8

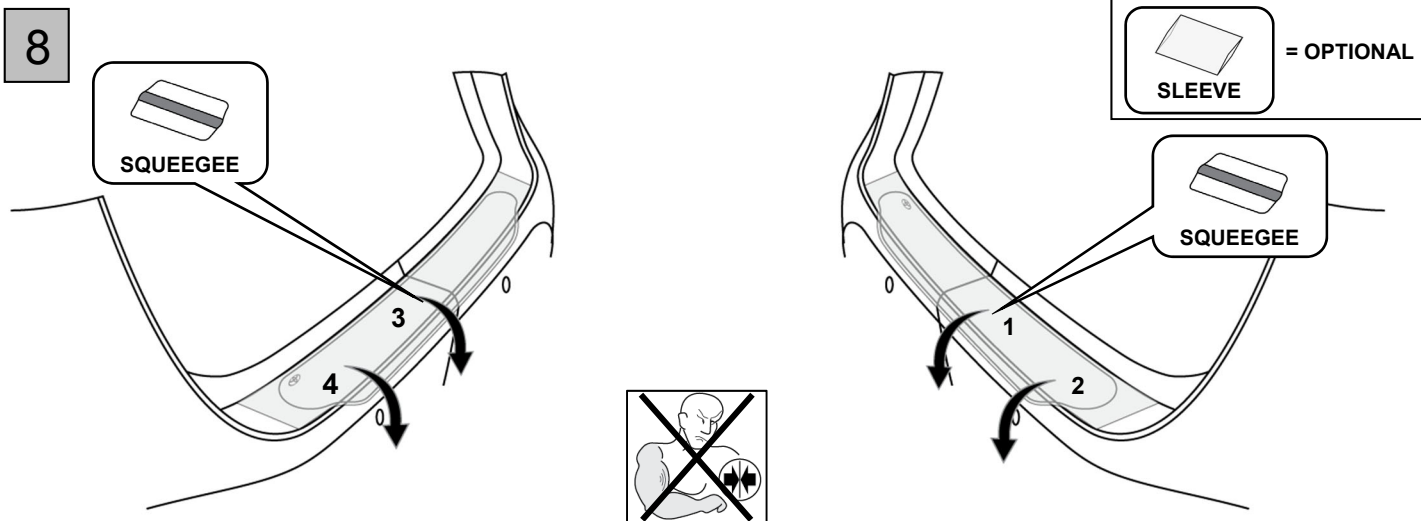


9

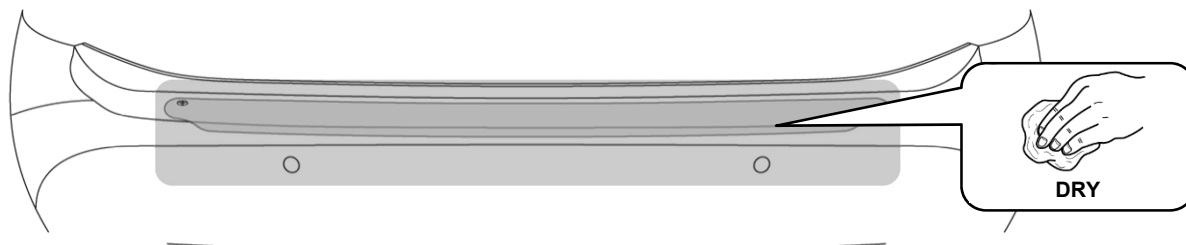

TOYOTA AVALON/HV 2019 - REAR BUMPER APPLIQUE

Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<u>Accessory Function Checks</u> <input type="checkbox"/> Proper adhesion – Visual  <input type="checkbox"/> Proper adhesion – Physical <input type="checkbox"/> Proper alignment – Cross-Car	 Look for bubbles, loose and lifting edges. With light pressure rub hand over top of part and if crackling sound occurs, re-squeegee. If bubbles cannot be worked out to the nearest edge, replace part. Part must be centered within bumper +/-3 mm.
<u>Vehicle Appearance Check</u> <input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.	 Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)