

**Part Number: PT747-3306B**

**Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Applique, RR Bumper
2	1	Installation Instructions

**Hardware Bag Contents**

Item #	Quantity Reqd.	Description
1		

**Additional Items Required For Installation**

Item #	Quantity Reqd.	Description
1		

**Conflicts**

--

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
None	
<b>Special Tools</b>	<b>Notes</b>
Squeegee	4" (3M™Gold)
Surface Thermometer	Infrared Non-contact
Heat Gun	Master Heat Gun HG-301A or equivalent
<b>Installation Tools</b>	<b>Notes</b>
Lint Free Rags	
Spray Bottle	For wetting agent
<b>Special Chemicals</b>	<b>Notes</b>
Cleaner	3M™ Prep Solvent-70
Wetting Agent	Diluted Liquid Dish Detergent (e.g. "Joy") 2 drops (4-5 ml.)/1 quart water.

**General Applicability**

--

**Recommended Sequence of Application**

Item #	Accessory
1	

\*Mandatory

**NOTE:** Part number of this accessory may not be the same as the part number shown.

**Vehicle Service Parts** (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		

**Legend**



**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

**1. Installation Temperature.**



- (a) Part and vehicle surface temperature must be maintained between 65°F and 90°F for optimum installation. Store parts flat at room temperature in a clean dry place.

**2. Clean the Vehicle Surface.**

- (a) With rear hatch open, clean the entire application surface to remove grease and wax. Use 3M™ Prep Solvent-70 and clean lint free rag.

- (b) When cleaning with 3M™ Prep Solvent-70.



- (1) Always use a clean (lint free scratch resistant) soft cloth (or wipe), and clean a small area at a time (~3 ft. x 3 ft. max.).

- (2) Shake well.





- (3) Apply 3M™ Prep Solvent-70 to cloth or wipe. Do not spray cleaning solution directly on any vehicle surfaces.


- (4) Clean surface thoroughly and wipe dry immediately with a new clean cloth. Do not allow cleaner to air dry.

**3. Installation of the Rear Bumper Protector.**


- (a) Place part face down on clean flat surface. Remove entire liner. (Fig. 3-1).

- (b) Spray bumper with soap and water solution. (Fig. 3-2).

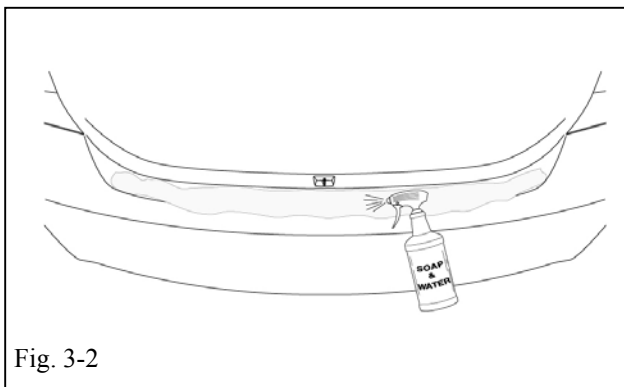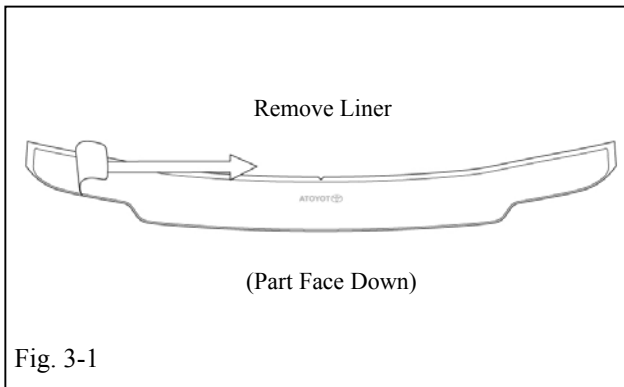

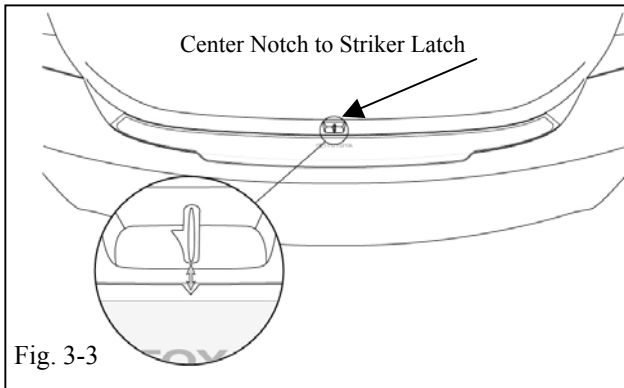


- (c) Align the center notch directly below the striker latch opening and the leading edge of the premask along the ridge of the bumper being sure not to roll over the ridge. Do not smooth part with hands. (Fig. 3-3).

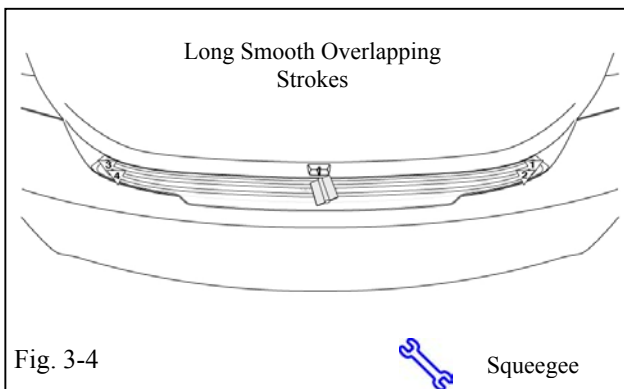


- (d) Using long smooth overlapping strokes squeegee from the center outwards of the horizontal section (Fig. 3-4).

- (1) Do not use excessive force as it may cause creasing of the protector.

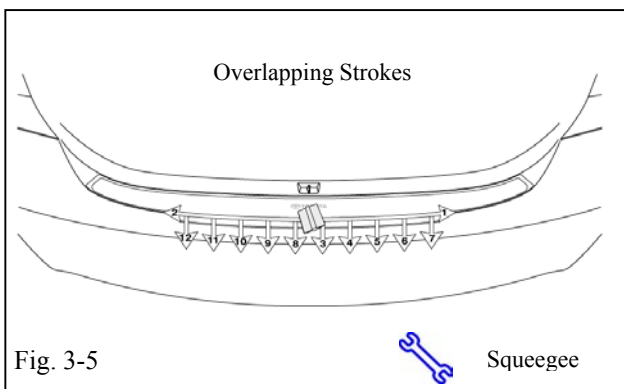

- (e) Using long smooth overlapping vertical downward strokes squeegee from the center outwards of the vertical section (Fig. 3-5).

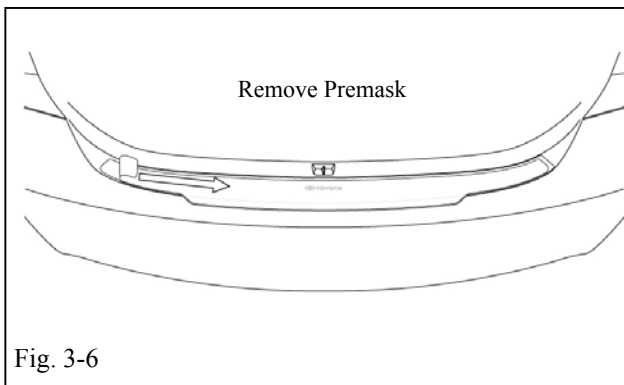


- (f) Remove premask paper 180° against itself. (Fig. 3-6).

- (g) Dry off vehicle with clean lint free rag.

**TOYOTA CAMRY 2007 - REAR BUMPER APPLIQUE**  
Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Accessory Function Checks

- Proper adhesion – Visual
-   Proper adhesion – Physical
  
- Proper alignment – Cross-Car

Look For:

Look for bubbles, loose and lifting edges.  
With light pressure rub hand over top of part and if crackling sound occurs, reapply premask to area and resqueegee. If bubbles cannot be worked out to the nearest edge, replace part.  
Part must be centered within bumper  
+/-3 mm.