

Part Number: PT769-02110

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Front Passenger Side Mudguard
2	1	Front Driver Side Mudguard
3	1	Rear Passenger Side Mudguard
4	1	Rear Driver Side Mudguard
5	1	Hardware Kit
6	1	Instruction Sheet

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	4	#10 x 19 mm Screws
2	8	#14 x 19 mm Screws (Truss)
3	2	#14 x 19 mm Screws (Hex)
4	4	#10 Spring Clip
5	2	#14 Spring Clip
6	2	Push Pin
7	2	Insert

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

Note: Ground effects

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
None	
Installation Tools	Notes
Screwdriver	Phillips #2 & 3
Screwdriver	Slot
Drill	Standard/Right Angle
Drill Bit	2.7mm (7/64)
Clean Cloth / Rag	
Socket/Driver	10mm (3/8")
Special Chemicals	Notes
Cleaner	3M™ Prep Solvent-70

NOTE: Part number of this accessory may not be the same as the part number shown.

General Applicability

All Models

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.
	SAFETY TORQUE: This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle.
The installation of this accessory must follow all instructions and use supplied hardware to ensure an approved quality installation.

1. Clean Front Mounting Area





- (a) Clean and degrease front body panel where mudguard is to be located with a clean, dry lint free cloth and 3M™ Prep Solvent – 70.
- (b) When cleaning with 3M™ Prep Solvent-70 follow the manufacturer's directions. Do not allow cleaner to air dry.

2. Hardware Removal




- (a) Remove existing screw location A and discard. (Fig. 2-1).
- (b) Remove existing push pin location B and discard. (Fig. 2-1).
- (c) Install supplied insert in location D. (Fig. 2-1).

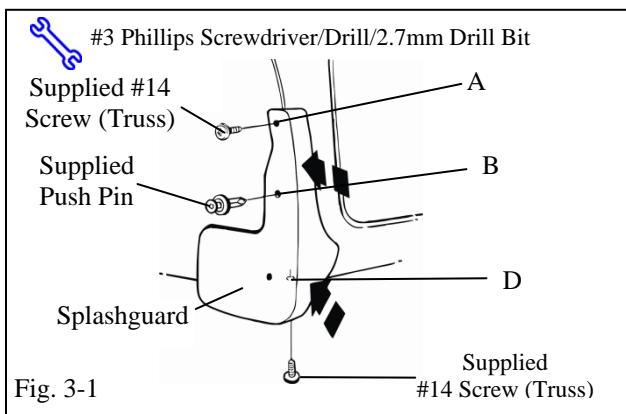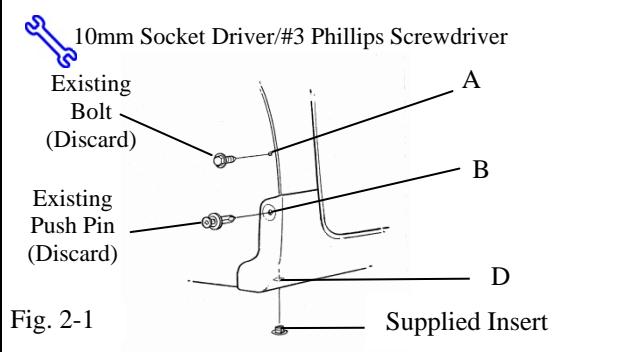

3. Installation of Front Mudguard




- (a) Mount mudguard on body panel and install supplied push pin in location B and supplied #14 screw (truss) in location A while holding part up and tight against body. (Fig. 3-1).
- (b) Install supplied #14 screws (truss) in slotted location D, ensure part is held firmly against lower panel and that no gap occurs while tightening screw. (Fig 3-1).

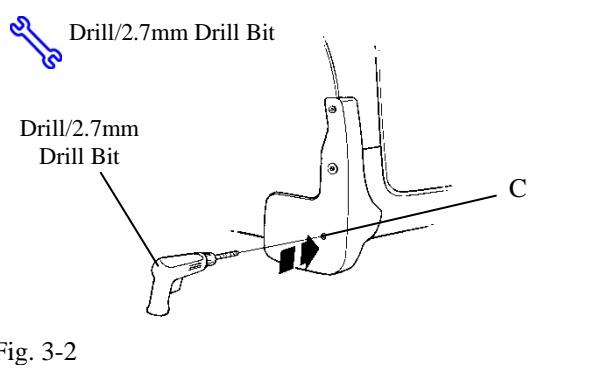


- (c) Drill 2.7mm (7/64") center pilot hole in location C, while holding part tight against body. (Fig 3-2)
- (d)  Install supplied #14 screw (truss) in location C, while holding part tight against body. (Fig 3-3) DO NOT OVERTIGHTEN

4. Clean Rear Mounting Area

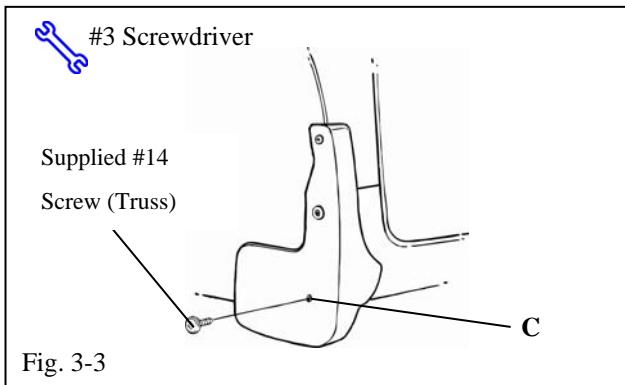


-  (1) Clean and degrease rear bumper panel where mudguard is to be located with a clean, dry lint free cloth and 3M™ Prep Solvent-70
- (2) When cleaning with 3M™ Prep Solvent-70 follow the manufacturer's directions. Do not allow cleaner to air dry.

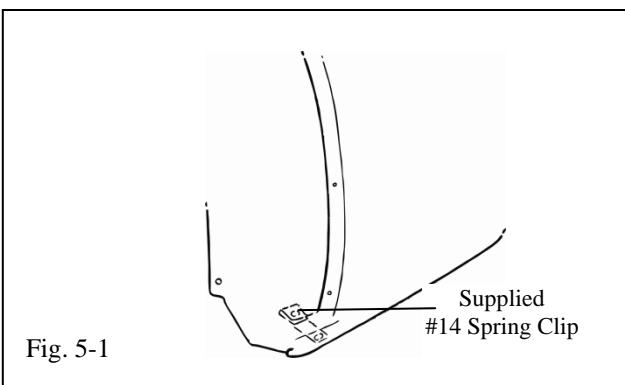


5. Identification of Rear Mount Location

-  (a) Install supplied #14 spring clip over fender hole with turned up edge on inside of bumper. (Fig. 5-1).

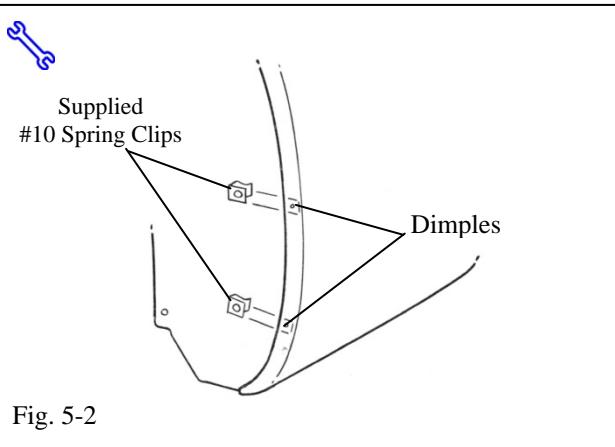


(b) Install supplied #10 spring clips over fender edge dimples with turned up edge on inside of bumper at locations A and B (Fig. 5-2)

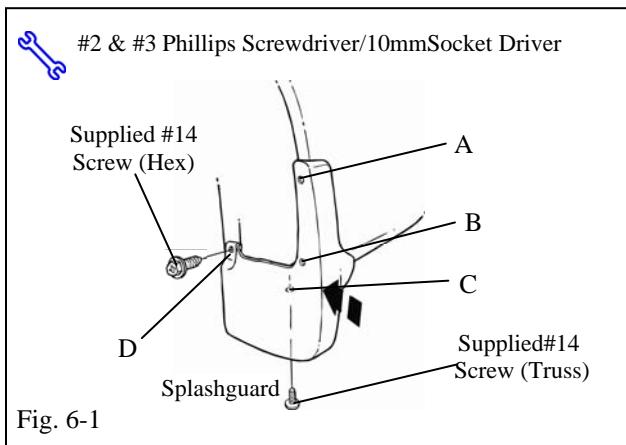

6. Installation Of Rear Mudguard

(a) Mount mudguard on bumper panel and install supplied #14 screw (Hex) in location C while holding part tight against bumper. (Fig. 6-1).

(b) Install supplied #14 screw (Truss) in location D while holding part tight against bumper. (Fig. 6-1).

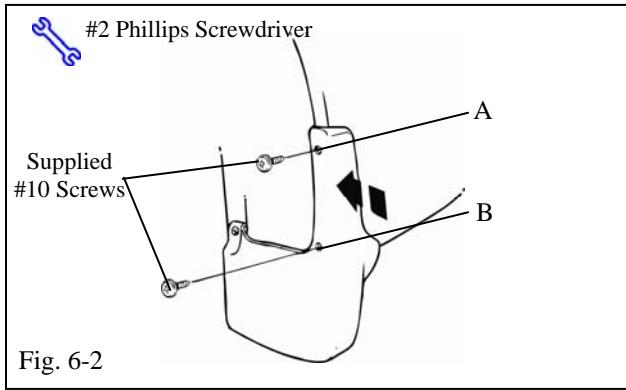

(c) Install supplied #10 screws in locations A and B while holding part up and tight against bumper panel. (Fig. 6-2)

(d) Repeat procedure for other side.

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

Gaps between mudguards and body side

Excessive gaps greater than 1.0 mm.