

Preparation

Part Number: PT924-08211**Kit Contents**

Item #	Quantity Req'd.	Description
1	1	Large Organizer Bin (with Lid)
2	1	Small Organizer Bin (with Lid)

Hardware Bag Contents

Item #	Quantity Req'd.	Description

Additional Items Required For Installation

Item #	Quantity Req'd.	Description

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	Notes
VEHICLE PROTECTION	
Special Tools	Notes
Installation Tools	Notes
Special Chemicals	Notes

General Applicability

MY21 and newer Sienna models

Recommended Sequence of Application

Item #	Accessory

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Accessory

Legend**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.**OPERATOR SAFETY:** Use caution to avoid risk of injury.**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.**REVISION MARK:** This mark highlights a change in installation with respect to previous issue.**SAFETY TORQUE:** This mark indicates that torque is related to safety.**REGULATORY MARK:** This mark indicates the component is related to regulatory compliance

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

1. Preparation.

- (a) Open package and check part for damage.
- (b) Open vehicle rear cargo door and ensure the rear seats are locked in the full upright position.



2. Organizer Installation

- (a) Place the organizer bins in the well behind the rear seats with the large bin on the driver's side first and the small bin on the passenger side second (Fig. 2-1).

- (1) Install the large bin first on the driver side.

- (2) Secondly, install the smaller bin inboard edge first in alignment with the inboard edge of the larger bin (Fig. 2-2).

- (3) Hold the center mating edge with one hand and push down on the outboard edge of the smaller bin (Fig. 2-2).

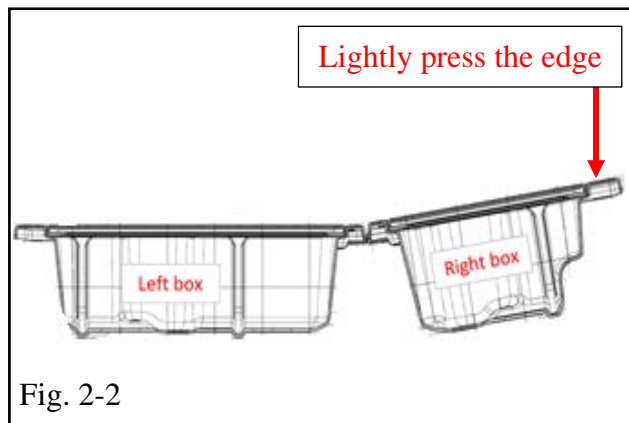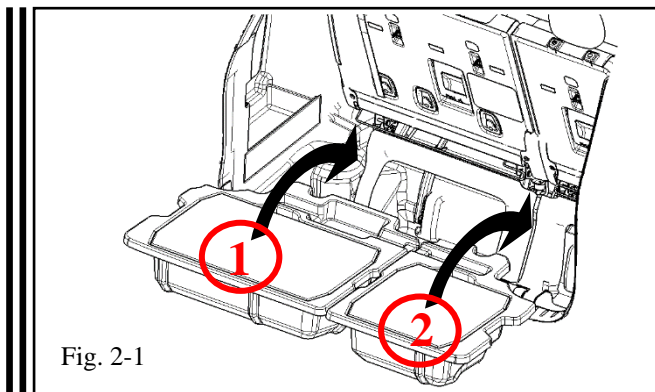

Procedure

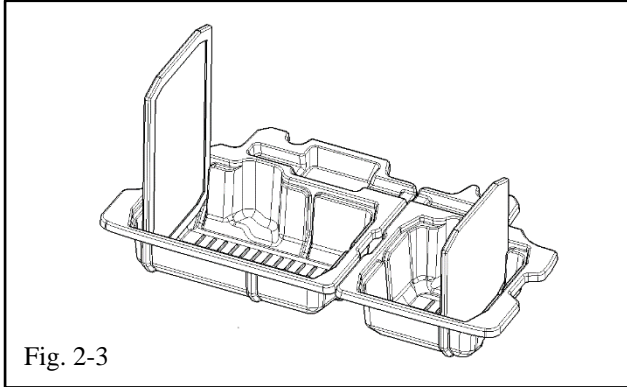


Fig. 2-3

- (b) Verify that both bins are placed properly and are not misaligned.
- (c) The lids on the bins can be stored upright by lifting them up and sliding them into the slots on either side of each bin. (Fig 2-3).

3. Complete the Installation

- (a) Close the vehicle rear cargo door.

Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <p><input type="checkbox"/> Proper placement and orientation of bins</p>	<p>Insure the bins are properly installed per step 2(a)</p>
<p><u>Vehicle Function Checks</u></p> <p><input type="checkbox"/> Cargo door operation</p>	<p>Door should open and close freely without interference from the cargo bins</p>
<p><u>Vehicle Appearance Check</u></p> <p><input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.</p>	<p>Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMNA Accessory Quality Shipping Standard).</p>