

Part Number: PT972-89200
PT972-89200-TC

Kit Contents

| Item # | Quantity Req'd. | Description |
|--------|-----------------|---------------------|
| 1 | 1 | Center Console Safe |
| 2 | 1 | Hardware Bag |
| 3 | 1 | Safe Foam Pad |

Hardware Bag Contents

| Item # | Quantity Req'd. | Description |
|--------|-----------------|---|
| 1 | 2 | 10mm x 50mm Hex Bolt |
| 2 | 2 | 18mm Spacer |
| 3 | 2 | Stainless M6 Washer |
| 4 | 1 | Customer Care Card: Lock and Maintenance Instructions |
| 5 | 1 | Customer Care Card: Lock Combination Reminder |

Additional Items Required For Installation

| Item # | Quantity Req'd. | Description |
|--------|-----------------|-------------|
| | | |

Conflicts

| |
|-------------------------------|
| MY20 and newer 4Runner models |
|-------------------------------|

Recommended Tools

| Personal & Vehicle Protection | Notes |
|-------------------------------|---------------------|
| Safety Glasses | |
| Blanket | |
| Special Tools | Notes |
| | |
| | |
| | |
| Installation Tools | Notes |
| Torque Wrench | 6.7 N-m (59 in.lbf) |
| Socket | 10mm |
| Ratchet | 3/8" drive |
| Extension | |
| Flashlight | |
| | |
| Special Chemicals | Notes |
| | |

General Applicability

| |
|-------------------------------|
| MY20 and newer 4Runner models |
|-------------------------------|

Recommended Sequence of Application

| Item # | Accessory |
|--------|---------------------|
| 1 | Center Console Safe |
| | |

*Mandatory

Vehicle Service Parts (may be required for reassembly)

| Item # | Quantity Req'd. | Description |
|--------|-----------------|-------------|
| 1 | | |
| 2 | | |
| 3 | | |
| | | |

Legend**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.**OPERATOR SAFETY:** Use caution to avoid risk of injury.**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.**REVISION MARK:** This mark highlights a change in installation with respect to previous issue.**SAFETY TORQUE:** This mark indicates that torque is related to safety.**REGULATORY MARK:** This mark indicates the component is related to regulatory compliance

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

1. Prepare the Vehicle for the Center Console Safe Installation.


- (a) Verify kit contents are present.
- (b) Console Safe lock combination should be set at 0-0-0-0.
 - (1) Rotate lock 90 degrees and open Console Safe door.

⚠ NOTE: If Console Safe door does not open, see last page of Installation Instructions for troubleshooting.


- (2) Close Console Safe door. Return to "locked" position and set lock combination back to 0-0-0-0.

- (c) Remove any contents from vehicle console box.
- (d) Remove and discard plastic divider (if applicable) (Fig. 1-1).
- (e) Remove and discard felt liner (if applicable).



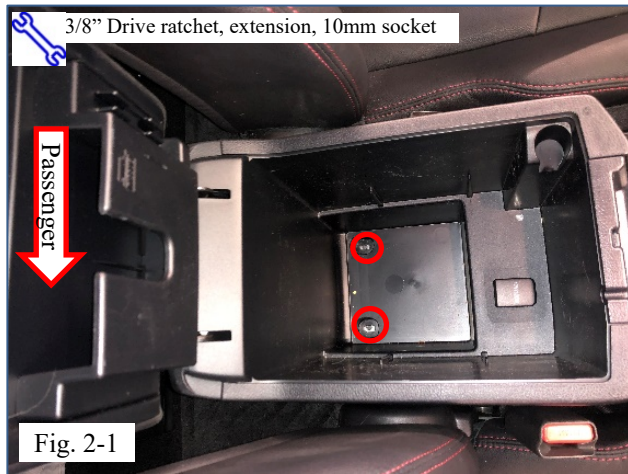


2. Install the Center Console Safe.

-  (a) Remove and discard (2) 10mm Hex Bolts located inside the console (Fig. 2-1).
- (b) Place 18mm spacer in the slot on the bottom of the vehicle center console (Fig. 2-1).
- (c) Insert the center console safe into the console. Line up the holes in the Console Safe with the slots in the Console Box and holes in the spacers. Use a flashlight if needed.
- (d) Install the metal washers onto the supplier bolts.
- (e) Insert one 50mm bolt and washer into each hole.

 **NOTE: Hand thread bolts to assure no cross threading.**

 **NOTE: Do NOT reuse the original 10mm Hex Bolts.**

-  f) Tighten each Hex Bolt to 6.7 N.m (59 in-lbs.).

Torque: 6.7 N.m (59 in.lbf)

- (g) Place safe foam pad in the bottom of the center console safe.

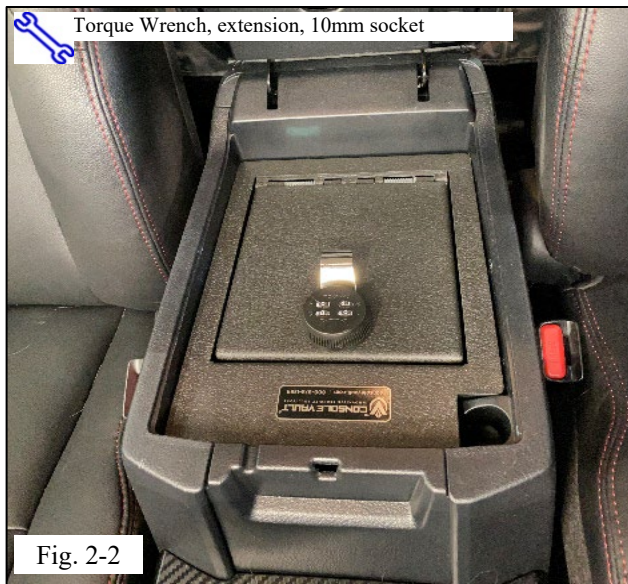


Fig. 2-2

(h) Close lid and place in locked position (Fig. 2-2).

3. Store the Applicable Documentation.

(a) Place the customer care cards in the vehicle glove box (Fig. 3-1).

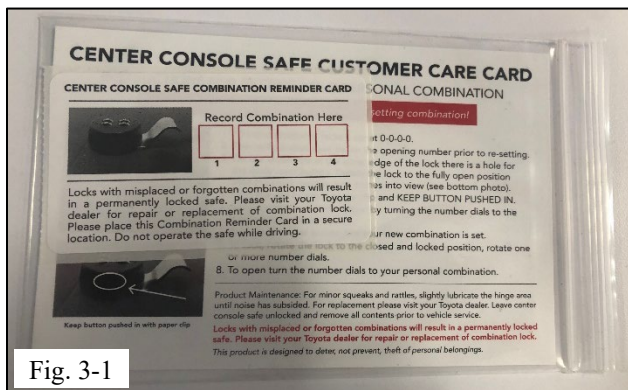


Fig. 3-1

TOYOTA 4RUNNER 2020 - CONSOLE SAFE

Checklist - these points **MUST** be checked to ensure a quality installation.

| <u>Check:</u> | <u>Look For:</u> |
|--|---|
| <u>Accessory Function Checks</u> <input type="checkbox"/> Check operation of the center console safe door. <input type="checkbox"/> Check all trim and panels <input type="checkbox"/> Verify end user hangtag is present <input type="checkbox"/> Verify customer care card is placed in the vehicle glovebox | Open and close door to check clearances. Return lock to “locked” position. Confirm all panels, trim, and Toyota accessories are present and in place. Visually inspect end user hangtag is present Visually inspect for customer care card. |
| <u>Vehicle Appearance Check</u> <input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection. | Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMNA Accessory Quality Shipping Standard.) |

TROUBLESHOOTING:

Please call **(800) 878-1369** if:

- The factory 0-0-0-0 combination does not work, or
- Customer is locked out of safe (i.e. forgot combination)