

**Part Number: PU320-08110-01**

**NOTE:**

**Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Front Driver Mat
2	1	Front Passenger Mat
3	2	Second Row Mats
4	1	Third Row Long Runner Mat
5	1	Middle Row Runner Mat
6	2	Retention Clips
7	1	Warning Card

**Hardware Bag Contents**

Item #	Quantity Reqd.	Description

**Additional Items Required For Installation**

Item #	Quantity Reqd.	Description
1		
2		
3		

**Conflicts**

Note: None

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
None	
<b>Special Tools</b>	<b>Notes</b>
None	
<b>Installation Tools</b>	<b>Notes</b>
Scissors	Used to trim middle row runner mat
<b>Special Chemicals</b>	<b>Notes</b>
None	

**General Applicability**

All Models

**Recommended Sequence of Application**


Item #	Accessory
1	
2	
3	


\*Mandatory


**Vehicle Service Parts** (may be required for reassembly)


Item #	Quantity Reqd.	Description
1		
2		
3		


**Legend**


 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.


 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle.  
The installation of this accessory must follow all instructions and use supplied hardware to ensure an approved quality installation.

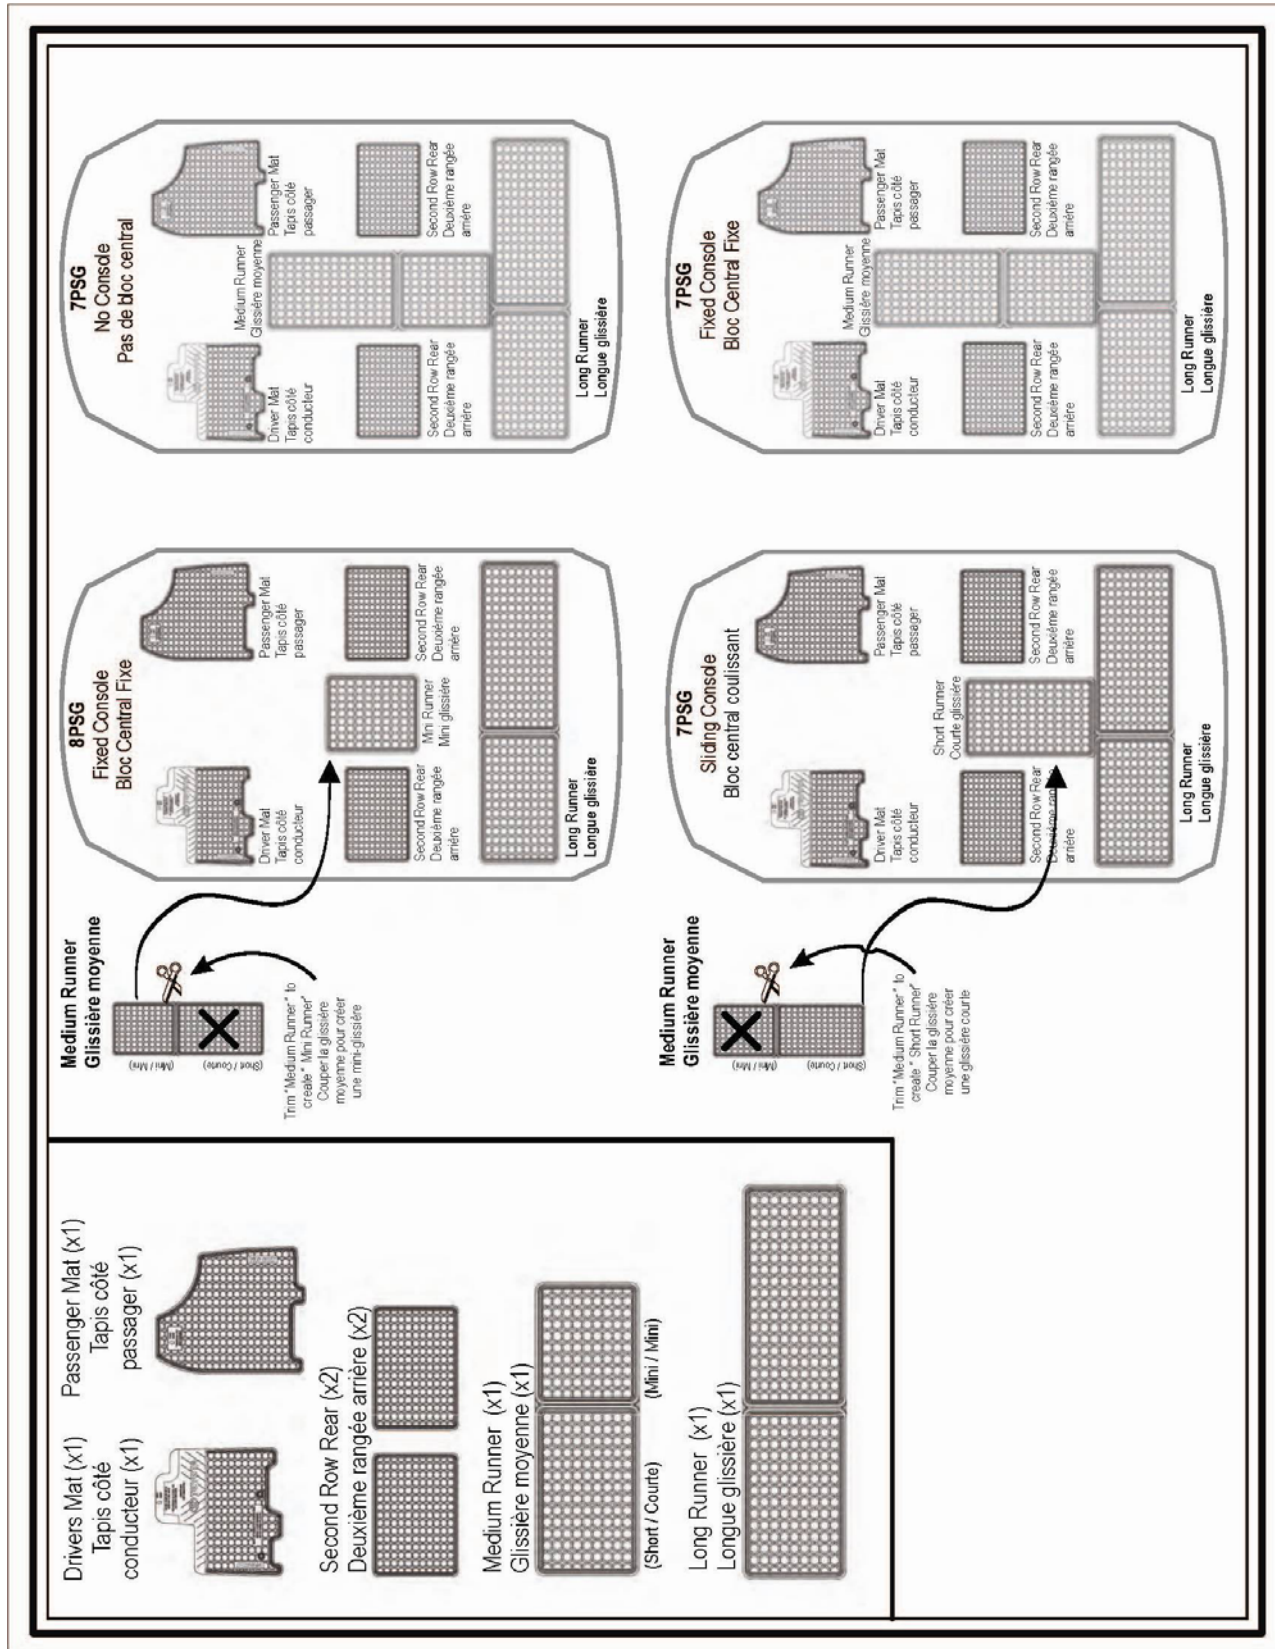

Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<u>Accessory Function Checks</u>	
<input type="checkbox"/> Removal of all existing Floor Mats and clips – Visual	<input type="checkbox"/> Rubber or carpet floor mats prior to install.
<input type="checkbox"/> Proper retention of All Weather Floor Mats	<input type="checkbox"/> Ensure retention clips are fully through retention holes. Head of clip must be visible.
<input type="checkbox"/> Alignment – Visual	<input type="checkbox"/> Mats to fit perfectly in vehicle.
<input type="checkbox"/> A-pedal Operation	<input type="checkbox"/> Ensure installed mat does not interfere with A-pedal operation

**WARNING:** Do not stack mats on top of existing mats.

**All Season Floor Mat Caution Label**



**NOTICE:** THIS TAG TO BE REMOVED BY THE VEHICLE OWNER ONLY.

To avoid interference with pedal operation:

- Do not install all weather mats on top of existing mats.
- Make sure all weather mats are secured with retention hooks (clips).