

Scion tC RS2 Front Lip

<http://www.RacingSolution.com>

The following guide serves as a tutorial on how to install your RS2 front lip.

RacingSolution.com takes no responsibility whatsoever in the event that you mess up the install or improperly mount your lip. It is always best to do a dry fit of your lip BEFORE sending it to get painted. This way the lip will already be drilled into or trimmed down (if it is needed) and you will not have to make any cuts or modifications to an already painted lip.

The tools that will be needed for this are as follows:

- Phillips screwdriver
- 3M adhesive tape (optional; can be purchased from local auto store for a few dollars)
- 4 screws (2 on each side; kit should include them. If none are included then you can get them at a local hardware store)
- Extra set of hands (can be installed by yourself...but an extra person always helps)
- Microfiber towel
- Wax and grease remover





The very first thing you will want to do is take your wax and grease remover and spray along the lower portion of the OEM bumper. Take your microfiber towel and thoroughly wipe down these areas and wipe dry.

The whole point of this step is to clean the area where the RS2 lip will rest. Get rid of any dirt, wax, grease, etc. It will also help make the 3M adhesive tape stick properly to the OEM bumper and ensure that the lip remains seated on the bumper.



Place your lip on a soft surface such as plastic, grass, etc. so as not to scratch it up. Apply 3M adhesive tape to the following areas. I personally recommend one thin strip in each area where the lip will rest just below the vents. Apply 2 thin strips, one behind each other, the entire length of the area where the lip will sit just in front of the lower bottom grille. Remove the protective backing of tape; exposing the tape itself for mounting the lip on the bumper.



This next step is where you will mount the actual lip to the bumper. You want to start by placing the center of the lip in the area of the bottom grille (allow the lip to rest on the protruding area in front of the bottom grille). Allow it to rest there with one hand holding it into place; while using your free hand to reach around the side of the lip and pull it into the wheel well. Do the same to the other side. If you have an extra set of hands, have that individual hold the center of the lip in place, while you go to each side and put the ends of the lip in the wheel well areas.






Once you pull the ends of the lip into the wheel wells, you are ready to screw them into place. If you notice a lack of space while screwing the lip into the bumper, simply turn your wheels the opposite direction.

Take your screwdriver and begin installing the screws into the lip.



Use one hand to install the screws and use your free hand to push against the lip to ensure proper alignment to the bumper (this will also help eliminate any gaps you may have). Once you have installed the screws on one side, be sure to turn your wheels the opposite direction and work on the other side. It is important that when installing the screws, that the screws go through the ends of the lip and into the ends of the bumper. This will ensure a snug fit for the lip itself as well as securing it into place.



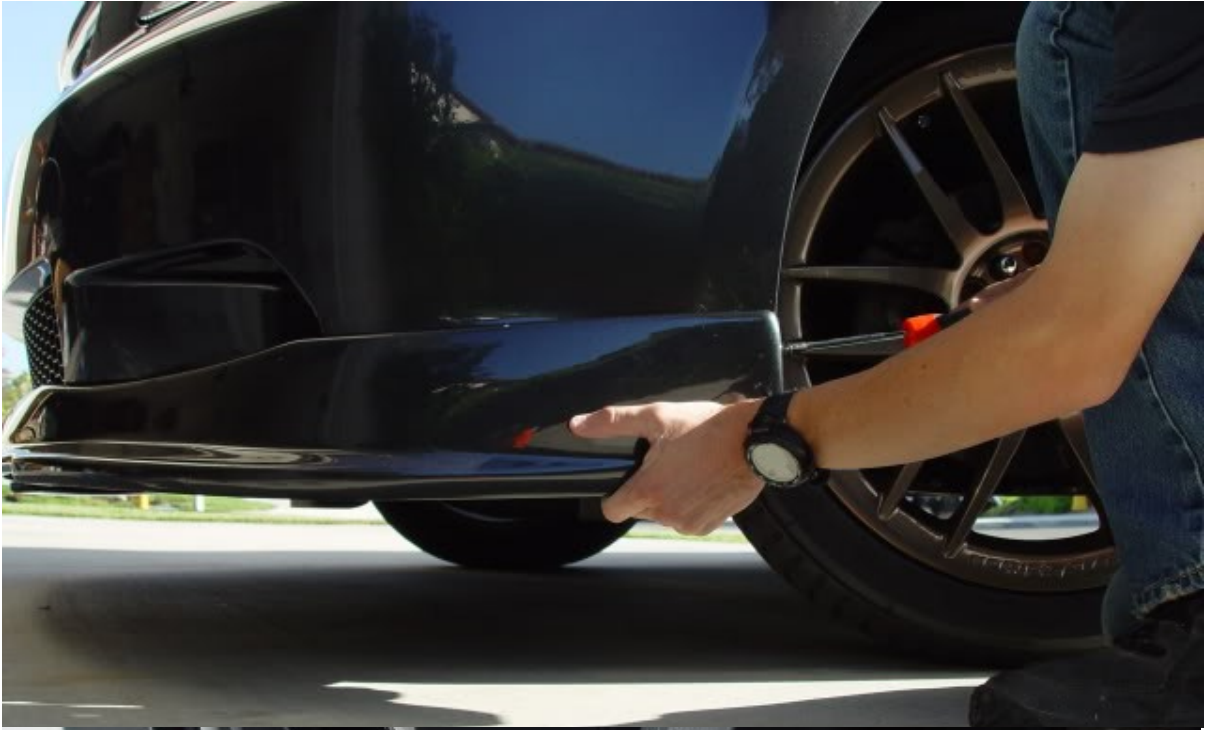



Lastly, be sure to pick up all your tools; so as not to damage your vehicle.



