Doc. 03.104.00 6/26/18



### 2019 Corolla

## LED Illumination Package

### (Interior & Exterior)

Year & Model:	2019 COROLLA
Part Number:	00016-00069
Accessory Code:	LL1000
PIO / DIO:	PIO / DIO
Business Partner:	L28

### **Conflicts**

Note: N/A

### **General Applicability**

Fits Models:				
1.	All 2019 Models			
2.				
3.				

# Additional Items Required For Installation

Item#	Description:
1. 00016-00069-99	Trunk Light

#### **Sequence of Application**

sequence of 12pp110001011					
Item#	Accessory:				
1.	N/A				

#### SPECIALNOTE: Installation Sequences

After TMS & Safety mandated preparatory steps have been taken, the installation sequence is the suggested method for completing the accessory installation. In some instances the suggested sequence is written for one associate to install & in others the sequence is given as part of a team accessory installation. Unless otherwise stated in the document, the associates may perform the installation steps in any order to make the installation as efficient as possible while maintaining consistent quality.

## Southeast Toyota Distributors, LLC Accessory Installation Instructions

#### **Recommended Tools**

Safety Items	
N/A	
Special Tools	
N/A	
<b>Installation Tools</b>	
#2 Phillips Screwdriver	Rivet Gun
Nylon Removal Tool	Tape Measure
Pliers	Torque Wrench
11/64" Drill Bit	Right Angle Drill
7/16" Drill Bit	Utility Knife
7,10&12mm Socket/Ratchet	3mm Allen Wrench
<b>Special Chemicals</b>	
50/50 Alcohol Water Mixture	VPC Approved Sealant

#### Legend



STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.

CAUTION: A process that must be carefully observed



in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

TOOLS & EQUIPMENT: Used in Figures calls out the



specific tools and equipment recommended for this process.



**REVISION MARK:** This mark highlights a change in installation with respect to previous issue.



7 <u>SAFETY TORQUE</u>: This mark indicates that torque is related to safety.

#### Table of Contents

b.) c.)	Preparation.1-5Table of Contents.2Kit/Hardware Bag Contents.3Parts for Installation.4Service & Warranty Information.5
II.	Procedures Battery Removal Process
III. IV. V.	Accessory Function Check

Corolla

### **Kit / Hardware Bag Contents:**

Item#	Quantity Reqd.	Description			
1	25	Wires Ties			
2	4	Foil Tape			
3	5	Foam Tape			
4	14	Plastic Rivets			
5	4	Red T-Taps			
6	1	Blue T-Tap			
7	4	Black T-Taps			

#### **Parts for Installation:**

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, re-checking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Item	Quantity	Description	Part Number
1.	4	Puddle Lights and Harnesses	
(a)	1	LF (4.9') Puddle Light	00016-00064-05
(b)	1	LR (7.8') Puddle Light	00016-00064-06
(c)	1	RF (10.8') Puddle Light	00016-00064-07
(d)	1	RR (13.8') Puddle Light	00016-00064-08
2.	1	Control Module	00016-00064-04
3.	1	Power Harness	00016-00064-01
4.	1	Foot-well Harness	00016-00064-02
5.	2	Foot-well Lights	00016-00064-03
6.	1	Trunk Light	00016-00064-09
7.	4	Puddle Light Mounting Brackets	00016-00069-01
8.	1	Hardware Bag	



#### **Service & Warranty Information:**

		Warranty Information		
	Part Number	Description	Warranty Time	Labor Op. Code
NA	00016-00069	LED Illumination Package (Int & Ext) KIT	NA	NA
Α	00016-00064-01	Power harness	0.3	AIP011
В	00016-00064-02	Foot well light harness	0.4	AIP021
С	00016-00064-03	Foot well LED light pod	0.2	AIP031
D	00016-00064-04	Puddle light control module	0.3	AIP041
Not Shown	00016-00064-09	Trunk LED (NOTE: if equipped)	0.2	AIP091
E	00016-00064-05	Left Front puddle light and harness	1.3	AIP051
F	00016-00064-06	Left Rear puddle light and harness	1.3	AIP061
G	00016-00064-07	Right Front puddle light and harness	1.3	AIP071
Н	00016-00064-08	Right Rear puddle light and harness	1.3	AIP081

Corolla

**Note**: Use Combo codes if replacing more than one puddle light. A for additional 0.3 per light. A- adds 0.3 for two lights, AA- adds 0.6 for three lights, AAA- adds 0.9 for three lights.

Labor times include consideration for diagnosis and Administration time

If you are a dealer located outside of the Southeast Region, please contact the SET Accessory Warranty Department at (888) 851-2722 or email <a href="mailto:Accessory.Warranty@SEToyota.com">Accessory.Warranty@SEToyota.com</a> for claim payment instructions. Image:



### **Battery Preparation**



**NOTE:** It is recommended to use Option 1 when a lead wire is not being installed. However Option 2 is to be used when a lead wire is being added to the positive side, or anytime the negative side 12mm nut is being removed, re-torque both to 67in lbs.

**NOTE:** If removal of the postive battery terminal 12mm nut is required to install a lead wire, the negative battery terminal must be disconnected first to disable the electrical system. The postive battery or terminal should never be disconnected unless the negative battery terminal is first removed & waiting 90 seconds for the SRS system to power down.

**Option 2:** 

**Option 1:** If the battery clamp nut cannnot be accessed to set torque to the recommened specification without removing additional panels & /or other components. You may change (reverse the direction ) the negative battery clamp bolt & nut. Battery terminal must have torque set to factory specification . CAUTION: Do not touch the positive terminal. Re-torque to 48in lbs.

> Removing the 12mm nut from the positive or negative terminal junction. When re-tightening the torque specification is 67 in lbs.



Figure 1



Figure 2



Figure 3



Figure 4

### 4

#### **VEHICLE PREPERATION:**

- 1. Measure and drill locations for the rear light pod brackets using 11/64" drill bit. These should be approximately 7 ½" forward of the forward most rear jack point. See Figure 1.
- 2. Measure and drill locations for the front light pod brackets using 11/64" drill bit. They should be centered approximately 12" back from the rear most front jack point See Figure 2.
- 3. Install all 4 mounting brackets using included bracket hardware. Brackets should be in-board of pinch weld, with bolts being fed through the pinch weld then the bracket. See Figure 3.

NOTE: Apply VPC sealant to all pinch weld holes before mounting brackets.

4. Mount appropriate light in corresponding bracket, securing in place with plastic rivets. See Figure 3.

NOTE: Arrow on puddle light lens must face out, away from bracket tabs.

- 5. If vehicle is fitted with undercarriage skid plates, remove both sides using 10mm and 12mm sockets.
- 6. Remove Drain plugs from both left and right front floor pans. See Figure 4.

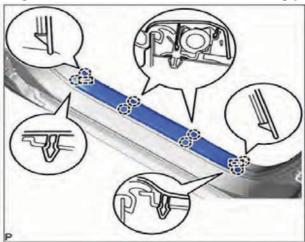


Figure 5

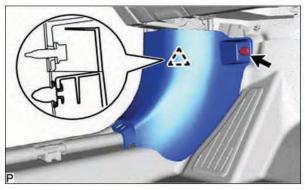


Figure 6

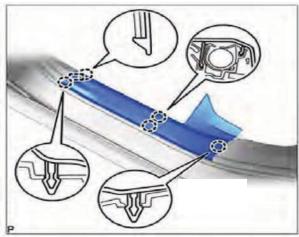


Figure 7

## Remove Door Scuff Plates and Cowl Side Trim

- 7. Disengage the 8 claws and 2 guides to remove the front door scuff plate, LH. See Figure 5.
- 8. Remove the clip. Disengage the clip and remove the cowl side trim sub-assembly, LH. See Figure 6.
- 9. Disengage the 5 claws and guide to remove the rear door scuff plate, LH. See Figure 7.
- 10. Repeat for RH side.

#### Corolla

### **LED Illumination Package**



Figure 8



Figure 9



Figure 10a



Figure 10b

- 11. Using a sharp blade, cut an 'X' in the middle of each drain plug, in order to route the front harnesses through and into the vehicle.
- 12. Lift front carpet to gain access to the drain holes and route front puddle light harnesses up and into the vehicle.
- 13. Re-install drain plugs, with the front harnesses threaded through the plugs, foam tape in place. See Figure 8.
- 14. Lift rear carpet and remove drain plugs found near the base of the seat belts. See Figure 9.
- 15. Cut rear plugs similar to front ones. Thread rear puddle light harnesses through and reinstall plugs.
- 16. Seal harnesses to front & rear drain plugs using VPC approved sealant. Make sure to work sealant completely around harnesses for a water tight seal. See Figure 10a.
- 17. Route rear harnesses toward the threshold and tape to threshold using foam tape. Wire tie to factory harness as shown. See Figure 10b.



Figure 11

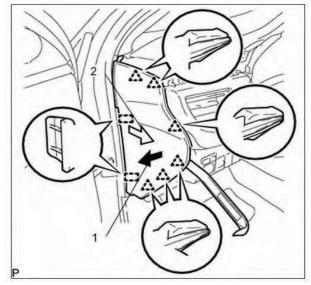


Figure 12

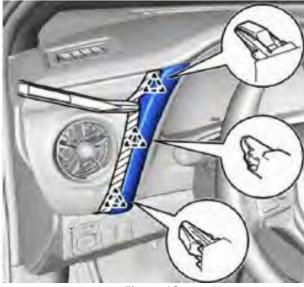


Figure 13

- 18. Wire tie harnesses forward along the factory harness and route along the upper side of the floor silencer pad on the passenger side. See Figure 11.
- 19. Route driver side harnesses in the same fashion to the driver side kick panel.
- 20. Disconnect the front door opening trim weather strip LH.
- 21. Remove Instrument Side Panel LH See Figure 12.
  - (a) Using a plastic trim tool disengage the 6 clips in the direction indicated by the arrow (1) as shown in the illustration.
  - (b) Pull the instrument side panel LH in the direction indicated by the arrow (2) as shown in the illustration to disengage the 2 guides and remove the instrument side panel LH.



- 22. Remove The #1 Meter Cluster. See Figure 13.
  - (a) Apply protective tape to the area shown in the illustration and disengage 3 clips.

#### HINT:

Tape the screwdriver tip before use.

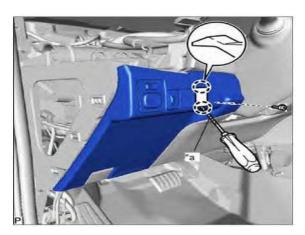


Figure 14

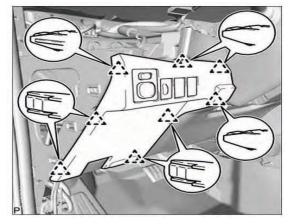


Figure 15

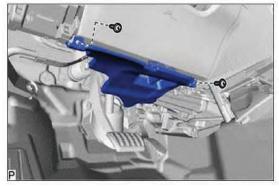


Figure 16

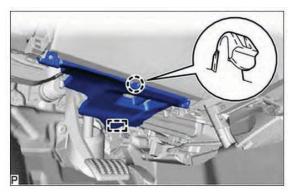


Figure 17

(b) Remove blank knockout and then the screw. See Figure 14.

(c) Disengage the 8 clips. See Figure 15.

(d) Disconnect each connector and remove fuse box opening cover.



- 23. Remove Lower No. 1 Instrument Panel Under Cover Sub-assembly
  - (a) Remove 2 screws. See Figure 16.

(b) Disengage the claw and guide, and remove the No.1 instrument panel under cover sub-assembly. See Figure 17.

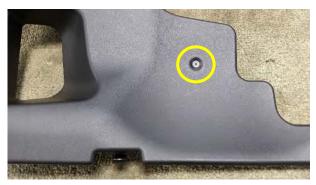


Figure 18

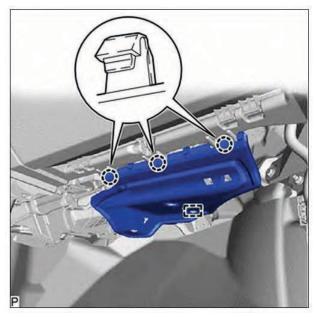


Figure 19



Figure 20

- 24. Drill a 5/8" hole in the injection release point shown in Figure 18.
- 25. Align foot-well light with connector in hole and flat side facing seats. Using a 5/32" drill bit, drill mounting holes. Attach using included rivets.
- 26. Remove lower No. 2 Instrument panel under cover sub-assembly.
  - (a) Disengage the 3 claws and remove the No. 2 instrument panel under cover sub-assembly. See Figure 19.
- 27. Mark location for passenger side light 4 ½" from the back edge of the No. 2 panel and 1" from the rib, as shown in Figure 20.
- 28. Drill a 5/8" hole where the connector will fit and align with flat side of light facing the seat.
- 29. Using a 5/32" drill bit, drill mounting holes. Attach using included rivets.

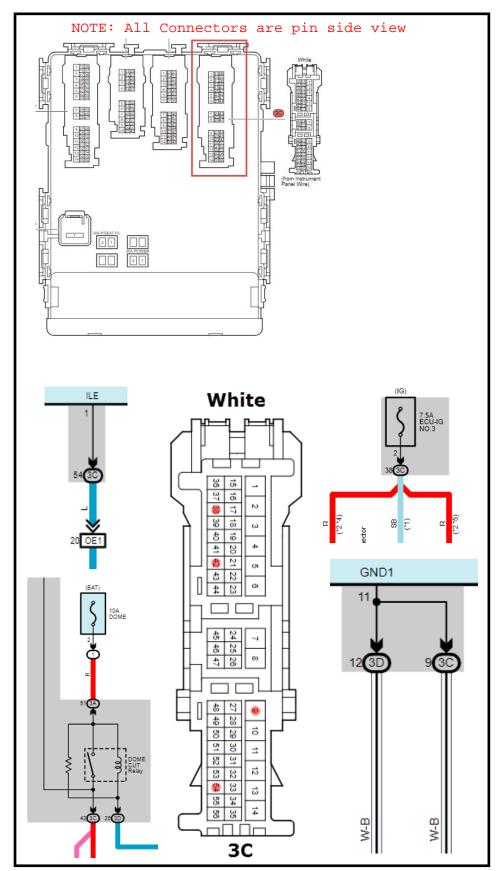


Figure 21

- 30. Using a Black T-tap, connect the **Red** wire from the puddle light power harness to the **Pink** wire in **Pin 42** of the 3C connector at the JB. See Figure 21.
- 31. Using a Black T-tap, connect the **Black** wire of the puddle light power harness to the **Blue** wire in **Pin 54** of the 3C connector at the JB. See Figure 21.
- 32. Connect the **Red** wire from the foot-well harness to the red wire from the puddle light power harness. Connect the **White** wire from the foot-well harness to the white wire from the puddle light harness.
- 33. Using a Black T-tap, connect the **Yellow** wire to the Red wire in **Pin 38** of the 3C connector at the JB. See Figure 21.
- 34. Using a Blue T-tap, connect the **Black** wire to the White/Black wire in **Pin 9** of the 3C connector at the JB. See Figure 21.

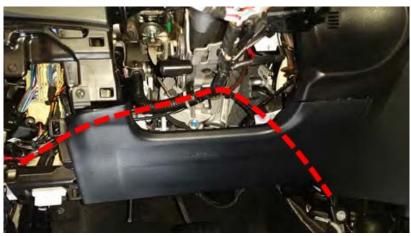


Figure 22

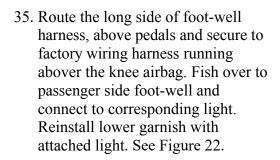




Figure 23

36. Route additional connector to driver side foot-well light. Connect and wire tie in place. Reinstall lower garnish with attached light.

37. Connect all harnesses to the control module and mount it to the factory harnesses behind Instrument Side Panel with 2 wire ties. See Figure 23.

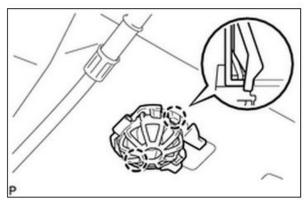


Figure 24



Figure 25

## Trunk Light Replacement Part # 00016-00064-09

- 38. REMOVE NO.1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY. See Figure 24.
  - 1) Disengage the 2 claws.
  - 2) Disconnect the connector and remove the No. 1 luggage compartment light assembly.
- 39. INSTALL LED REPLACEMENT HOUSING. See Figure 25.
  - a) Connect the connector to trunk light.
  - b) Insert tab end and click into place.

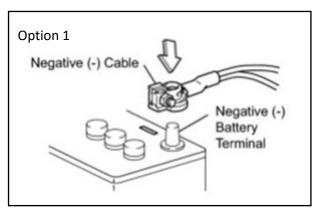


Figure 26a

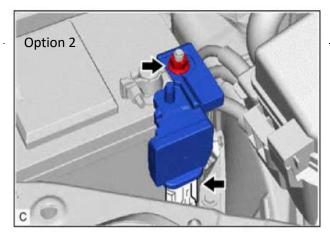


Figure 26b

40. Reconnect negative battery cable and torque.



If option1 was used: 10mm nut 48 IN/LBS. If option2 was used: 12mm nut 67 IN/LBS.

#### TESTING AND REASSEMBLY



1. TAKE SPECIAL CARE TO MAKE SURE ALL HARNESSES AND WIRING ARE PROPERLY SECURED. MAKE SURE HARNESSES ARE NOT PINCHED OR BOUND BY TRIM PIECES.





2. RECONNECT NEGATIVE BATTERY CABLE AND TORQUE TO 48 IN/LBS.

### CHECKLIST - THESE POINTS MUST BE CHECKED TO ENSURE A QUALITY INSTALLATION

ACCESSORY FUNCTION CHECK:	LOOK FOR:
Test for full light condition	Close all doors and lock vehicle, do foot-well and

Unlock vehicle, do foot-well lights come on full brightness? Do puddle lights come on?

Test for low light condition

Test for low light condition

Start vehicle, do puddle lights go out? Do the foot-well lights come on in Dim mode?

puddle lights go out?

VEHICLE FUNCTION CHECK:

✓ Ignition Verify that the vehicle will crank.

SR5 Warning Light Confirm SR5 Warning Light IIIuminates for approximately 6 seconds with the ignition

on, and then goes out.

Trunk Release

Track Control

Auto Headlight


Hood Release

Dome Light

Warranty Statement in glove box, DIO Only.

Fuel Release

Block Diagram
Corolla Lighting Package

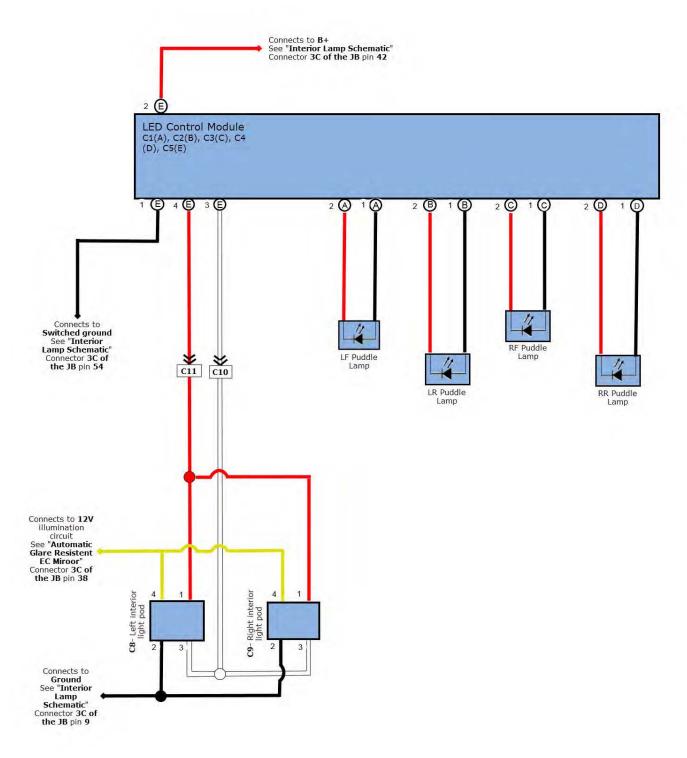

#### Corolla

### **LED Illumination Package**





BLK to LF ext light	Off	12V	C1 -	Off	12V	Red to LF ext light
	On	8.6V		On	8.6V	
BLK to LR ext light	Off	7.6V	C2	Off	7.6V	Red to LR ext light
	On	5.6V	C2	On	5.6V	
BLK to RF ext light	Off	12V	C2	Off	12V	Red to RF ext light
	On	8.6V	C3	On	8.6V	
BLK to RR ext light	Off	7.6V	CA	Off	7.6V	Red to RR ext light
	On	5.6V	C4	On	5.6V	

C1, C2, C3, and C4 are all individual LEDs.

Can be tested with Diode mode on DVOM.

**Red** to **Red**, **Black** to **Black** = 2.5V

**Red** to **Black**, **Black** to **Red** = O.L.



#### **Connector C5**

BLK to swt ground	Int Imp OFF	12V		Int Imp OFF	12V	WHT to Int Lamp
	Int Imp ON	0V	C5	Int Imp ON	0V	
RED to B+	B+	12V		B+	12V	RED to Int Lamp
	Voltage su modu			From mod Lig		

#### **Connector C6**



Pin	Wire Color	Test Reference	Proper Operation
1		Pin 1 to Ground	Approximately 0 VDC when Dome Light is ON
			+12 VDC when Dome Light is OFF

#### **Connector C7**



Pin	Wire Color	Test Reference	Proper Operation
1			+12 VDC

#### Connector C8 & C9



Pin	Wire Color	Test Reference	Proper Operation
1	Red	Pin 1 to Ground	+12 VDC
2	Black	Pin 2 to Ground	Approximately 0 VDC
3	White	Pin 3 to Ground	Approximately 0 VDC when Dome Light is ON
			+12 VDC when Dome Light is OFF
4	Yellow	Pin 4 to Ground	Approximately 0 VDC ignition switch OFF
			+12 VDC when ignition ON

#### **Connector C10**



Pin	Wire Color	Test Reference	Proper Operation
1	White	Pin 1 to Ground	Approximately 0 VDC when Dome Light is ON
			+12 VDC when Dome Light is OFF

#### **Connector C11**

Pin	Wire Color	Test Reference	Proper Operation
1	Red	Pin 1 to Ground	+12 VDC

#### **Connector C12**



Pin	Wire Color	Test Reference	Proper Operation
1	Yellow	Pin 1 to Ground	Approximately 0 VDC ignition switch OFF
			+12 VDC when ignition ON

#### **Connector C13**



Pin	Wire Color	Test Reference	Proper Operation
1	Black	Pin 1 to Ground	Approximately 0 VDC

#### LIMITED WARRANTY – SOUTHEAST TOYOTA

**SOUTHEAST TOYOTA DISTRIBUTORS, LLC** ("we," "our" and "us") provides the following limited warranty on our accessories, excluding tires, ("Accessories" or "Accessory") installed on a Toyota. This limited warranty is not provided by and does not bind or provide benefit to the vehicle dealer, the manufacturer, or Toyota Motor Sales, U.S.A., Inc. This limited warranty does not apply to tires; please consult the tire manufacturer and/or its materials accompanying the vehicle for any warranty terms concerning tires. This limited warranty also does not apply to ToyoGuard Exterior Paint Sealant and ToyoGuard Interior Protector; please consult the ToyoGuard Limited Warranty Certificate for the warranty terms concerning those products.

#### SCOPE OF LIMITED WARRANTY:

#### A. Protection:

- i. Accessories Installed by Southeast Toyota Distributors, LLC on a new Toyota vehicle. We warrant that, for a period of 36 months or 36,000 miles, whichever occurs first, we will repair or replace (includes labor), free of charge, any defect in such an Accessory due to faulty material or workmanship, or, at our option, provide a full refund of the purchase price of the Accessory. The warranty period begins on the vehicle's In-Service Date, which is the first date the new vehicle is either delivered to an ultimate purchaser, leased, or used as a company car or demonstrator. Accessories installed by Southeast Toyota Distributors, LLC are identified on the vehicle's window sticker (Monroney Label).
- ii. Accessories Installed by a Toyota Dealer on a Toyota vehicle. We warrant that, for 12 months, regardless of mileage, from the date such an Accessory was installed on the vehicle or the remainder of the Toyota new vehicle warranty, whichever is longer, we will repair or replace (includes labor), free of charge, any defect in the Accessory due to faulty material or workmanship, or, at our option, provide a full refund of the purchase price of the Accessory. For a new vehicle, the warranty period begins on the vehicle's In-Service Date, which is the first date the new vehicle is either delivered to an ultimate purchaser, leased, or used as a company car or demonstrator.
- iii. Accessories purchased from a Toyota Dealer but not installed by the Toyota Dealer. We warrant that, for a period of 12 months, regardless of mileage, from the date the accessory was purchased, we will repair or replace (does not include labor), free of charge, any defect in the Accessory due to faulty material or workmanship, or, at our option, provide a full refund of the purchase price of the Accessory.
- B. Limitation of Warranty. This limited warranty does not apply to, and we will not repair, replace, or reimburse you for: (1) wheel balancing and wheel alignments, except for one wheel balancing or alignment during the first 12 months or 12,000 miles, whichever occurs first, from the vehicle's In-Service Date, as defined above, (2) abrasions or dents, whatever their cause, and any failure or damage resulting directly or indirectly from accidents, collisions, impacts from foreign objects, fire, theft, larceny, explosion, malicious mischief, vandalism, civil commotion, riots, war, or any other similar causes, (3) any failure or damage resulting directly or indirectly from lightning, windstorms, hail, water, floods, subfreezing temperatures, airborne chemicals, tree sap, dust, salt, and any other environmental conditions or similar causes, (4) any failure or damage caused by: (a) a failure of any part, other than the Accessory, (b) any misuse, abuse, improper towing, negligence or lack of maintenance of the vehicle or Accessory, (c) the alteration, modification or repair of the Accessory by anyone other than persons expressly authorized by us to perform such alteration, modification or repair, or (d) the use of the vehicle for commercial purposes, competitive driving or racing, (5) any failure or damage, if the Accessory has not been installed according to instructions, (6) any failure or damage occurring outside of Canada, the United States of America, its territories or possessions, (7) except to the extent required by the state whose laws govern this limited warranty, any consequential, secondary, or unreasonable costs that may be suffered as a result of the need to repair or replace the Accessory, including without limitation any loss of use of the vehicle, road service, towing, storage charges, inconvenience, loss of wages and/or income, additional expense incurred, loss of transportation, rental car expense, or any derivative damage to persons or things other than the Accessory, including other parts of the
- C. Exclusive Remedy. If there is a valid claim under this limited warranty for a defect due to faulty material or workmanship in the Accessory, we will, at our option, either: (i) repair, (ii) replace or (iii) provide a full refund of the purchase price of the Accessory. We have no other obligations under this limited warranty. Refunds will be made to the vehicle owner. If the vehicle is leased, the refund will be made to the leasing company.

HOW TO MAKE A CLAIM: In the event of a warranty claim, please contact the nearest Toyota dealer to arrange for repairs. The dealership must receive our prior authorization before making repairs covered by this limited warranty. The dealer will contact Southeast Toyota Distributors, LLC at 1-888-851-2722, select option #5 (Warranty Department), then option #4 (Repairs), for instructions on processing a warranty claim, if they are not already familiar with the process. If you have any questions or concerns regarding repairs covered by this limited warranty, please contact our Customer Assistance Hotline at 1-800-301-6859.

OUR DISPUTE RESOLUTION PROGRAM: Your satisfaction is our highest priority. In keeping with that focus, in the event that an issue arises related to this Limited Warranty, we invite you to call our Customer Assistance Hotline at 1-800-301-6859 to discuss it. In most cases, we expect that a satisfactory resolution of your issue can be reached through engagement with that Department. If our Customer Loyalty Department is unable to resolve your issue to your satisfaction, we offer a dispute resolution program administered by the National Center for Dispute Settlement (NCDS) ("the Program"). The purpose of the Program is to resolve disputes in an informal setting before an impartial arbitrator. The Program is free of charge to you (although you must bear the cost of any expert witness or attorney you elect to employ). You are required to complete the Program before exercising rights or seeking remedies under the federal Magnuson-Moss Warranty Act, 15 U.S.C. § 2301 et seq. ("the Act"). If you choose to seek remedies that are not created by the Act, you are not required to use the Program before pursuing such remedies - although the Program is still available to you to resolve the dispute. When utilizing the Program, you will need to provide (a) the vehicle identification number of your vehicle, (b) the identity of your selling and servicing dealerships, (c) the mileage on your vehicle at relevant times, (d) the date and nature of any relevant repairs, (e) legible copies of repair orders and other relevant documents, (f) a summary of the unresolved issue and the requested action, and (g) your contact information. In most cases, the dispute resolution process under the Program will be completed within forty (40) days of your submission of your request and will consist of steps such as an initial eligibility determination, an opportunity for you and us to submit information in writing relating to your claim, an oral hearing, and a decision from the arbitrator. A decision will be binding on you only if you choose to accept it. You may submit a request to NCDS by telephone at their toll free number: (877)-276-8848 or in writing at P.O. Box 463196, Mt. Clemens, MI 48046. You may obtain additional information regarding the Program at www.ncdsusa.org. In the event that the NCDS does not exist or no longer handles disputes for us at the time that you seek to submit a request, you may contact our Customer Assistance Hotline at 1-800-301-6859 to obtain current information about our dispute resolution programs.

Rev. 12/01/16

GENERAL LIMITATION OF WARRANTY: THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES OR LIABILITIES. IN NO EVENT SHALL WE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. SOME STATES DO NOT ALLOW THE EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE INFORMATION OR EXCLUSION MAY NOT APPLY. NO EXPRESS WARRANTY OF FITNESS OR MERCHANTABILITY IS GRANTED BY THIS LIMITED WARRANTY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THOSE DESCRIBED IN THIS DOCUMENT. ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH MAY BE APPLICABLE BY OPERATION OF LAW SHALL BE LIMITED TO THE PERIOD OF THIS WRITTEN LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY. THIS LIMITED WARRANTY PROVIDES SPECIFIC LEGAL RIGHTS, AND THERE MAY BE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITH IN A PERIOD NOT EXCEEDING 12 MONTHS AFTER EXPIRATION OF THIS LIMITED WARRANTY. THE REMEDIES SPECIFIED HEREIN AND THOSE SPECIFIED BY APPLICABLE LAW ARE THE ONLY REMEDIES AVAILABLE. WE ASSUME NO OTHER OBLIGATION OR RESPONSIBILITY WITH REGARD TO THE ACCESSORY. WE NEITHER ASSUME, NOR AUTHORIZE ANYONE TO ASSUME FOR US, ANY ADDITIONAL LIABILITY IN CONNECTION HEREWITH.

**GENERAL:** This limited warranty describes the complete and exclusive rights that result from the purchase of Accessories. No oral representations or statements may be relied upon. This limited warranty may not be amended or modified, and additional rights may not be granted, unless in a written statement signed by one of our officers. This limited warranty shall be governed by the laws of the state where the vehicle is purchased, excluding laws concerning conflicts of law. We may delegate the performance of our duties and obligations and assign our rights and benefits hereunder. For inquiries regarding this limited warranty, we can be contacted directly at **Customer Assistance Hotline at 1-800-301-6859**, or by mail to: **Southeast Toyota Distributors, LLC, Attention: Customer Loyalty Department, 100 Jim Moran Boulevard, Deerfield Beach, Florida 33442.** 

Rev. 12/01/16