

TOYOTA

GENUINE ACCESSORIES


INSTALLATION INSTRUCTIONS

Carpet Floor Mats

APPLICABLE MODEL :
2011 > SIENNA


Package Contents for :

- 7-Passenger Sliding Center Console
- 7-Passenger Fixed Center Console
- 7-Passenger No Center Console

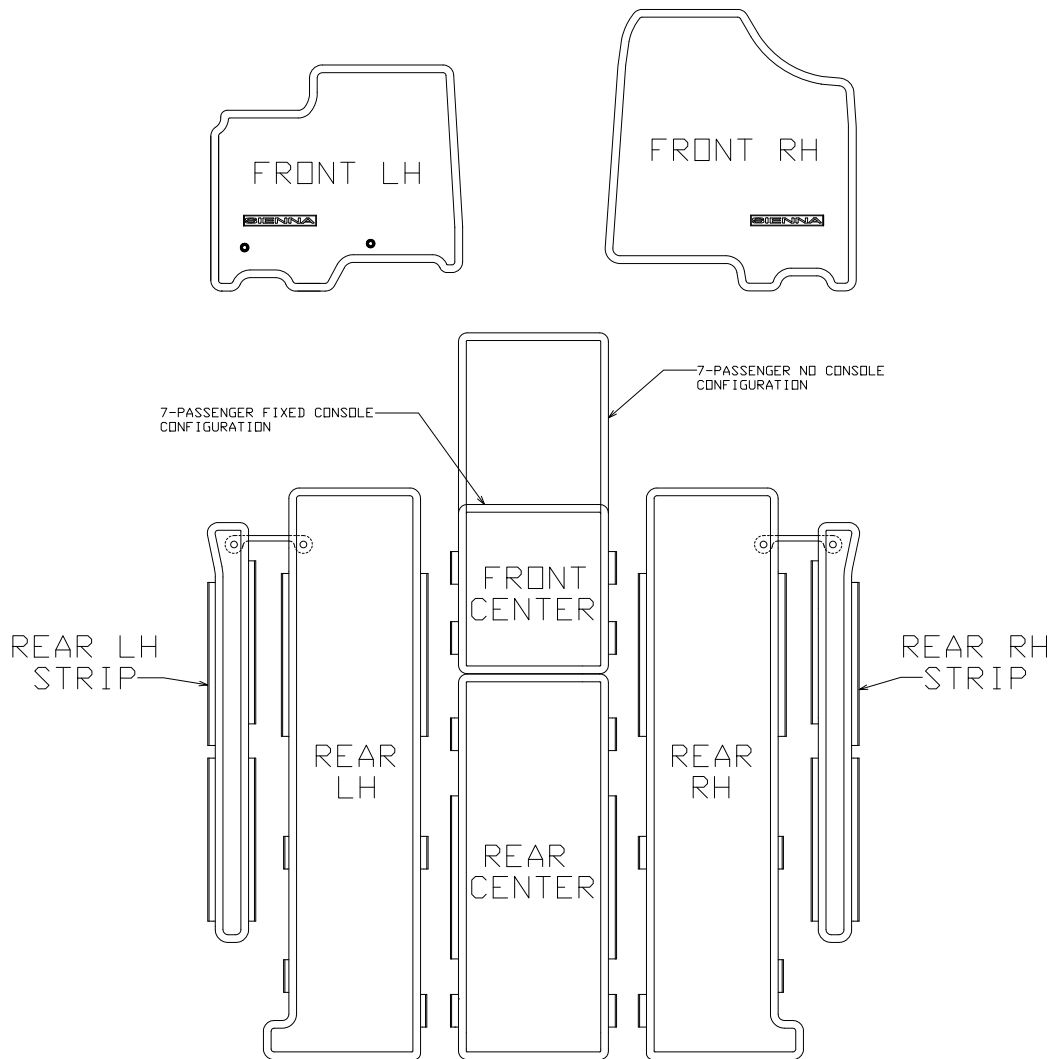

Sienna 7 Passenger Mat Layout

Package Contents for :
8-Passenger Fixed Center Console
8-Passenger No Center Console


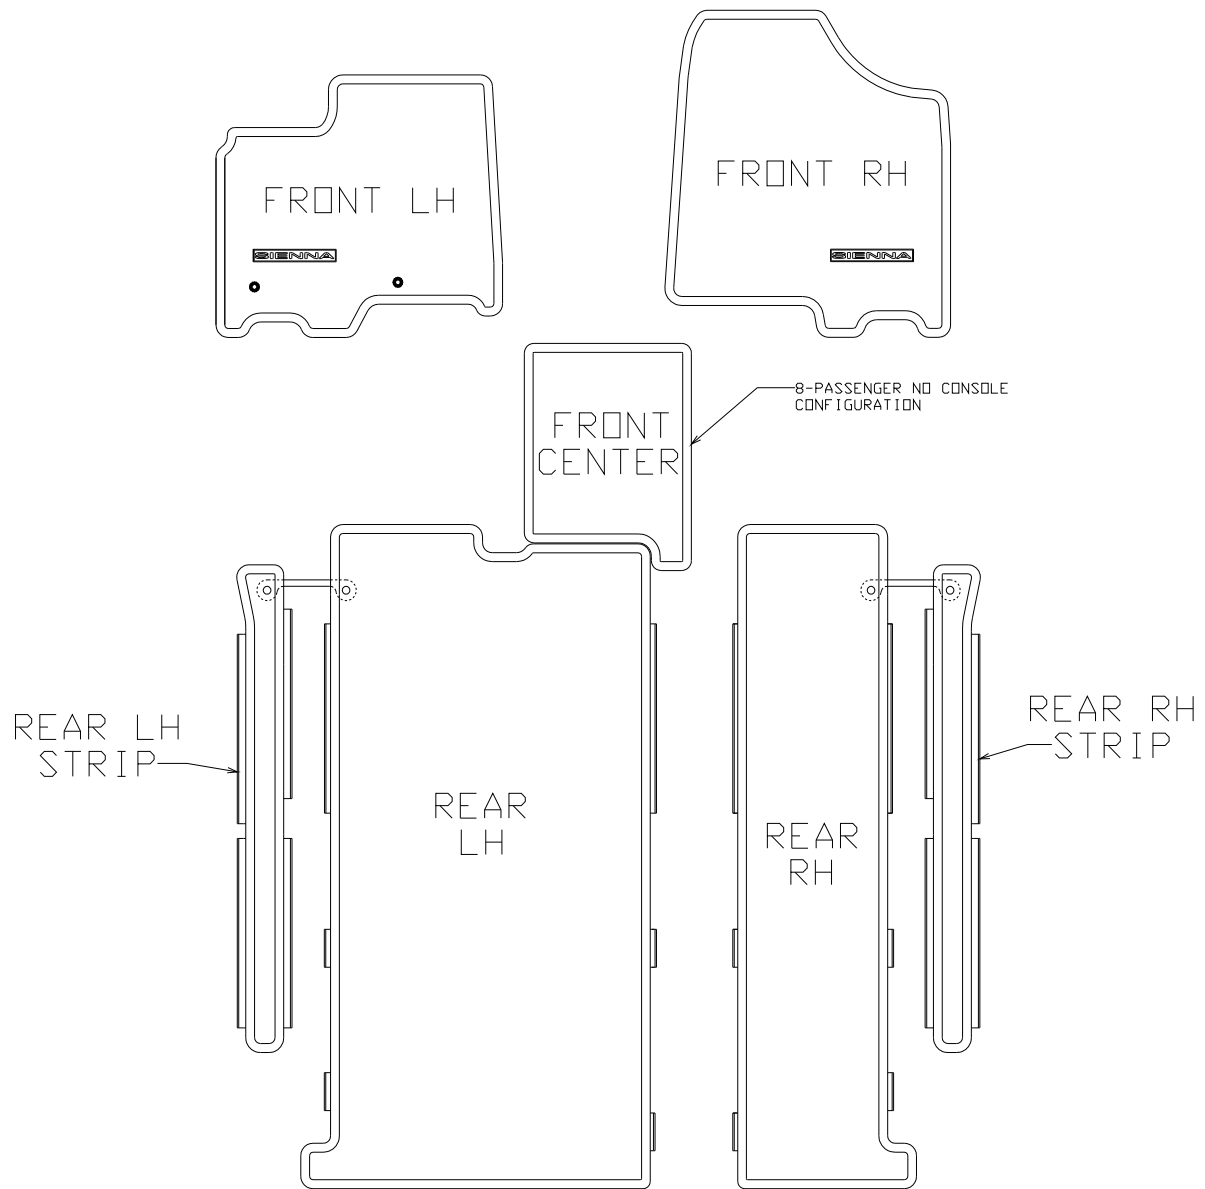


Sienna 8 Passenger Mat Layout

Package Contents for :

7-Passenger Auto Access Seat, Sliding Center Console

7-Passenger Auto Access Seat, Fixed Center Console

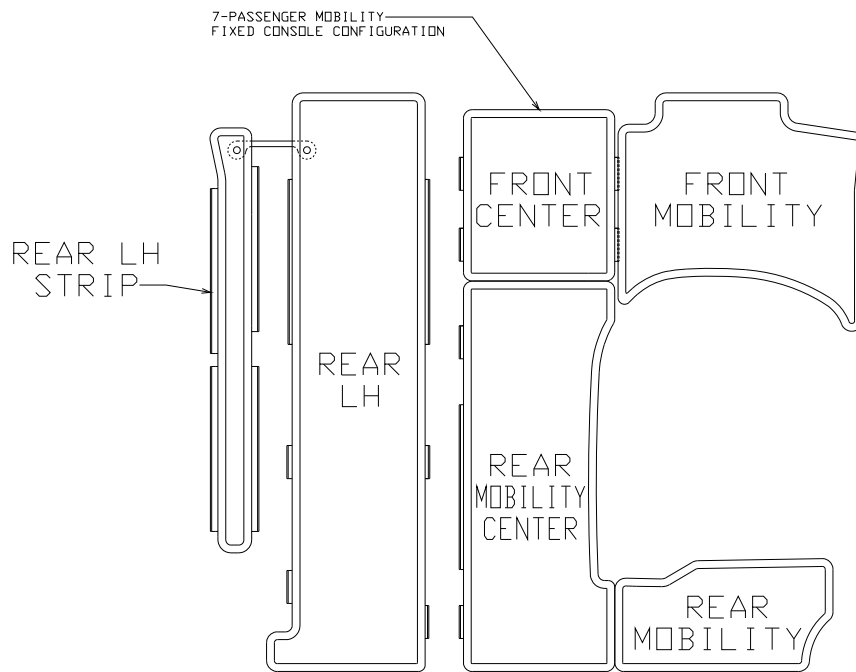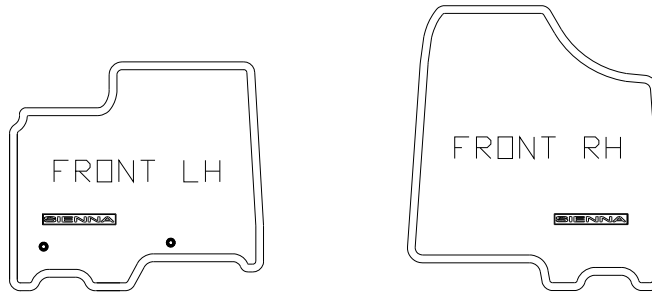

Sienna 7 Passenger Mobility Mat Layout

PREPARATION

- 1) Remove mats from the packaging bag. Arrange them as shown in the mat layout, which is applicable to your vehicle's seating and center console configurations, from the three mat layouts above. (Note: Each mat has its vehicle installation position and front facing edge indicated on the back side of the mat.)

FRONT FLOOR MATS INSTALLATION

- 2) Locate the FRONT LH mat with the small bag of the plastic grommet clips and Warning Tag attached. Carefully read all the Safety information on the Warning Tag.
- 3) Remove the small bag of grommet clips from the mat. **DO NOT REMOVE WARNING TAG FROM THE MAT.** Install all the grommet clips into the vehicle floor carpet as instructed by the grommet clip instruction sheet supplied with the clips.
- 4) Install the FRONT LH floor mat in the driver's position and secure the floor mat grommets onto the grommet clips that you installed into the vehicle floor carpet.
- 5) Locate and install the FRONT RH floor mat on the passenger side.

REAR FLOOR MATS INSTALLATION

Note: The rear floor mats are equipped with black plastic tabs that are designed to be tucked under the rear sliding seat rail trims and rear door scuff plates to help hold the mats in place.

- 6) Starting on the Left side of the vehicle, locate the narrow REAR LH STRIP mat between rear seat rail trim and door scuff plate with the wide end containing the button snap and the (pre-attached) connecting plastic strap in front.



- 7) Tuck the two outer tabs of the REAR LH STRIP mat under the door scuff plate first. Then tuck the other two inner tabs under the seat rail trim. Slide the rear seat back and forth as necessary for better access to tuck the tabs.



- 8) After mat is in correct position, rotate and tuck the connecting plastic strap with button snaps under the end cap of the seat rail trim as shown below.



- 9) Locate the long REAR LH mat that installs under the 2nd row Left sliding seat. Slide the 2nd row Left seat to the forward most position. Then position the mat behind the seat, straight in between the seat rails with the edge containing the button snap in front. (Note: The REAR LH mat for the 8 Passenger vehicle is wider than the REAR LH mat for the 7 Passenger vehicle.)
- 10) From behind the 2nd row Left seat, insert the front edge of the REAR LH mat as far as it can go under the seat slide carrier mechanism. Slide the seat rearward about half way to expose the front of the mat and pull the mat forward until the rear edge of the mat wraps around the outer rail rear end cap as shown. (Note: It may be easier to release and tilt the seat rearward from the carrier to gain access to the mat's front edge, especially for 8 Passenger vehicle.)



- 11) Tuck all six plastic tabs under the seat rail trims on both sides of the mat. Then snap the front left corner of the REAR LH mat to the connecting plastic strap tucked under the rail end cap as shown below.



- 12) Repeat the above Steps 6 - 11 for installation of the narrow REAR RH STRIP mat and the long REAR RH mat under the 2nd row Right sliding seat. (Note: This step does not apply to 7 Passenger Mobility Mats for vehicles equipped with Auto Access Seat.)
- 13) For 7 Passenger mats only, locate the REAR CENTER mat and look for the edge with "FRONT" marking on the back side. Position the mat between the center seat rails with the front edge facing forward.
- 14) Slide the 2nd row seat to the forward most position for better access. Place the mat at the rear of the center seat rails and tuck the plastic tabs under the rails as shown below.



- 15) For 7 Passenger vehicle equipped with a Sliding Center Console, skip Steps 16 & 17.
- 16) For 7 Passenger vehicle equipped with a Fixed Center Console or with No Center Console, locate the FRONT CENTER mat. (Note: The FRONT CENTER mat for the No Console is longer than the FRONT CENTER mat for the Fixed Console and extends in between the front seats.)
- 17) Slide the 2nd row seat to the rearward most position for better access. Place mat between the center seat rails directly in front of the REAR CENTER mat and tuck the plastic tabs under the rails as shown below.



Fixed Console



No Console

18) For 8 Passenger vehicle equipped with a Fixed Center Console, skip Step 19.



19) For 8 Passenger vehicle with No Center Console, locate the FRONT CENTER mat. Then place the mat in between the front seats directly in front of the REAR LH mat's front right corner.



20) For 7 Passenger Mobility vehicle equipped with Auto Access Seat, locate the REAR MOBILITY CENTER mat. Position the mat between the (Left) center seat rail and the bottom garnish of the Auto Access Seat and tuck the plastic tabs under the center seat rail. (Note: The plastic tabs are only on the Left side of the mat.)



21) For 7 Passenger Mobility vehicle equipped with Auto Access Seat, locate and install the FRONT MOBILITY mat in front of the Auto Access Seat and the REAR MOBILITY mat behind the Auto Access Seat as shown.



22) For 7 Passenger Mobility vehicle equipped with Auto Access Seat and a Fixed Center Console, locate the FRONT CENTER mat. Place mat between the center seat rails directly in front of the REAR MOBILITY CENTER mat and tuck the plastic tabs under the rails as shown below. (Note: This step does not apply to vehicle with Sliding Center Console.)



